

Safety Laser Scanner

SZ-V Series User's Manual



| | |
|----|--------------------------------------|
| 1 | Before Use |
| 2 | Part Names and Functions |
| 3 | Installation on a Machine |
| 4 | Wiring |
| 5 | Basic Functions |
| 6 | Advanced Functions |
| 7 | Checking Operation Status |
| 8 | How to Configure (SZ-V Configurator) |
| 9 | Operating the SZ-V |
| 10 | Specifications |
| 11 | Troubleshooting |
| 12 | Inspection and Maintenance |

Introduction

This user's manual describes handling, operation, and precautionary information for the SZ-V Series Safety Laser Scanner ("SZ-V"). Read this user's manual thoroughly before operating the SZ-V in order to understand the device features.

Always keep this manual in a safe place for future reference.

Also, ensure that the end user of this product receives this user's manual.




In this manual, "SZ-V04 type" is used to represent a comprehensive SZ-V unit that uses SZ-VU04 as the Display unit; "SZ-V32 type" is used to represent a comprehensive SZ-V unit that uses SZ-VU32 as the Display unit; "SZ-V32N type" is used to represent a comprehensive SZ-V unit that uses SZ-VU32N as the Display unit; and "SZ-V32NC type" is used to represent a comprehensive SZ-V unit that uses SZ-VU32NC as the display unit.


"Model" (page 126)

This manual is the original instruction manual.


Symbols


The following symbols alert you to important messages. Be sure to read these messages carefully.

| | |
|---|---|
|  | Indicates a hazardous situation which, if not avoided, will result in death or serious injury. |
|  | Indicates a hazardous situation which, if not avoided, could result in death or serious injury. |
|  | Indicates a situation which, if not avoided, could result in product damage as well as property damage. |

 Indicates cautions and limitations that must be followed during operation.

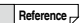

 Indicates additional information on proper operation.

 Indicates tips for better understanding or useful information.

 Indicates the reference pages in this manual or the reference pages in separate manuals.


Safety Information for SZ-V Series

General precautions


| | |
|---|--|
|  | <ul style="list-style-type: none">• SZ-V is an active opto-electronic protective device responsive to diffuse reflection (AOPDDR). It is a device, whose sensing function is performed by opto-electronic emitting and receiving elements, that detects the diffuse reflection of optical radiations generated within the device by an object present in a protection zone specified in two dimensions.• You must verify that the SZ-V is operating correctly in terms of functionality and performance before the start of machine and the operation of the SZ-V.• KEYENCE does not guarantee the function or performance of the SZ-V if it is used in a manner that differs from the SZ-V specifications contained in this user's manual or if the SZ-V is modified by the customer.• When using the SZ-V to protect machine operators against a hazard or hazardous zone or when using the SZ-V as a safety component for any purpose, always follow the applicable requirements of the laws, rules, regulations and standards in the country or region where the SZ-V is used. For such regulations, you should directly contact the regulatory agency responsible for occupational safety and health in your country or region.• Depending on the type of machine on which the SZ-V is to be installed, there may be special safety regulations related to the use, installation, maintenance, and operation of the safety component. In such a case, you must fulfill such safety regulations. The responsible personnel must install the SZ-V in strict compliance with such safety regulations.• The responsible personnel must do the training to the assigned personnel for the correct use, installation, maintenance, and operation of the SZ-V.• "Machine operators" refers to personnel who have received appropriate training from the responsible personnel and are qualified to operate the machine correctly.• "Maintenance personnel" refers to personnel who have received appropriate training from the responsible personnel, the responsible personnel can send approved settings to the SZ-V, and are qualified to operate the machine correctly.• Maintenance personnel and machine operators must have specialized training for the SZ-V, and they must understand and fulfill the safety regulations in the country or region in which they are using the SZ.• If the SZ-V fails to operate, maintenance personnel and machine operators must immediately stop the use of the machine and the SZ-V and report this fact to the responsible personnel.• The SZ-V is designed with the assumption that it would be correctly installed in accordance with the installation procedures described in this user's manual and correctly operated according to the instructions in this user's manual. You must perform an appropriate installation of the SZ-V after performing a sufficient risk assessment for the target machine.• Be sure to absolutely confirm that there is nobody in the hazardous zone, before you remove the SZ-V from the machine for replacement or disposal. |
| | <p> Important</p> <ul style="list-style-type: none">• When disposing the SZ-V, always follow the applicable requirements of the laws, rules, regulations and standards in the country or region where the SZ-V is used.• The SZ-V should be processed as an industrial waste product when being disposed. |

Precautions on use


Operators

| | |
|---|---|
|  | <ul style="list-style-type: none">• In order to operate the SZ-V correctly, the responsible personnel, maintenance personnel and machine operators must fulfill all of the procedures described in this user's manual.• No person other than the responsible personnel, maintenance personnel and machine operators should be allowed to install or test the SZ-V.• When performing electrical wiring, always fulfill the electrical standards and regulations for the country or region in which the SZ-V is used. |
|---|---|

Environment of use


| | |
|---|---|
|  | <ul style="list-style-type: none">• Do not use the SZ-V in an environment (temperature, humidity, interfering light, etc.) that does not conform to the specifications contained in this user's manual.• Do not use a device that emits strong electromagnetic waves near the SZ-V.• The SZ-V is not designed to be explosion-proof. Never use it in the presence of flammable or explosive gases or elements.• Do not use the SZ-V in the presence of substances, such as heavy smoke, particulate matter, or corrosive chemical agents, that may induce deterioration in product quality.• Install the SZ-V in such a way so that no direct or indirect light from inverter-type fluorescent lights (rapid-start type lights, high-frequency operation type lights, etc.) enters the optical window.• Be sure to absolutely confirm that there is nobody in the hazardous zone, before the interlock is released (i.e. the machine system restarts) by the interlock reset mechanism. Failure to follow this warning may result in a significant harm to the machine operators, including serious injury or death.• Be sure to confirm that there is nobody in the hazardous zone, before the override is activated. Failure to follow this warning may result in a significant harm to the machine operators, including serious injury or death. |
|---|---|


Target machine

| | |
|---|---|
|  | <ul style="list-style-type: none">• The SZ-V has not undergone the model certification examination in accordance with Article 44-2 of the Japanese Industrial Safety and Health Law. The SZ-V, therefore, cannot be used in Japan as a "Safety Device for Press and Shearing machines" as established in Article 42 of that law.• The machine on which the SZ-V is to be installed must be susceptible to an emergency stop at all operating points during its operation cycle. Do not use the SZ-V for machines with irregular stop times.• The SZ-V cannot be used as a PSDI because it does not fulfill the requirements of OSHA 1910.217(h). Refer to OSHA 1910.217 for the PSDI mode.• Do not use the SZ-V to control (stop forward motion, etc.) trains, cars and other transportation vehicles, aircraft, equipment for use in space, medical devices, or nuclear power generation systems.• The SZ-V is designed to protect the people or objects approaching into the specified protection zone against a machine's hazard or hazardous zone. It cannot provide a protection against objects or materials that are expelled from the machine's hazard or hazardous zone, so you must establish additional safety measures such as installing safeguards when there is the possibility of such projectiles. |
|---|---|

| | |
|---|---|
| <div data-bbox="140 1111 217 1133" data-label="Image"> </div> | <ul style="list-style-type: none"> • SZ-V must be installed in such a way that the screws do not loosen due to vibration and/or shock. The screw loosen may cause the displacement of detection plane and SZ-V cannot make a protection as intended. Failure to follow this warning may result in a significant harm to the machine operators, including serious injury or death. • The installation of the SZ-V must ensure the required safety distance in compliance with the requirements of laws, rules, regulations and standards in the country or region in which the SZ-V is installed. • When changing the minimum detectable object size and response time for SZ-V, the safety distance must be recalculated, and the SZ-V must be reinstalled based on the result of recalculation to keep the required safety distance. • The SZ-V must be installed so that the machine operator is able to go into or approach the hazardous zone or hazards only by passing through the protection zone of the SZ-V. Strictly avoid installation that allows the machine operator or a part of the machine operator's body to go into or approach the hazardous zone or hazards without passing through the protection zone of the SZ-V or to remain in a position between the protection zone of the SZ-V and the hazardous zone or hazard. • You must always perform the pre-check tests after installing the SZ-V in accordance with the pre-check test procedures, such as the item specified in this user's manual, in order to verify that the test pieces can be detected in all of the protection zones. • The interlock reset mechanisms (such as switches) must be installed so that the whole hazardous zone can be checked by the responsible personnel and that operations of the interlock reset mechanisms are not possible within the hazardous zone. • Reference point monitoring function must be applied when the SZ-V is used for the access protection specified in IEC61496-3: 2008 Annex A.12 and A.13 (the application where the angle of the approach exceeds $\pm 30^\circ$ to the detection plane). • The muting is a function to allow a temporary automatic suspension of the safety function while the SZ-V receives a signal from one or more muting devices (such as sensors or switches). Therefore, additional safety measures are required for the whole machine on which the SZ-V is installed in order to ensure safety while the muting is activated. • The muting devices, the installation of those devices and the procedure to activate the muting must fulfill the conditions specified in this user's manual and the requirements of the laws, rules, regulations, and standards in the country or region in which the SZ-V and those devices are used. Failure to follow this warning may result in a significant harm to the machine operators, including serious injury or death. • When you install the muting devices (such as sensors or switches), the following conditions must be fulfilled. <ol style="list-style-type: none"> (1) Muting devices must be installed so that the muting cannot be activated if the hazard is still existing during machine cycle. (2) Muting devices must be installed so that the muting cannot be activated if someone approaches into the protection zone of the SZ-V. • The muting device must be installed such that only responsible personnel have access to that device to change its installation or orientation. Special tools must be required to ensure that only responsible personnel are capable of installation, orientation or change of muting device. • Only the responsible personnel may be allowed to install or wire the devices to activate the muting function or override function. • The installation of muting lamp may be required by the laws, rules, regulations, and standards in the country or |
|---|---|


| | |
|--|--|
| | <p>region in which the SZ-V is used. It depends on the machine application or the result of your risk assessment. If it is necessary for you to provide the muting lamp, you must fulfill the requirements because you are fully responsible for installing the muting lamp.</p> <ul style="list-style-type: none"> • The override is a function to allow a temporary manual suspension of the SZ-V safety functions. Therefore, additional safety measures are required for the whole machine system on which the SZ-V is installed in order to ensure safety while the override is activated. • The override devices, the installation of those devices, and the procedures to activate the override must fulfill the conditions specified in this user's manual as well as the requirements of the laws, rules, regulations, and standards in the country or region in which the SZ-V and those devices are used. Failure to follow this warning may result in significant harm to the machine operators, including serious injury or death. • The override devices, which are used for activation of override, must be manual operating devices. When installing the devices to activate the override (override device), those devices must be installed so that the whole hazardous zone can be checked by responsible personnel and so that it is not possible for the device operators to operate those device in the hazardous zone. • The installation of the indication for override may be required by the laws, rules, regulations and standards in the country or region where the SZ-V is used. It depends on the machine application or the result of your risk assessment. If it is necessary for you to provide the indication for override, you must fulfill the requirements because you are fully responsible for installing the indication for override. • The customer is fully responsible for complying with the requirements for the muting function and override function. KEYENCE accepts NO responsibility or NO liability for any damage or any injury due to the unauthorized installation, usage, or maintenance, which are not specified in this user's manual, and/or due to noncompliance with the laws, rules, regulations and standards in the country or region in which the SZ-V is used. • Securely tighten mounting brackets and cable connectors used for the installation of the SZ-V in accordance with the torque values specified in this user's manual. • Do not put the additional housing, such as glass covers or clear polymeric covers, in front of the window of the SZ-V. This may lead to the loss of the detection capability of the SZ-V. • If the object to be detected moves perpendicular to the detection plane, SZ-V cannot detect the object moving at speed over 1.6m/s, regardless of the encoder setting. |
|--|--|

| | |
|---|---|
|  | <ul style="list-style-type: none"> • Always turn off the power to the SZ-V when performing electrical wiring. • You must fulfill the electrical standards and regulations in the country or region in which the SZ-V is being used when you perform the electrical wiring. • To avoid the risk of electric shock, do not connect any of the SZ-V inputs to DC power sources outside of the range of 24 V DC +20% or to any AC power source. • To avoid the risk of electric shock, be sure that the hazardous voltage must be isolated from all wiring of the SZ-V with the reinforced insulation or double insulation. • If the power supply for the SZ-V is the converting type, the power supply for the SZ-V must meet the conditions listed below in order to meet the requirements specified in IEC61496-1, UL61496-1, and EN61496-1. <ul style="list-style-type: none"> (a) A rated output voltage of 24 V DC (SELV circuit, Overvoltage Category II) within +20% -30%. (b) Double insulation or reinforced insulation between the primary and secondary circuits. (c) Output holding time of 20 ms or more. (d) A power supply must meet the requirements of the electrical safety and electromagnetic compatibility (EMC) regulations or standards in all countries and/or regions where the SZ-V is used. • Do not install the electric wiring of the SZ-V together with or in parallel with the high-voltage electrical or power lines. • For the wiring between SZ-V and a safety-related machine control system, both OSSD 1 and OSSD 2 must be always wired to a safety-related machine control system in order to ensure the safety. Similarly, both OSSD 3 and OSSD 4 must be always wired to a safety-related part of a machine control system if you assign a function for OSSD 3/4. If one OSSD is only wired to a safety-related machine control system, it results in a significant harm to the machine operators, including serious injury or death, due to OSSD malfunction. • If PNP/NPN selection is set as PNP, do not cause short-circuit between the OSSD and +24V. Otherwise, OSSDs keep staying at the ON-state and it causes a dangerous situation. • If PNP/NPN selection is set as PNP, be sure to connect the load between the OSSD and 0 V to avoid a dangerous situation. If the load is incorrectly connected between the OSSD and +24V, the logic of OSSD operation will be reversed, and then OSSD will turn to the ON-state when the SZ-V detects an object in the specified protection zone. This is a dangerous situation. • If PNP/NPN selection is set as NPN, do not cause short-circuit between the OSSD and 0V. Otherwise, OSSDs keep staying at the ON-state and it causes a dangerous situation. • If PNP/NPN selection is set as NPN, be sure to connect the load between the OSSD and +24V to avoid a dangerous situation. If the load is incorrectly connected between the OSSD and 0 V, the logic of OSSD operation will be reversed, and then OSSD will turn to the ON-state when the SZ-V detects an object in the specified protection zone. This is a dangerous situation. • In case of wiring, you must fulfill the requirements of Clause 9.4.3 in IEC60204-1 in order to protect against malfunction due to an OSSD earth fault. • The AUX output is not allowed to be used as a safety output for safety-related control systems. Usage of these functions as safety output could result in the serious injury or death. • The laser off input is not allowed to be connected to the safety output provided from the safety-related control system. • The connector cable must have a length less than or equal to the specification in this user's manual. Usage of connector cables longer than the specified length may cause the improper operation of safety functions and may cause a dangerous situation. |
|---|---|

| | |
|---|---|
|  | <ul style="list-style-type: none"> • You must always perform the pre-check test in accordance with the pre-check test procedures, after maintenance, adjustment or alignment of the target machine or the SZ-V and before the machine startup. • If the SZ-V does not operate properly when you perform pre-check test in accordance with the pre-check test procedures specified in this user's manual, do not operate the machine. • You must periodically examine the machine to verify that all brakes, other stop mechanisms, and control devices operate reliably and correctly in addition to checking the SZ-V. • The responsible personnel must perform maintenance procedures as specified in this user's manual at least once a year to ensure safety to the machine and SZ-V. |
|---|---|

Safety Precautions on Laser Product

This product employs a semiconductor laser for its light source. Follow the instructions mentioned in this manual. Otherwise, injury to the human body (eyes and skin) may result.

| | |
|---|---|
|  | <ul style="list-style-type: none"> • Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure. Precautions on Class 1 Laser Product • Do not disassemble this product. Laser emission from this product is not automatically stopped when it is disassembled. Turn off the SZ-V before when you replace the window. |
|---|---|

Precautions on Regulations and Standards

CE Marking

KEYENCE Corporation has confirmed that this product complies with the essential requirements of the applicable EU Directive, based on the following specifications. Be sure to consider the following specifications when using this product in the Member State of European Union.

Machinery Directive

SZ-V is a safety component defined in the EU Machinery Directive Annex V.

The SZ-V complies with the following EN Standards and has been certified by TÜV SÜD Product Service GmbH.

- EN61496-1 Type 3 ESPE
- EN61496-3 Type 3 AOPDDR
- EN61508 SIL2
- EN62061 SIL CL2
- EN ISO13849-1 Category 3, PLd
- EN60825-1 Class 1 Laser Product

EMC Directive

- EN55011 Class A
- EN61496-1 Type 3 ESPE

As Ethernet cable, use a Category 5e or higher STP (Shielded Twisted Pair) cable for connection to the network.

These specifications do not give any guarantee that the end-product with this product incorporated complies with the essential requirements of EMC Directive. The manufacturer of the end-product is solely responsible for the compliance on the end-product itself according to EMC Directive.

UL Certification and North American Regulations

SZ-V complies with the following UL, CSA, and North American standards and regulations, and has received UL certification and C-UL certification (CCN: NIPM/NIPM7, File No:322137):

- UL61496-1 Type 3 ESPE
- IEC61496-1 Type 3 ESPE
- IEC61496-3 Type 3 AOPDDR
- UL508
- UL1998
- CAN/CSA 22.2 No.14

SZ-V also complies with the following North American regulations.

- CDRH Part 1040.10 (Laser Notice No.50), Class 1 Laser Product
- FCC Part15 Subpart B, Class A Digital Device
- ICES-003, Class A Digital Apparatus

China GB Standards and Regulations


SZ-V complies with the following GB standards and regulations:

- GB19436.3

Other Supported Standards

The SZ-V has been designed in consideration of the following standards and regulations. For details regarding the following standards, contact the third-party certification organization, such as UL or TÜV.

- OSHA 29 CFR 1910.212
- OSHA 29 CFR 1910.217
- ANSI B11.1 - B.11.19
- ANSI/RIA R15.06 - 1999
- SEMI S2-0706
- Ministry of Health, Labor and Welfare in Japan "Guidelines for Comprehensive Safety Standards of Machinery" (July 31, 2007, Notice No. 0731001)

| | |
|---|---|
|  | The SZ-V has not undergone the model certification examination in accordance with Article 44-2 of the Japanese Industrial Safety and Health Law. Therefore, the SZ-V cannot be used in Japan as a "Safety Devices for Presses and Shearing Machines" as established in Article 42 of that law. |
|---|---|

Terms of License Agreement on Use of the Software

Software License Agreement

NOTICE TO USER: PLEASE READ THIS SOFTWARE LICENSE AGREEMENT (THIS "AGREEMENT") CAREFULLY. BY USING ALL OR ANY PORTION OF THE [Safety Device Configurator, GL-R Configurator, SL-V Configurator, SZ Configurator, SZ-V Configurator] (THIS "SOFTWARE"), YOU ARE AGREEING TO BE BOUND BY ALL THE TERMS AND CONDITIONS OF THIS AGREEMENT. IF YOU DO NOT AGREE TO ANY TERMS OF THIS AGREEMENT, DO NOT USE THIS SOFTWARE.

1. Definition

1.1 "use" or "using" means to access, install, download, copy or otherwise benefit from using the functionality of this Software.

1.2 "This Software" means the software and all associated documentation provided by KEYENCE.

2. Grant of License.

Conditioned upon compliance with all of the terms and conditions of this Agreement, KEYENCE grants you a nonexclusive and nontransferable license to install this Software on all computers used by your entity in order to use the KEYENCE product. You may make one copy of this Software for backup or archive purposes only.

3. Restrictions.

3.1 Except for installation of updates or new functions provided by KEYENCE, you may not modify or add any function to this Software.

3.2 You may not reverse engineer, decompile or disassemble this Software.

3.3 You may not create derivative works based on this Software.

3.4 Other than expressly stated by KEYENCE, you may not resell, retransfer, rent or otherwise redistribute this Software to any third parties.

4. Intellectual Property Rights

Except as expressly stated herein, KEYENCE reserves all right, title and interest in this Software, and all associated copyrights, trademarks, and other intellectual property rights therein.

5. Disclaimer.

Keyence is licensing this Software to you "AS IS" and without any warranty of any kind. In no event will KEYENCE or its suppliers be liable to you for any damages, claims, costs or any lost profits caused by using this Software.

6. Termination.

6.1 Your license under this Agreement will terminate automatically if you destroy this Software and the copy of this Software in your possession or voluntarily return this Software to us.

6.2 Your license under this Agreement will terminate automatically without any notice from KEYENCE if you fail to comply with any of the terms and conditions of this Agreement. Promptly upon termination, you shall cease all use of this Software and destroy all copies, full or partial, of this Software in your possession or control.

6.3 You will compensate KEYENCE for costs or any lost profits caused by your violation or breach of any term of this Agreement.

7. Governing Law.

7.1 This Agreement will be governed by and construed in accordance with the substantive laws of Japan without regards to the principles of conflicts of law.

7.2 If any part of this Agreement is found void and unenforceable, it will not affect the validity of the balance of this Agreement, which shall remain valid and enforceable according to its terms and conditions.

Table of Contents

| | |
|--|----|
| Introduction | 2 |
| Safety Information for SZ-V Series | 1 |
| General precautions | 1 |
| Precautions on use | 1 |
| Operators | 1 |
| Environment of use | 1 |
| Target machine..... | 1 |
| Installation | 2 |
| Circuit design and wiring..... | 3 |
| Testing and maintenance..... | 3 |
| Safety Precautions on Laser Product | 3 |
| Precautions on Regulations and Standards | 4 |
| CE Marking..... | 4 |
| Machinery Directive | 4 |
| EMC Directive | 4 |
| UL Certification and North American Regulations..... | 4 |
| China GB Standards and Regulations | 4 |
| Other Supported Standards | 4 |
| Terms of License Agreement on Use of the Software..... | 5 |
| Software License Agreement..... | 5 |
| Table of Contents..... | 6 |
| 1. Before Use | 11 |
| 1-1 Overview of Applications | 11 |
| Applications for stationary installation | 11 |
| Application for movable installation | 11 |
| 1-2 Overview and Configuration | 12 |
| 1-3 Parts List..... | 12 |
| SZ-V | 12 |
| Cable..... | 12 |
| Mounting brackets..... | 13 |
| Other options..... | 14 |
| 1-4 Checking the Package Contents..... | 14 |
| For the standard models | 14 |
| For the separate models (Display unit)..... | 14 |
| For the separate models (scanner head) | 14 |
| For the separate models (system memory)..... | 14 |
| Replacement window..... | 14 |
| 2. Part Descriptions and Functions | 15 |
| 2-1 System Configuration | 15 |
| Display unit and scanner head | 15 |
| Scanner head series connection | 15 |
| 2-2 Part Description | 16 |
| Camera | 16 |
| 2-3 Protection zone..... | 17 |
| 2-4 Warning zone..... | 17 |

| | | |
|-----------|--|-----------|
| 3. | Installation on a Machine | 18 |
| 3-1 | Tips on installation | 18 |
| | Light interference | 18 |
| | Mutual interference | 18 |
| | Highly reflective backgrounds | 19 |
| | Detection capability in close distance | 19 |
| | MI Error | 19 |
| 3-2 | Safety Distances | 20 |
| | Example of area protection (Direction of approach parallel to the protection zone) | 20 |
| | Example of access protection 1 (Direction of approach normal to the protection zone) | 21 |
| | Example of access protection 2 (In case of approaching of the body or parts of the body to the hazardous area) | 22 |
| | Example of installing on an AGV (automated guided vehicle) | 23 |
| 3-3 | Connecting Units | 24 |
| | Connecting separate model units | 24 |
| | Adding Scanner Heads | 24 |
| 3-4 | Mounting | 25 |
| | Mounting for integrated setups | 25 |
| | For separate setups: Mounting the Display unit | 26 |
| | For separate setups or cascading: Mounting a scanner head | 28 |
| | Mounting the protection cover | 29 |
| 4. | Wiring | 30 |
| 4-1 | Power Supply | 30 |
| 4-2 | Wire color and assigned function | 31 |
| | Wire color and assigned function of SZ-V04 type | 31 |
| | Wire color and assigned function of SZ-V32 type | 31 |
| | Wire color and assigned function of SZ-V32N type | 32 |
| | Wire color and assigned function when the power cable extension (M12 4-pin) is used | 32 |
| 4-3 | Examples of wiring | 33 |
| | Wiring for the SZ-V04 type | 33 |
| | Wiring for the SZ-V32 type | 37 |
| | Wiring for the SZ-V32N type | 40 |
| 4-4 | Input and Output Circuit | 43 |
| | OSSD output circuit (Safety output) | 43 |
| | AUX output circuit | 43 |
| | Muting lamp output circuit | 43 |
| | Input circuit | 43 |
| 5. | Basic Functions | 44 |
| 5-1 | OSSD/"Protection Zone State" Data | 44 |
| | OSSD operation and "Protection zone state" data | 44 |
| | Timing chart for self-diagnosis pulse | 44 |
| 5-2 | Operation modes | 44 |
| 5-3 | Minimum detectable object | 45 |
| 5-4 | Response Time and Scan Cycle | 45 |
| | Response time | 45 |
| 5-5 | Select PNP or NPN | 46 |
| 5-6 | AUX Output | 46 |
| | Maximum AUX output count | 46 |
| | Functions assigned to AUX outputs | 46 |
| 5-7 | Interlock function | 47 |
| 5-8 | Monitoring External Devices (EDM Function) | 48 |
| 6. | Advanced Functions | 49 |
| 6-1 | Switching Protection Zones (Bank Switching Function) | 49 |
| | Bank switching methods | 49 |
| | Number of configurable banks | 49 |
| | Details on the bank switching methods | 49 |

| | | |
|-----------|---|-----------|
| 6-2 | Using Multiple Banks (Bank Function) | 53 |
| 6-3 | Monitoring the Zone Switching Sequence (Bank Sequence Monitoring Function) | 53 |
| 6-4 | Protecting Two Zones at the Same Time (Multi-OSSD Function) | 54 |
| | Independently switching two zones (Independent bank switching) | 54 |
| 6-5 | Temporarily Disabling the Safety Function | 55 |
| | Temporarily disabling the safety function (Muting function) | 55 |
| | Restarting after a suspended disabled state (Override function) | 56 |
| | Displaying the disabled state | 56 |
| 6-6 | Monitoring Doors and Other Locations That Change (Reference Points Monitoring Function) | 57 |
| | Examples of applications for detection for area protection | 57 |
| | Examples of applications for detection for access protection | 57 |
| 6-7 | Turning OFF the SZ-V OSSD (Operation Check Function) | 57 |
| | Operation check with laser off input | 57 |
| | Operation check with bank switching | 57 |
| | Operation check with communication | 57 |
| 6-8 | Reducing Interference Between SZ-Vs (Mutual Interference Reduction Function) | 58 |
| 6-9 | Reducing Power Consumption (Power Saving Mode) | 58 |
| 6-10 | Privacy of Camera Images (Camera Blur Function) | 58 |
| 6-11 | Replacing damaged units without configuration transfer (System Memory) | 59 |
| 7. | Checking Operation Status | 60 |
| 7-1 | Checking the Current Detection Status | 60 |
| | Checking on the SZ-V display | 60 |
| | Checking on the SZ-V Configurator | 60 |
| | Checking with outputs | 60 |
| 7-2 | Checking the Past Detection Status (Detection History) | 62 |
| | Detection History | 62 |
| | Error history | 62 |
| | Checking on the SZ-V Configurator | 63 |
| | Checking on the SZ-V display | 63 |
| 7-3 | Checking Error and Alert | 64 |
| | Checking on the SZ-V display | 64 |
| | Checking with outputs | 64 |
| 7-4 | Notification of Whether a Person or Object is in the Protection Zone (Detection in the Protection Zone/Warning Zone Output) | 65 |
| | Checking with outputs | 65 |
| 7-5 | Notification of Interlock-Reset-Ready (Interlock-Reset-Ready Output) | 66 |
| 7-6 | Checking the Timing for the Completion of Start-up (Transition to Normal Operation Output) | 66 |
| 7-7 | Checking Whether the Intended Settings Have Been Applied (Configuration Code (CRC)) | 66 |
| | Checking on the SZ-V display | 66 |
| | Checking on the SZ-V Configurator | 66 |
| 7-8 | Checking with communication | 66 |
| 8. | How to Use the SZ-V Configurator | 67 |
| 8-1 | Before using the SZ-V Configurator | 67 |
| | System Environment | 67 |
| | Installing Safety Device Configurator | 67 |
| | Starting the SZ-V Configurator | 67 |
| | Selecting the Start-up Method | 68 |
| | Selecting a connection method | 68 |
| | Exiting SZ-V Configurator | 69 |
| | Connecting the SZ-V to a computer | 69 |
| 8-2 | Area and Function Names on the Screen | 70 |
| | Menu bar | 70 |
| | Toolbar | 70 |
| | Configuration area | 70 |
| | Subpanel | 71 |
| | Main panel | 71 |
| | Status bar | 71 |
| 8-3 | Authorization Level and Settings | 71 |
| | Possible operations according to authorization level | 71 |
| 8-4 | Overview of How to Configure Settings | 72 |

| | |
|--|-----|
| How to read the Configuration tab | 72 |
| 8-5 Setting Procedure | 73 |
| 1. Determine the configuration | 73 |
| 2. Configuring the settings | 74 |
| 3. Set the zone | 78 |
| 4. Configure other settings | 81 |
| 5. Communication settings | 83 |
| 6. Transfer the settings | 86 |
| 8-6 Useful Functions for Setting Zones | 87 |
| Automatic drawing function | 87 |
| Automatic trimming function | 88 |
| Dynamic drawing function | 89 |
| XML File | 90 |
| Real-time ranging | 92 |
| Rotating the canvas | 92 |
| Simulation mode | 92 |
| Checking the camera | 92 |
| 8-7 Monitoring Operations | 94 |
| How to read the monitoring tab | 94 |
| How to read and operate the full screen display | 97 |
| How to read and operate the camera view | 98 |
| How to read and operate the monitor view | 98 |
| 8-8 Checking the Detection History | 99 |
| How to read the History tab | 99 |
| Checking detection images and video in the protection zone | 101 |
| 8-9 Monitoring Using Communications | 102 |
| 8-10 Operation Menu | 103 |
| File | 103 |
| Edit | 103 |
| View | 104 |
| Image on Canvas | 105 |
| Monitoring tools | 105 |
| Detection history tools | 106 |
| Communications | 107 |
| Log-in authentication | 109 |
| Language | 110 |
| Help | 110 |
| 8-11 Image of a printed document | 111 |

9. Operating the SZ-V..... 113

| | |
|--|-----|
| 9-1 Turning On Power for the First Time | 113 |
| 9-2 How to Read the SZ-V Display | 114 |
| How to Read the Display | 114 |
| 9-3 Switching the Display (View) | 116 |
| 9-4 Operating the Menu (Menu) | 117 |
| Checking the Detection History (Detection History) | 117 |
| Checking the error history (Error History) | 119 |
| Checking each setting (Configuration) | 120 |
| Checking the zone settings (Zone Config) | 122 |
| I/O monitoring functions (I/O Monitor) | 122 |
| Other functions and settings (Other) | 122 |
| 9-5 Displaying the Detection History (History) | 122 |
| 9-6 Display When an Error Occurs (Error/Alert) | 123 |
| Display on the SZ-V when an error or alert occurs | 123 |
| Screen transition when an error occurs | 123 |
| 9-7 Other Functions and Operations | 124 |
| Key lock | 124 |
| 9-8 How to Read the indicators | 124 |
| Display unit indicators | 124 |
| Scanner head indicators | 125 |

| | |
|---|------------|
| 10. Specifications | 126 |
| 10-1 Models | 126 |
| SZ-V | 126 |
| Cable | 126 |
| Others | 126 |
| 10-2 Specifications | 127 |
| Specifications | 127 |
| IEC61508-related parameters | 129 |
| EtherNet/IP™ (CIP Safety™) Specifications | 129 |
| PROFINET/PROFIsafe Specifications | 129 |
| PROFIsafe communication data | 130 |
| CIP Safety™ communication data | 131 |
| CIP Safety™ requirements | 132 |
| 10-3 Dimensions | 133 |
| SZ-V | 133 |
| Mounting bracket | 134 |
| 11. Troubleshooting | 139 |
| 11-1 Error State | 139 |
| Display and output of the error information | 139 |
| Recovering from an error state | 139 |
| 11-2 Alert State | 139 |
| Indication and output of the alert information | 139 |
| Recovering from the alert state | 139 |
| 11-3 Information on the Display | 140 |
| Display during normal operation | 140 |
| Display during alert state | 141 |
| Display during an error state | 142 |
| Other states | 144 |
| 11-4 Troubleshooting the OSSD Operation | 144 |
| 11-5 Troubleshooting Related to Connection with the SZ-V Configurator | 145 |
| 11-6 Troubleshooting Related to Ethernet Communication | 145 |
| 12. Inspection and Maintenance | 146 |
| 12-1 Precaution During Inspection | 146 |
| 12-2 Initial Inspection | 146 |
| 12-3 Daily Inspection | 147 |
| 12-4 Regular (Periodic) Inspection | 147 |
| 12-5 Cleaning the Window | 148 |
| 12-6 Replacing the Window | 148 |
| Replacement procedure | 148 |
| 12-7 Replacing the Display unit | 149 |
| Replacement procedure | 149 |
| Appendices | 150 |
| A-1. Functions That Cannot Be Set Together | 150 |
| SZ-V04 type | 150 |
| SZ-V32 type | 150 |
| SZ-V32N type (When PROFIsafe is not used) | 151 |
| SZ-V32N type (When PROFIsafe is used) | 151 |
| SZ-V32NC type | 151 |
| A-2. Open License | 152 |
| A-3. Trademarks | 152 |
| Warranties and Disclaimers | 153 |

1. Before Use

1-1 Overview of Applications


The applications introduced in this chapter should be considered just as references. The customer (user) is fully responsible for performing a risk assessment, taking into account the machine application, and for using the SZ-V appropriately based on those results.

Applications for stationary installation

Protection against a hazardous area (Area protection: Horizontal detection plane)


If the SZ-V detects an object in the specified protection zone, the OSSD goes to the OFF-state to stop the machine hazard. If the SZ-V detects an object in the specified warning zone, the warning information related to the person approaching the protection zone can be provided by the SZ-V before stopping the hazard.

If an object is detected, the photos and video captured with the use of the camera can be saved. The saved photos and video can be checked on the unit's display or on a computer with a USB drive or via the network.

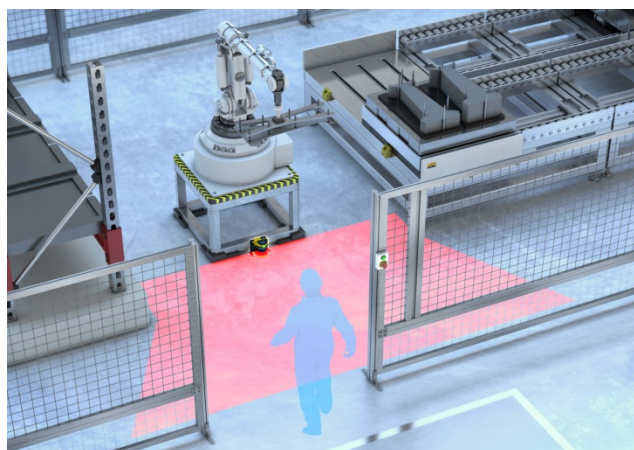

One SZ-V can provide protection for two different hazards (Area protection: Horizontal detection plane)


Two protection zones can be specified: protection zone A and protection zone B. OSSD 1/2 goes to the OFF-state if the SZ-V detects an object in protection zone A. Then, only hazard A stops operation. On the other hand, OSSD 3/4 goes to the OFF-state if the SZ-V detects an object in the protection zone B. Then, only hazard B stops operation. For the warning zone, two warning zones can be specified with the protection zones.

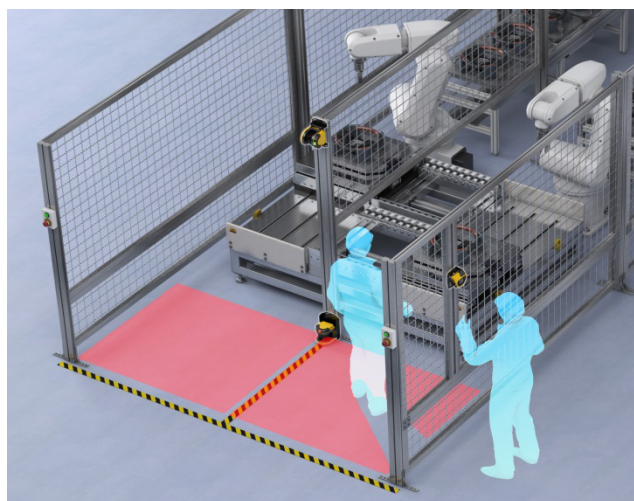

Protection against entrance into a hazardous area (Access protection: Vertical detection plane)

If the SZ-V detects someone passing through the specified protection zone, the OSSD goes to the OFF-state to stop the machine hazard. Even if the scanner head is installed in a high place, by installing the Display unit separately, SZ-V operation is easy.

Make sure to always use the reference points monitoring function with these types of applications. "Reference Point Monitoring Function" (page 57)

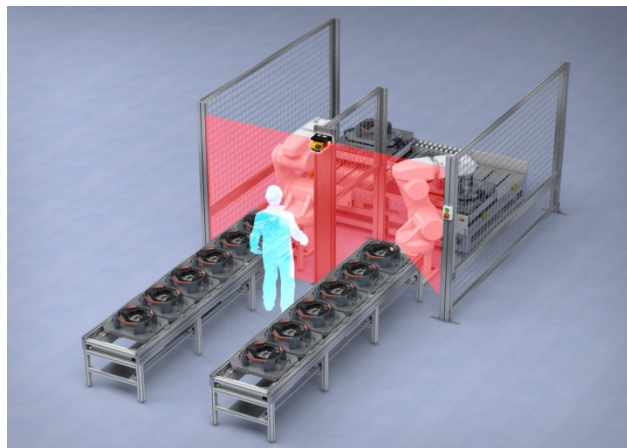


Application for movable installation

Mounting on an Automated Guided Vehicle (AGV)

If the SZ-V detects an object (someone or something) in the protection zone, the AGV stops because the OSSD goes to the OFF-state. The SZ-V can monitor whether there is an object in the protection zone by switching between the specified protection zones based on signals from external devices such as encoders. By installing several scanner heads on one Display unit, locations that are physically separated in several protection zones can be monitored at the same time.



1-2 Overview and Configuration

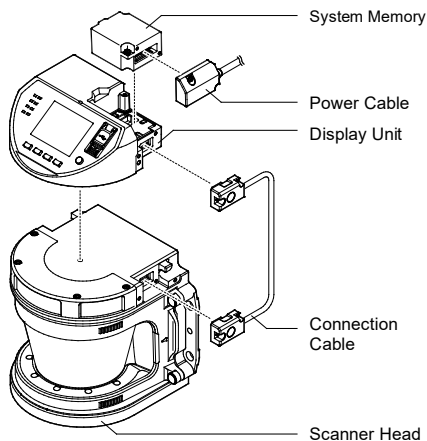


For details on part names and system configuration, see "Part Descriptions and Functions" (page 15).

1-3 Parts List

SZ-V

Integrated Models

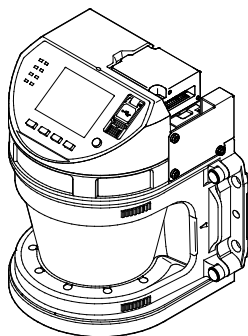


These models include the Display unit, scanner head, system memory, and connection cable.

| Type | Model Name | Display Unit Model | Head Model |
|-----------------------------------|------------|--------------------|------------|
| Multi-function Type (with camera) | SZ-V04X | SZ-VU04 | SZ-VH1X |
| Multi-function Type | SZ-V04 | SZ-VU04 | SZ-VH1 |
| Multi-bank Type (with camera) | SZ-V32X | SZ-VU32 | SZ-VH1X |
| Multi-bank Type | SZ-V32 | SZ-VU32 | SZ-VH1 |
| Network Type (with camera) | SZ-V32NX | SZ-VU32N | SZ-VH1X |
| Network Type | SZ-V32N | SZ-VU32N | SZ-VH1 |
| CIP Safety™ Type (with camera) | SZ-V32NCX | SZ-VU32NC | SZ-VH1X |
| CIP Safety™ Type | SZ-V32NC | SZ-VU32NC | SZ-VH1 |

The system memory and connection cable are the same for all models.
System memory: SZ-VSM Connection cable: SZ-VS005


Separate Models

Display unit

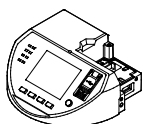

| Type | Model Name |
|---------------------|------------|
| Multi-function Type | SZ-VU04 |
| Multi-bank Type | SZ-VU32 |
| Network Type | SZ-VU32N |

Scanner Head

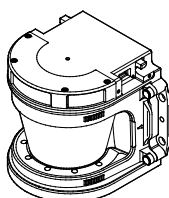

| Type | Model Name |
|-------------|------------|
| With camera | SZ-VH1X |
| Standard | SZ-VH1 |


System Memory

| Type | Model Name |
|---------------|------------|
| System Memory | SZ-VSM |

Cable

■ Power cable (18 core connector free)

Shape

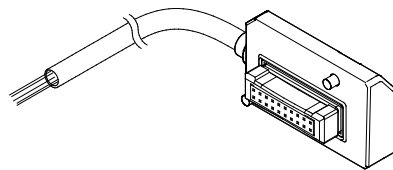

Connector configuration 19.2 mm x 40.2 mm x thickness 18.6 mm

Cable ϕ 5.8 mm, minimum bend radius 5 mm.

| Model | Length |
|---------|--------|
| SZ-VP5 | 5 m |
| SZ-VP10 | 10 m |
| SZ-VP20 | 20 m |
| SZ-VP30 | 30 m |


■ Power cable (PROFIsafe or CIP Safety™-dedicated, 2 core connector free)

Cable ϕ 5.8 mm, minimum bend radius 5 mm.

| Model | Length |
|-----------|--------|
| SZ-VP10PW | 10m |

■ Power cable extension (M12 4-pin)

Shape

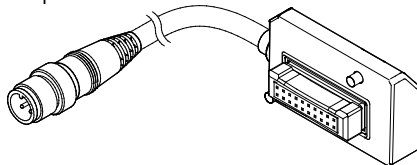


Cable ϕ 5.8 mm, minimum bend radius 5 mm.

| Model | Length |
|---------|--------|
| SZ-VP03 | 0.3m |

■ Extension cable (M12 4-pin)

Shape

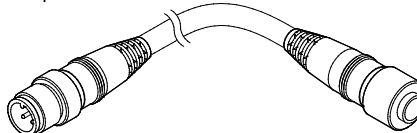


Cable ϕ 5.8 mm, minimum bend radius 5 mm.

| Model | Length |
|----------|--------|
| SZ-VCC10 | 10m |

■ Connection cable

Shape

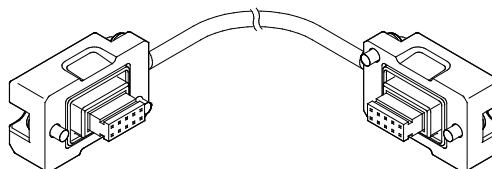

Connector configuration 29mm x 19mm x thickness 19 mm

Cable ϕ 5.4 mm, minimum bend radius 5 mm.

| Model | Length |
|----------|--------|
| SZ-VS005 | 0.05 m |
| SZ-VS5 | 5 m |
| SZ-VS10 | 10 m |
| SZ-VS20 | 20 m |

The SZ-VS005 is bundled with fixing plates (for the standard and multi-bank models) to secure the Display unit and the scanner head.

Cable length specification

| | |
|------------------|-------------------------|
| Power cable | 30m ^{*1} |
| Connection cable | 20 m each ^{*2} |


*1 10 m or less when supplying power from a battery.

*2 When supplying power from a battery, the length of each connection cable should be 10 m or less when using two scanner heads, and 5 m or less when using three scanner heads.


Mounting brackets

■ For integrated setup and separate scanner head setup


Adjustable angle bracket (horizontal) model: SZ-VB01

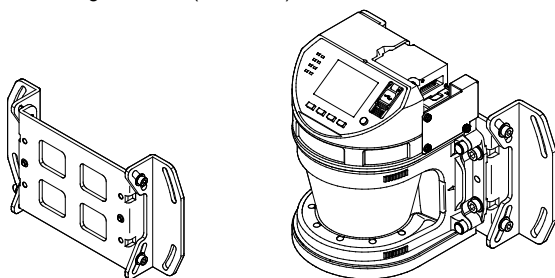

Adjustable angle bracket (vertical) model: SZ-VB02

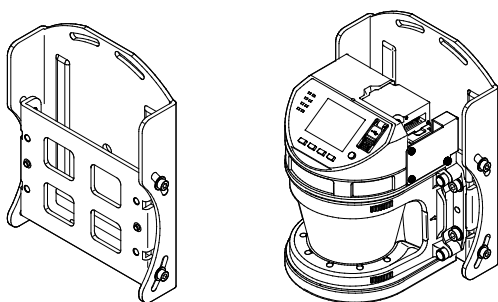


Floor bracket model: SZ-VB03

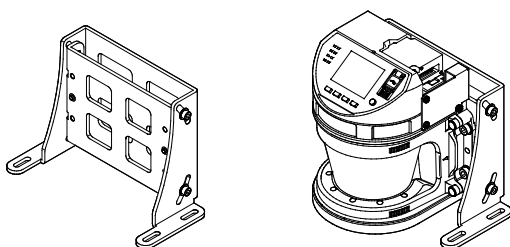


■ For separate Display unit installation:


Display unit standard bracket model: SZ-VB11

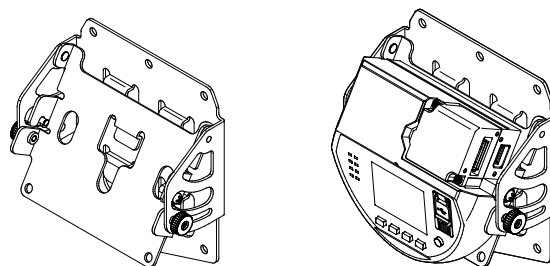


Display unit DIN rail mounting bracket (flat) model: SZ-VB12

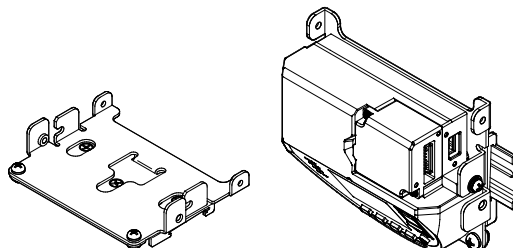

Display unit DIN rail mounting bracket (slim) model: SZ-VB13

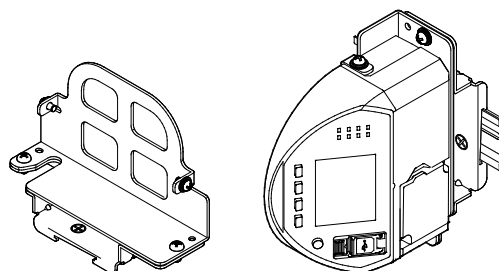

■ Protection cover model: SZ-VB21

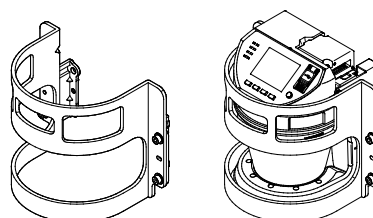


Other options

■ USB cable

| Model | Length |
|----------|--------|
| OP-51580 | 2 m |
| OP-86941 | 5 m |

■ IP67 network cable


Main unit connection— cable (RJ45 – M12 4-pin female)

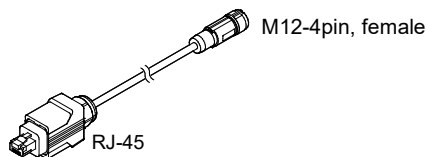

| Model | Length |
|----------|--------|
| SZ-VNC03 | 0.3m |


When extending the network cable, please choose appropriate type from below, depending on the connector shape of the equipment you would like to connect to.

RJ45 extension cable

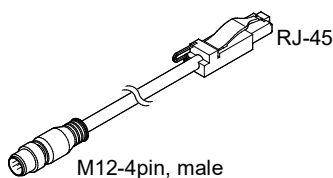


| Model | Length |
|----------|--------|
| OP-88086 | 2m |
| OP-88087 | 5m |
| OP-88088 | 10m |

M12 4-pin (male) extension cable

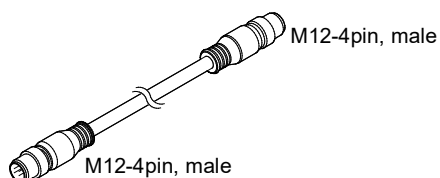

| Model | Length |
|----------|--------|
| OP-88089 | 2m |
| OP-88090 | 5m |
| OP-88091 | 10m |
| OP-88092 | 20m |

■ Replacement window model: SZ-VHW

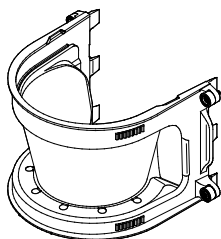

■ Configuration software <Safety Device Configurator>

The configuration software includes dedicated configuration software for SZ-V series <SZ-V Configurator>. Configuration of SZ-V is done through SZ-V Configurator.

The configuration software can be downloaded from the KEYENCE homepage.

<http://www.keyence.com>

If you are using the machine in an environment where downloading software is not possible via the Internet, contact your nearest KEYENCE office or distributor.

1-4 Checking the Package Contents

For the standard models

Main unit (Display unit, scanner head, system memory, and connection cable)

Dynamic drawing sheet

Instruction manual

For the separate models (Display unit)

Main unit (Display unit)

Dynamic drawing sheet

Instruction manual

For the separate models (scanner head)

Main unit (scanner head)

Instruction manual

For the separate models (system memory)

Main unit (system memory)

Instruction manual

Replacement window

Main unit (replacement window)


Gasket

Screw x 4

Instruction manual


2. Part Descriptions and Functions

2-1 System Configuration

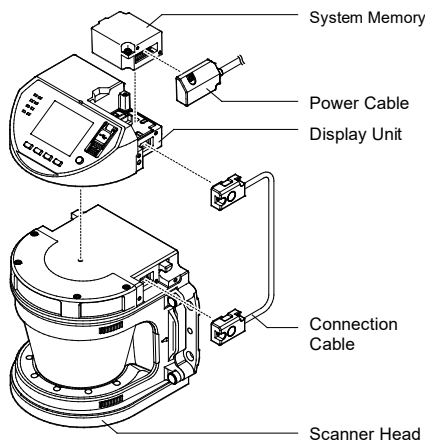


Display unit and scanner head

Integrated System

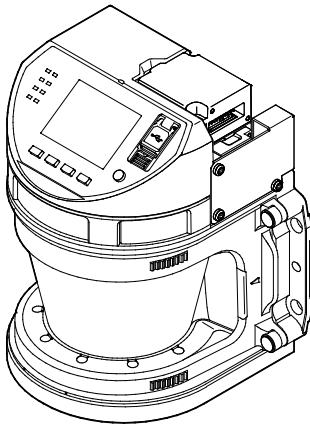

The Display unit and scanner head can be connected together prior to installation. At the time of shipping, the standard models ("Parts List" page 12) are already assembled and ready to be installed as an integrated unit.


Separate System

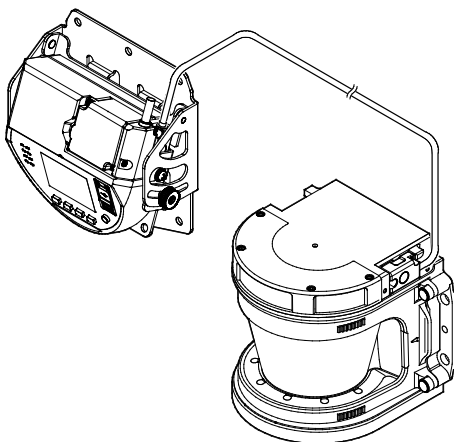

The Display unit and scanner head can also be installed separately. When installing the Display unit and scanner head separately, connect the Display unit and scanner head with the connection cable.

Scanner head series connection

Up to three scanner heads can be connected to one Display unit. This allows multiple zones to be monitored as one.

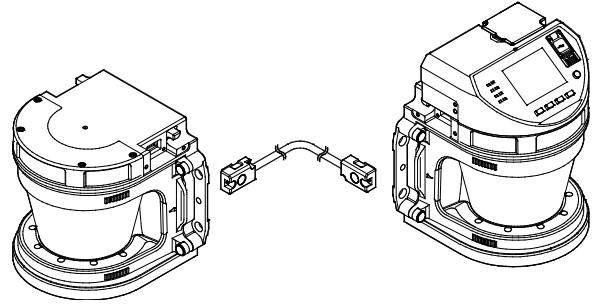



Benefits of scanner head series connection

- The amount of wiring is greatly reduced with the need for only one Display unit.
- Scanner heads containing different minimum detectable objects, response times, and other settings can be used together.

Limitation


- Only three scanner heads can be connected to one Display unit.
- When adding scanner heads, the start-up time increases by one second for each scanner head.
- When supplying power from a battery, the length of each connection cable should be 10 m or less when using two scanner heads, and 5 m or less when using three scanner heads.

2-2 Part Description

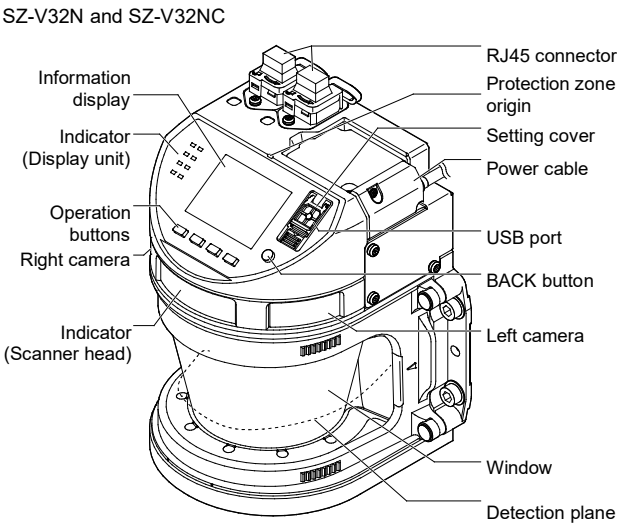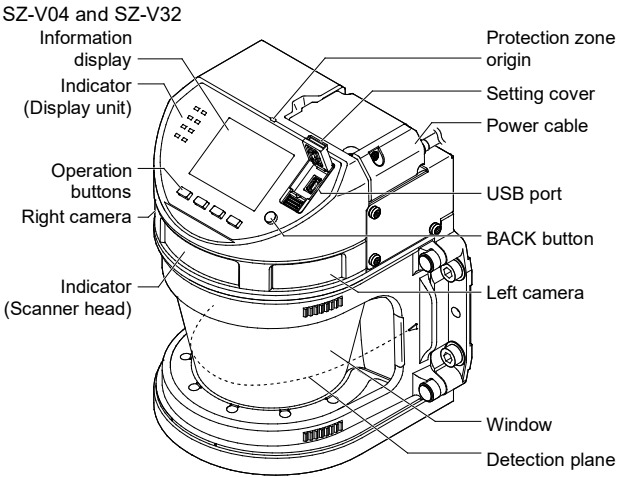


For details on the indicators, see “How to Read the indicators” (page 124)

Camera

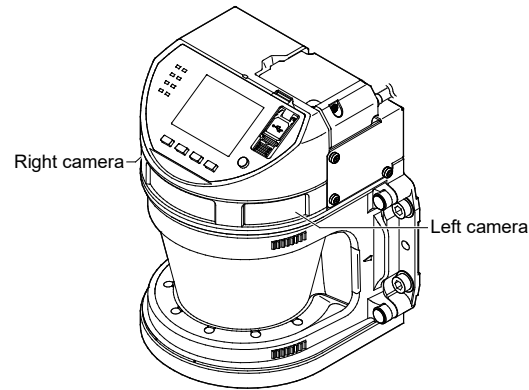

When using a scanner head with a camera, images taken with the camera can be monitored, and photos and videos of the moment that objects and/or people are detected can be saved.

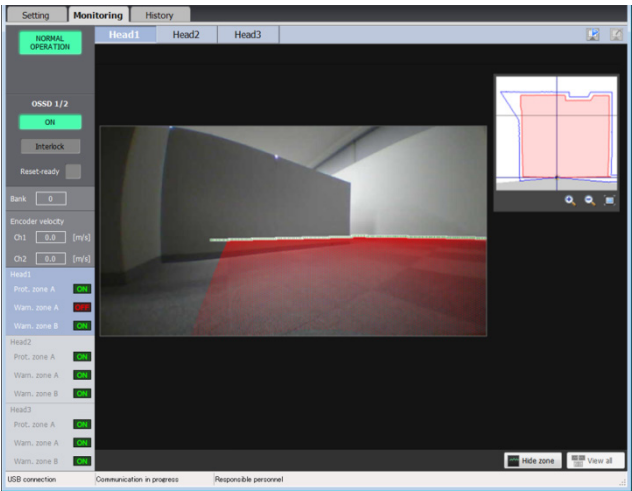

Optical axis adjustment using the camera is also possible.




Check photos and videos of the moments objects and/or people are detected at a later time.
“Checking detection images and video in the protection zone” (page 101)


2-3 Protection zone

When the SZ-V detects an object (someone or something) in the protection zone, the OSSD goes to the OFF-state.
The maximum configurable distance varies depending on the operation mode and minimum detectable object size setting. "Minimum detectable object" (page 45)
The protection zone settings are configured in the SZ-V Configurator. "Set the zone" (page 78)

Protection zone (top view)

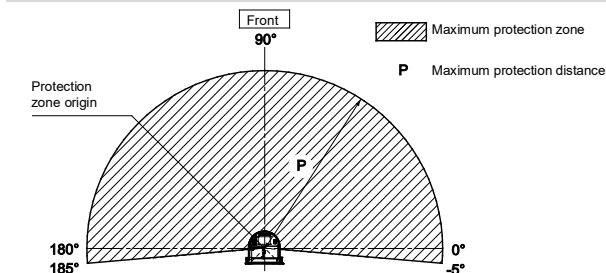

■ Example of a protection zone

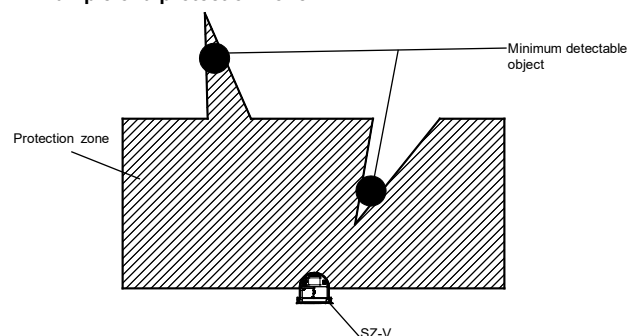


| | |
|----------------------|---|
| <p>DANGER</p> | <ul style="list-style-type: none"> The protection zone must be configured so as to ensure the safety distance, which has been calculated according to the laws, regulations, and standards of the country and region in which the SZ-V is installed. "Safety Distances" (page 20). When either multi-OSSD function or bank switching function is enabled, every protection zone must be configured so as to ensure the safety distance, which has been calculated according to the laws, regulations, and standards of the country and region in which the SZ-V is installed. "Multi-OSSD Function" (page 54), "Bank Switching Function" (page 49), "Safety Distances" (page 20) SZ-V cannot monitor anything behind the object that the SZ-V detects in the protection zone. (This is a blind area for the SZ-V.) The responsible personnel must perform the risk assessment with taking into account this factor in case of installation of the SZ-V. If necessary, the additional countermeasure must be taken by the responsible personnel. As shown in the figure above, the detection may not be performed if the whole of minimum detectable object is not included in the protection zone. You must configure the protection zone so as to ensure that the whole of minimum detectable object is included everywhere in that protection zone. |
|----------------------|---|

- Reference**
- Set the minimum detectable object size in the SZ-V Configurator. "Minimum detectable object" (page 45)
 - Even if the object is smaller than the minimum detectable object size, it may be detected; however this is not guaranteed.
 - Using the multi-OSSD function, allows for the setting of two protection zones individually for one scanner head. "Multi-OSSD Function" (page 54)


2-4 Warning zone

A warning zone can be configured separately from the protection zone. Prevent the unnecessary stoppage of the machine by configuring the warning zone larger than the protection zone, since the SZ-V can send an alert to an external device, such as an indicator, before the object (someone or something) enters the protection zone.
The maximum configurable distance varies depending on the operation mode and minimum detectable object size setting. "Minimum detectable object" (page 45)
The warning zone settings are configured in the SZ-V Configurator. "Set the zone" (page 78)

Warning zone (top view)

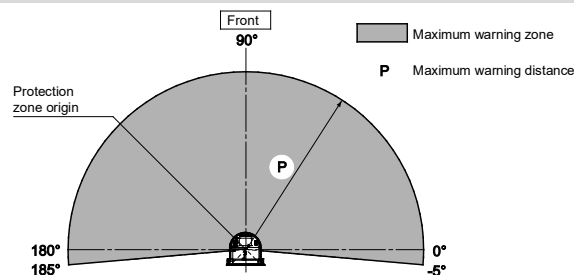

■ Example of warning zone

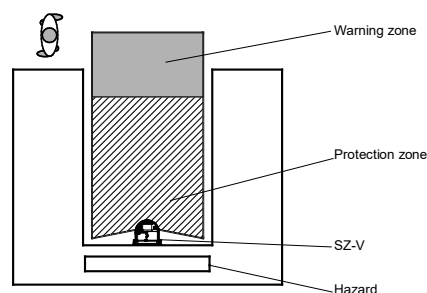

| | |
|----------------------|---|
| <p>DANGER</p> | <p>The warning zone is not a safety-related function. Do not use the output for detection in the warning zone as a safety output, which is connected to the safety-related part of a control system. Failure to follow this warning may result in a significant harm to the machine operators, including serious injury or death.</p> |
|----------------------|---|

- Reference**
- Set the minimum detectable object size in the SZ-V Configurator. "Minimum detectable object" (page 45)
 - Even if the object is smaller than the minimum detectable object size, it may be detected. But this is not guaranteed.
 - The detection may not be performed in the warning zone if the whole of minimum detectable object is not included in that warning zone. Configure the warning zone so as to ensure that the whole of minimum detectable object is included everywhere in that warning zone.
 - The scan cycle for the warning zone cannot be set because the scan cycle for the configured protection zone is always applied. The OSSD does not go to the OFF-state even if the SZ-V detects an object in the warning zone
 - The response time and the minimum detectable object size for the warning zone can be different from those for the protection zone.
 - Two individual warning zones can be set for one scanner head.

3. Installation on a Machine

- The protection zone must be configured so as to ensure the safety distance, which has been calculated according to the laws, regulations, and standards of the country and region in which the SZ-V is installed. "Safety Distances" (page 20)
- When either multi-OSSD function or bank switching function is enabled, every protection zone must be configured so as to ensure the safety distance, which has been calculated according to the laws, regulations, and standards of the country and region in which the SZ-V is installed. "Safety Distances" (page 20)
- The necessary safety distance varies depending on the minimum detectable object size and the response time you specify. The protection zone must be configured so as to ensure the safety distance, which has been calculated according to the laws, regulations, and standards of the country and region in which the SZ-V is installed. "Safety Distances" (page 20)
- SZ-V cannot monitor anything behind the object that the SZ-V detects in the protection zone. (This is a blind area for the SZ-V.) The responsible personnel must perform the risk assessment with taking into account this factor in case of installation of the SZ-V. If necessary, the additional countermeasure must be taken by the responsible personnel.
- The SZ-V must be installed so that the machine operator is able to go into or approach the hazardous zone or hazards only by passing through the protection zone of the SZ-V. Strictly avoid installation that allows the machine operator or a part of the machine operator's body to go into or approach the hazardous zone or hazards without passing through the protection zone of the SZ-V or to remain in a position between the protection zone of the SZ-V and the hazardous zone or hazard.
- You must prepare the test piece with the intended minimum detectable object size in order to verify the protection zone in accordance with the pre-check test procedures, such as the item specified in this manual, after installing the SZ-V.

⚠ DANGER

3-1 Tips on installation


Note the following items when installing on a machine.

Light interference

Although there is no object in the protection zone, the OSSD might go to the OFF-state if an ambient light source, detailed below, is located at the detection plane, causing the SZ-V to perform a false detection.

- Incandescent lamp
- Sunlight
- Fluorescent light
- Strobe light
- Other infrared light sources (infrared photoelectric sensor, infrared laser, etc.)

In order to avoid this situation, ambient light sources should not be located within $\pm 5^\circ$ of the detection plane.

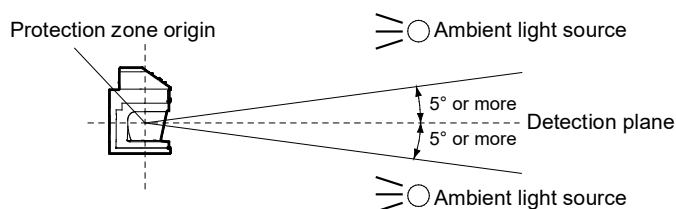


Mutual interference


The OSSD might go to the OFF-state due to mutual interference if using multiple SZ-V units.

Installations where mutual interference is possible

1. Directly facing each other

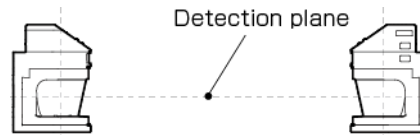


2. Interference caused by diffuse reflection

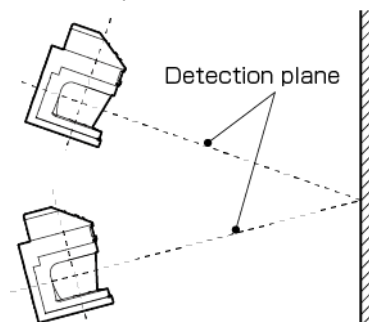


The SZ-V should be installed according to the following countermeasures in order to avoid mutual interference.


1. A shielding plate should be installed like below.

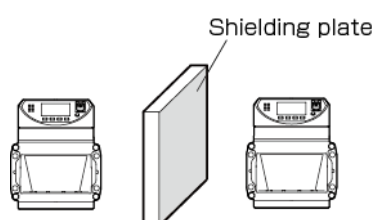

2. The height of installation should be like below.

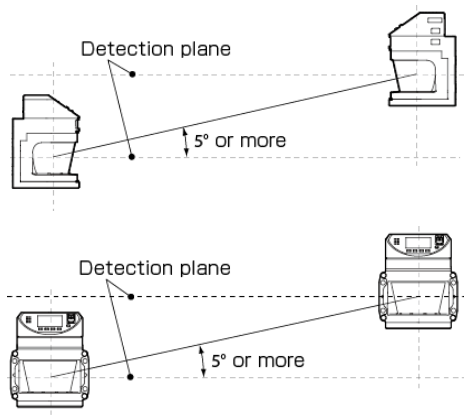

3. The angle of installation should be like below.

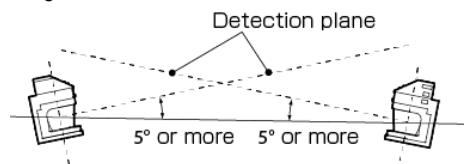


The following countermeasures may be taken to reduce the possibility of the mutual interference.

- Make the protection zone smaller, if possible. "Protection zone" (page 17)
- Make the minimum detectable object size larger, if possible. "Minimum detectable object" (page 45)
- Make the response time longer, if possible. "Response Time and Scan Cycle" (page 45)
- Change the scan cycles. "Mutual Interference Reduction Function" (page 58)

⚠ DANGER You must calculate the safety distance again in order to reinstall the SZ-V with appropriate safety distance if you want to apply the above countermeasure.

Highly reflective backgrounds

The SZ-V goes into an alert state (alert for a highly reflective background) if it detects a highly reflective background within 1.5 m from the setting range of the protection zone. For more information about the alert state, see "Alert State" (page 139).

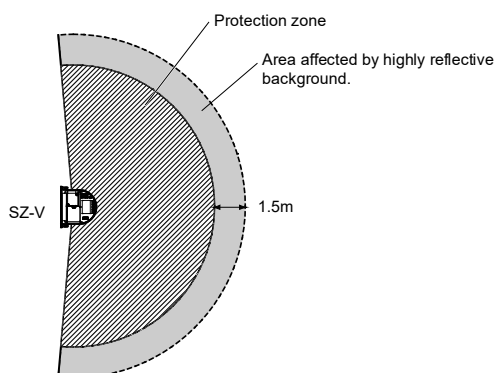

⚠ DANGER If there is a highly reflective background within 1.5 m from the boundary of the protection zone, you must take a countermeasure, such as reducing the reflectance or removing the background itself. If you cannot take the above-mentioned countermeasures, another 200 mm must be added as supplementary necessary distance to the protection zone in case of calculation of the safety distance.


Reference Examples of highly reflective backgrounds: Metallic glossy surfaces, retro-reflective sheets, and retro-reflective plates

Detection capability in close distance

Non-detectable zones

There are non-detectable zones near the SZ-V.


Non-detectable zones when directly attached

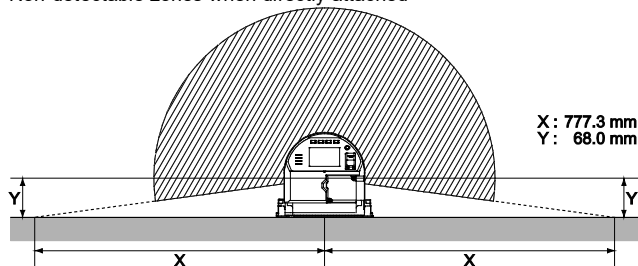

⚠ DANGER Additional countermeasures for protection must be provided if there is a space between the protection zone and the protective structure that the minimum detectable object is not detected by the SZ-V.

Zone with the limited detection capability

SZ-V might not detect an object with low reflectance located at the distance of 93.5mm or less from the protection zone origin. This is the zone with limited detection capability.

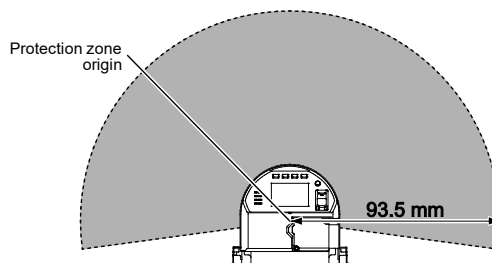

⚠ DANGER In case of installation of the SZ-V, the responsible personnel must perform the risk assessment with taking into account the possibility that an object might go into the zone with limited detection capability. If it is possible, the additional countermeasure must be taken by the responsible personnel.

MI Error

When the reflection from a detection object or the background area is not detected for over 60°, an error will occur and [MI Error] will be displayed.


This function is to prevent people from interfering with the use of objects that emit very little reflection when very close to the SZ-V.

3-2 Safety Distances


The protection zone must be configured so as to ensure the minimum safety distance, which has been calculated according to the laws, regulations, standards of the country and region in which the SZ-V is installed as well as the specification specified in this user's manual.

Example of area protection (Direction of approach parallel to the protection zone)

Top view of the machine

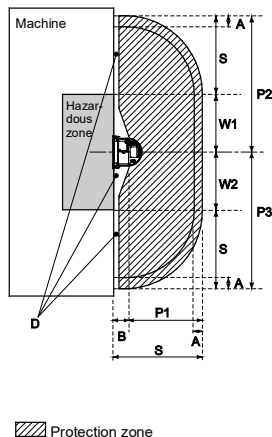

Side view of the machine

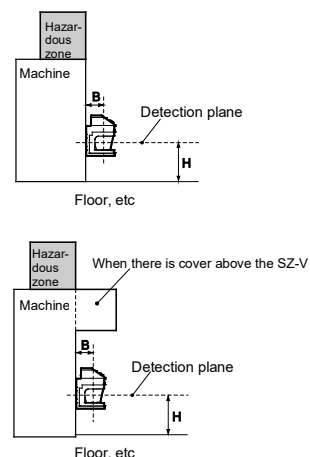

P1, P2, P3 : Protection distances to be configured as the protection zones
 W1, W2 : Width of the hazardous area
 B: Distance between the edge of the hazardous area and protection zone origin on the SZ-V
 D: Unprotected space

Safety distance calculation according to ISO13855 and IEC61496-3

$$S = K \times T + C + A$$

S: Safety distance (mm)

K: Approach speed of the body or parts of the body (mm/s)

T: Overall Response time in second ($t_1 + t_2$) (s)

t_1 : SZ-V response time (s)

t_2 : Max. time required to stop the machine after receiving the OSSD signal from SZ-V (s) *

C: $1200 - 0.4 \times H$ (850 mm or higher)

H: Height of detection plane (protection zone) above the reference plane, for example the floor (mm)
 $1000 \geq H \geq 15 \times (d - 50)$

d: SZ-V minimum detectable object size (mm)

A: Additional safety distance (mm)

* When using PROFIsafe with the SZ-V32N type, please add the communication and processing time required for the stop signal to reach the machine after the SZ-V protection zone state turns OFF.

Example of safety distance calculation

K = 1600 mm/s

Approach speed of the body or parts of the body (Constant)

T = $t_1 + t_2 = 0.82$ s

Overall response time

$t_1 = 0.32$ s

SZ-V response time (Changeable)

$t_2 = 0.5$ s

Max. time required to stop the machine after receiving the OSSD signal from SZ-V

C = $1200 - 0.4 \times H = 1080$ mm

H = 300 mm

Lowest allowable height of detection plane (protection zone). This must be calculated using the formula below.

$H \geq 15 \times (d - 50)$

d = 70 mm

Minimum detectable object size (Changeable)

A = 100mm

Additional safety distance of SZ-V

B = 68 mm

Distance between the edge of the hazardous area and protection zone origin on the SZ-V

W1 = W2 = 1000mm

Width of the hazardous area

Safety Distances

$$S = K \times T + C + A$$

$$= 1600 \times 0.82 + 1080 + 100 = 2492 \text{ mm}$$

Protection distances to be configured as the protection zones

$$P1 = S - B = 2424 \text{ mm}$$

$$P2 = S + W1 = 3492 \text{ mm}$$

$$P3 = S + W2 = 3492 \text{ mm}$$

Safety distance calculation according to ANSI B11.19-2010 and IEC61496-3

$$\text{Formula: } Ds = K \times T + Dpf + A$$

Ds: Safety distance.

K: The maximum speed that an individual can approach the hazard.

T: The total time that it takes for the hazardous motion to stop, or for the hazardous portion of the machine cycle to be completed. This value varies depending on machine type and/or the safeguarding device applied.

Dpf: Additional distance for horizontal sensing field applications without vertical sensing: $1200 \text{ mm} / 48"$.

A: Additional safety distance (mm)

Example of safety distance calculation

K = 1600 mm/s

T = $t_1 + t_2 = 0.82$ s

$t_1 = 0.32$ s

$t_2 = 0.5$ s

Overall response time

SZ-V response time (Changeable)

Max. time required to stop the machine after receiving the OSSD signal from SZ-V *

Additional distance

Additional safety distance of SZ-V

A = 100mm

Distance between the edge of the hazardous area and protection zone origin on the SZ-V

B = 68 mm

Width of the hazardous area

W1 = W2 = 1000mm

* When using PROFIsafe or CIP Safety™, please add the communication and processing time required for the stop signal to reach the machine after the SZ-V "protection zone state" data changes to "0".

Safety Distances

$$S = K \times T + Dpf + A$$

$$= 1600 \times 0.82 + 1200 + 100 = 2612 \text{ mm} = 102.9 \text{ inch}$$

Protection distances to be configured as the protection zones

$$P1 = S - B = 2544 \text{ mm} = 101 \text{ inch}$$


$$P2 = S + W1 = 3612 \text{ mm} = 143 \text{ inch}$$

$$P3 = S + W2 = 3612 \text{ mm} = 143 \text{ inch}$$


| | |
|---|--|
| <div style="background-color: red; color: white; padding: 2px; text-align: center;"> ⚠ DANGER </div> | <ul style="list-style-type: none"> Additional countermeasures for protection must be provided if there is a space (D) between the protection zone and the protective structure that the minimum detectable object is not detected by the SZ-V. There is a risk of inadvertent undetected access beneath the detection plane (protection zone), if the height "H" of detection plane (protection zone) is greater than 300 mm (200 mm for non-industrial application, for example in the presence of children). The responsible personnel must perform the risk assessment with taking into account this factor in case of installation of the SZ-V. If necessary, the additional countermeasure must be taken by the responsible personnel. In the protection zone setting, you cannot select the object size of 150 mm when "H" (Height of detection plane) is 1,000 mm or less. You must select the object size of 70 mm or smaller if you want to use SZ-V for area protection (direction of approach is parallel to the protection zone.) If there is a highly reflective background within 1.5 m from the boundary of the protection zone, another 200 mm must be added as supplementary necessary distance to the P1, P2 and P3 respectively. "Highly reflective backgrounds" (page 19) We recommend you should have a marking on the floor for indicating the specified protection zone. |
|---|--|

Example of access protection 1 (Direction of approach normal to the protection zone)

Top view of the machine

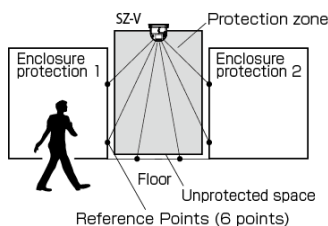

Side view of the machine

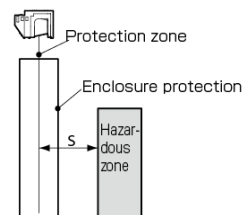

■ Safety distance calculation method based on ISO13855 and IEC61496-3

Formula: $S = K \times T + C$

S: Safety distance (mm)

K: Approach speed of the body or parts of the body (mm/s)

T: Overall Response time in second ($t_1 + t_2$) (s)

t_1 : SZ-V response time (s)

t_2 : Max. time required to stop the machine after receiving the OSSD signal from SZ-V (s) *

C: Additional distance, taking into accounts the intrusion prior to actuation of protective equipment (mm).

* When using PROFIsafe or CIP Safety™, please add the communication and processing time required for the stop signal to reach the machine after the SZ-V "protection zone state" data change to "0".

Example of safety distance calculation

K = 1600 mm/s Approach speed of the body or parts of the body

T = $t_1 + t_2 = 0.58$ s Overall response time

$t_1 = 0.08$ s SZ-V response time (Changeable)

$t_2 = 0.5$ s Max. time required to stop the machine after receiving the OSSD signal from SZ-V

C = 850 mm (Constant)


d = 70 mm Minimum detectable object size (Changeable)

Safety Distances

$S = K \times T + C = 1600 \times 0.58 + 850 = 1778\text{mm}$

| | |
|---|---|
| <div data-bbox="129 1624 215 1653" data-label="Image"> </div> | <ul style="list-style-type: none"> • Reference point monitoring function must be applied when the SZ-V is used for the access protection specified in IEC61496-3:2008 Annex A.12 and A.13 (the application where the angle of the approach exceeds $\pm 30^\circ$ to the detection plane). In this case, the tolerance for reference points must be ± 100 mm or less and the response time must be 90 ms or less. "Reference Points Monitoring Function" (page 57) • The unprotected space between the protection zone and the protective structure must be less than the minimum detectable object size when the SZ-V is installed, in order to prevent the machine operators from approaching into the hazardous area through this space. Additional countermeasures for protection must be provided if there is a space between the protection zone and the protective structure that the minimum detectable object is not detected by the SZ-V. • According to GB 19436.3-2008, "if the maximum distance between the AOPDDR and the reference boundary is greater than 4.0 m, displacement of the detection zone greater than 100 mm shall be detected." In order to comply with this requirement for SZ-V, this may be achieved by limiting the width of the objects of the reference point to ≤ 200 mm. For the case where the maximum protection distance of the protection zone is over 4.0 m, this limitation must be followed. |
|---|---|

Example of access protection 2 (In case of approaching of the body or parts of the body to the hazardous area)

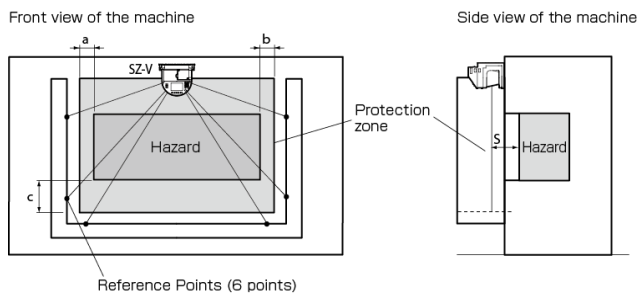

a, b, c: Width of protection zone in millimeters that covers the outside of opening to the hazard.
This must be more than $\{100-d/2\}$ mm.

■ Safety distance calculation method based on ISO13855 and IEC61496-3

Formula: $S = K \times T + C$

- S: Safety distance (mm)
- K: Approach speed of the body or parts of the body (mm/s)
- T: Overall Response time in second ($t_1 + t_2$)(s)
 - t1: SZ-V response time (s)
 - t2: Max. time required to stop the machine after receiving the OSSD signal from SZ-V (s) *
- C: Additional distance in millimeters $\{8 \times (d-14)\}$
 - d: SZ-V minimum detectable object size (mm)

* When using PROFIsafe or CIP Safety™, please add the communication and processing time required for the stop signal to reach the machine after the SZ-V "protection zone state" data changes to "0".

Example of safety distance calculation

$K = 2000$ mm/s Approach speed of the parts of the body, such as hands and arms.

$T = t_1 + t_2 = 0.20$ s Overall response time

$t_1 = 0.08$ s SZ-V response time (Changeable)

$t_2 = 0.12$ s Max. time required to stop the machine after receiving the OSSD signal from SZ-V

$C = 8 \times (d-14) = 48$ mm

$d = 20$ mm Minimum detectable object size (Changeable)

Safety Distance


$S = K \times T + C = 2000 \times 0.20 + 48 = 448$ mm

| | |
|--|--|
| | <ul style="list-style-type: none"> • Reference point monitoring function must be applied when the SZ-V is used for the access protection specified in IEC61496-3:2008 Annex A.12 and A.13 (the application where the angle of the approach exceeds $\pm 30^\circ$ to the detection plane). In this case, the tolerance for reference points must be ± 100 mm or less and the response time must be 90ms or less. "Reference Points Monitoring Function" (page 57) • If you configure the protection zone in order to protect the opening of the machine through which the machine operator can approach the hazardous area (hereinafter called as "opening to the hazard"), you must configure the protection zone with the additional width indicated by "a", "b" and "c" as shown in below figure, which is to be larger than the opening to the hazard. • In case of the application for detection of hand and arm approaching into the hazardous area, the minimum detectable object size must be 20mm, 30 mm or 40 mm. |
|--|--|



If "S" is found to be greater than 500 mm using this formula, you can use " $K=1,600$ mm/s". However, the minimum value of "S" shall not be less than 500 mm.

Example of installing on an AGV (automated guided vehicle)

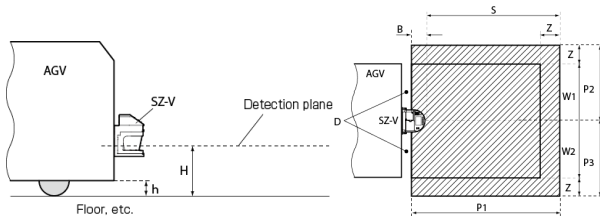


- P1, P2, P3 : Protection distances to be configured as the protection zones
W1, W2 : Width of the AGV
B: Distance between the front edge of the SZ-V and protection zone origin on the SZ-V
D: Unprotected space
H: Height of detection plane (protection zone) above the reference plane in millimeters, for example the floor. "H" must be less than 200 mm.

■ Safety distance calculation method based on ISO13855, IEC61496-3

Formula: $S = V \times T + S_{\text{brake}} \times L + Z$

- S: Safety distance (mm)
V: Maximum approach speed of the AGV (mm/s)
T: Overall Response time in second ($t_1 + t_2$)(s)
 t_1 : SZ-V response time (s)
 t_2 : Max. time required to stop the machine after receiving the OSSD signal from SZ-V (s) *
 S_{brake} : Required distance for braking AGV (mm)
L: Safety coefficient for required distance based on the wear of braking
Z: Additional distance $Z_{\text{SZ-V}} + Z_G$ (mm)
 $Z_{\text{SZ-V}}$: Additional SZ-V safety distance (mm)
 Z_G : Supplementary necessary distance, if "h" is not enough. (mm)
h: Space between the reference plane (floor) and the bottom of AGV. (mm)

If the "h" is not enough ensured, you must take into account the risk that the toe or toe tip is caught between the ground (floor) and the AGV. The relationship between "h" and "Z_G" is as follows.

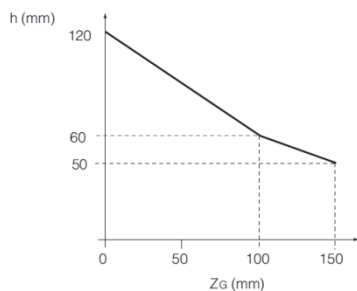

* When using PROFIsafe or CIP Safety™, please add the communication and processing time required for the stop signal to reach the machine after the SZ-V "protection zone state" data changes to "0".

Example of safety distance calculation

V = 1500 mm/s

T = $t_1 + t_2 = 0.22$ s

$t_1 = 0.12$ s

$t_2 = 0.1$ s

$S_{\text{brake}} = 1,300$ mm

L = 1.1

Z = $Z_{\text{SZ-V}} + Z_G = 100 + 100 = 200$ mm Additional distance (mm)

$Z_{\text{SZ-V}} = 100$ mm

$Z_G = 100$ mm

h = 60 mm

B = 58 mm

W1 = W2 = 1,000 mm

Overall response time

SZ-V response time (Changeable)

Max. time required to stop the machine after receiving the OSSD signal from SZ-V

Required distance for braking AGV

Safety coefficient for required distance based on the wear of braking

Additional distance (mm)

Additional safety distance of SZ-V

Supplementary necessary distance, if "h" is not enough.

Space between the reference plane (floor) and the bottom of AGV.

Distance between the front edge of the SZ-V and protection zone origin on the SZ-V

Width of AGV

Safety Distances

$S = V \times T + S_{\text{brake}} \times L + Z$

$= 1500 \times 0.22 + 1300 \times 1.1 + 200$

$= 1960$ mm

Protection distances to be configured as the protection zones

P1 = S + B = 2018 mm

P2 = W1 + Z = 1200 mm

P3 = W2 + Z = 1200 mm

| | |
|------------------------|---|
| <p>⚠ DANGER</p> | <ul style="list-style-type: none"> Additional countermeasures for protection must be provided if there is a space (D) between the protection zone and the protective structure that the minimum detectable object is not detected by the SZ-V. There is a risk of inadvertent undetected access beneath the detection plane (protection zone), if the height "H" of detection plane (protection zone) is greater than 200 mm. However, the height "H" should be 150 mm or more in order to detect the object with the height of 150 mm. The responsible personnel must perform the risk assessment with taking into account this factor in case of installation of the SZ-V. If necessary, the additional countermeasure must be taken by the responsible personnel. If there is a highly reflective background within 1.5 m from the boundary of the protection zone, another 200 mm must be added as supplementary necessary distance to the P1, P2 and P3 respectively. "Highly reflective backgrounds" (page 19) |
|------------------------|---|


3-3 Connecting Units

Connecting separate model units


When purchased individually, it is necessary to connect the Display unit, scanner head, and system memory.

- Reference**
- For the standard models, display unit, scanner head, and system memory are connected prior to shipping.
 - Please do not remove a packing on top of the connector part. Without the packing, specification of IP65 cannot be met anymore.


1. Connect the Display unit and scanner head with the connection cable.

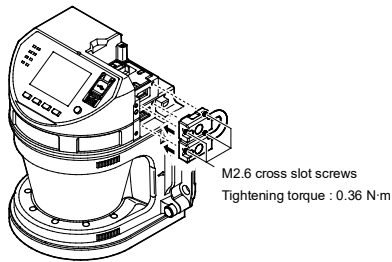


- Point** The connection cable can be connected to either the left or right side connector on the scanner head.

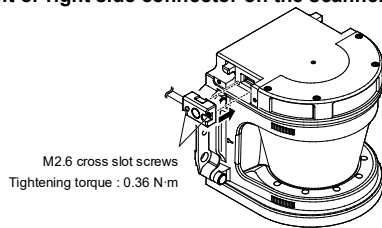

2. Connect the Display unit and System Memory.

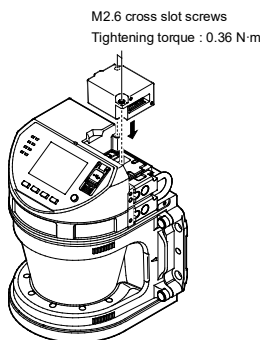


3. Connect the power cable to the display unit.

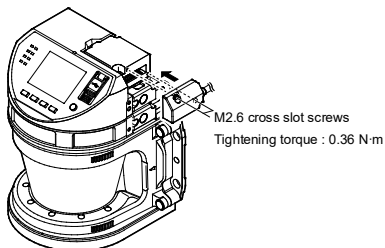


Adding Scanner Heads

Additional scanner heads require adding additional connection cables.

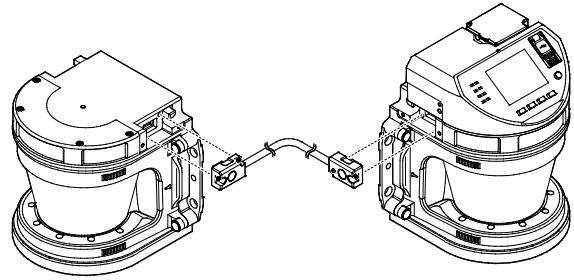

Adding scanner heads to a standard model

When adding a scanner head to a standard model, remove the metal plate that was attached at the time of shipping and attach the additional connection cable.

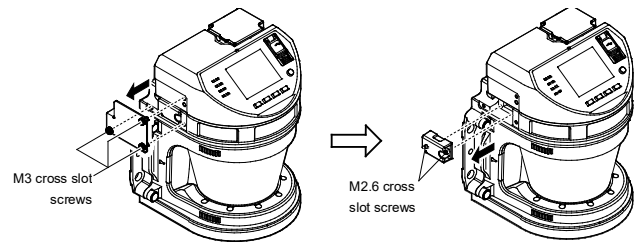

3-4 Mounting


Mounting for integrated setups

Wall mounting (direct mounting)

The four screw holes on the unit can be used for direct mounting. The appropriate screws must be purchased separately.

Recommended screw size: M6 (Thickness of SZ-V mounting part: 4.5mm)


Recommended tightening torque: 5.2 N·m

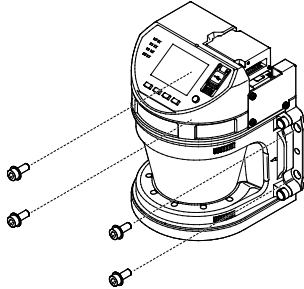


Mounting with adjustable angle mounting bracket (horizontal)

SZ-VB01

1. As shown in the figure, mount scanner head on the adjustable angle mounting bracket.
Adjust the position so that the position of the boss on the bracket meets the position of the hole on the scanner head.

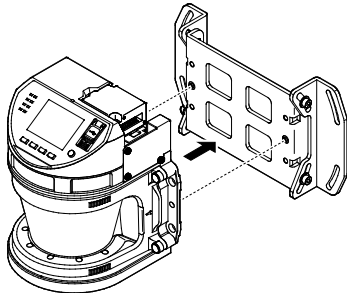

2. Secure the scanner head to the adjustable angle bracket using the attached four hex-screws.
Hex screw: Cross flat 4mm, length 12mm, M5
Recommended tightening torque: 3.0N·m

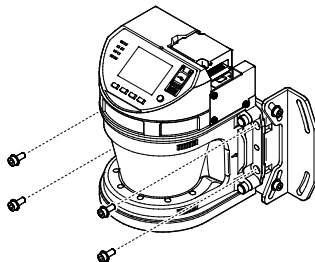

Screw to fix the bracket to a machine is not included. The appropriate screws must be purchased separately.


Recommended screw: M6 (mounting part thickness: 4mm)

Recommended tightening torque: 5.2N·m


Mounting with adjustable angle mounting bracket (vertical)

SZ-VB02

1. As shown in the figure, mount scanner head on the adjustable angle mounting bracket.
Adjust the position so that the position of the boss on the bracket meets the position of the hole on the scanner head.

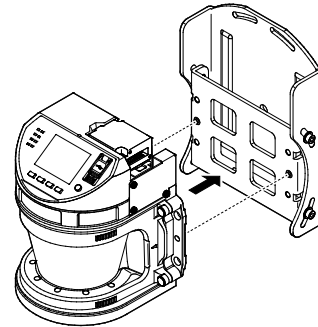

2. Secure the scanner head to the adjustable angle bracket using the attached four hex-screws.
Hex screw: Cross flat 4mm, length 12mm, M5
Recommended tightening torque: 3.0N·m

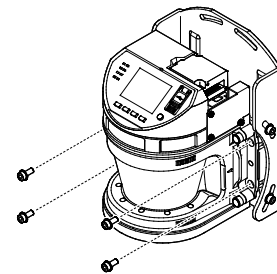


Screw to fix the bracket to a machine is not included. The appropriate screws must be purchased separately.

Recommended screw: M6 (mounting part thickness: 4mm)


Recommended tightening torque: 5.2N·m

Mounting with floor bracket SZ-VB03

1. As shown in the figure, mount scanner head on the floor mounting bracket.
Adjust the position so that the position of the boss on the bracket meets the position of the hole on the scanner head.

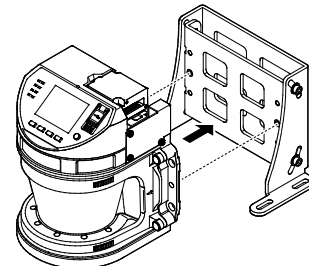

2. Secure the scanner head to the floor bracket using the attached four hex-screws.
Hex screw: Cross flat 4mm, length 12mm, M5
Recommended tightening torque: 3.0N·m

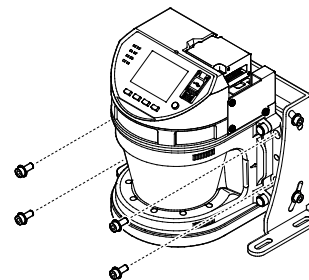

Screw to fix the bracket to a floor, etc is not included. The appropriate screws must be purchased separately.


Recommended screw: M6 (mounting part thickness: 4mm)

Recommended tightening torque: 5.2N·m


For separate setups: Mounting the Display unit

Mounting with display unit standard bracket SZ-VB11


1. As shown in the figure, connect power cable and connection cable to the display unit.

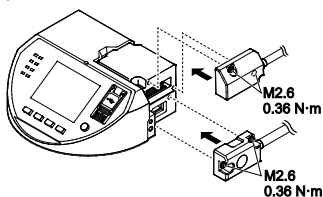


2. As shown in the figure, mount display unit on the bracket.

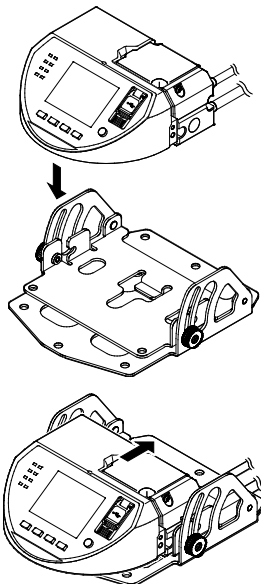


3. Fix display unit to the bracket using attached screws. Recommended tightening torque: 1.5N·m

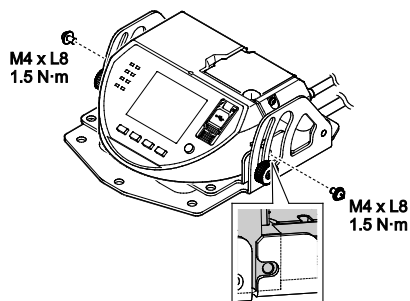


4. Mount the bracket.
 - (A) When mounting to a wall

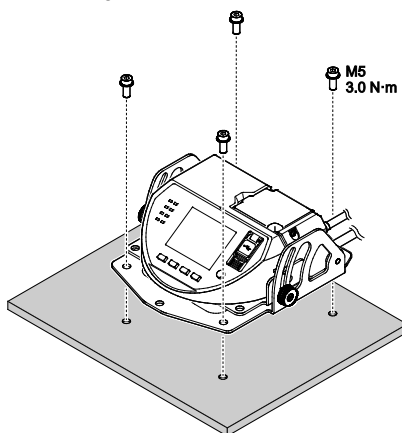

- (B) When mounting to an aluminum profile

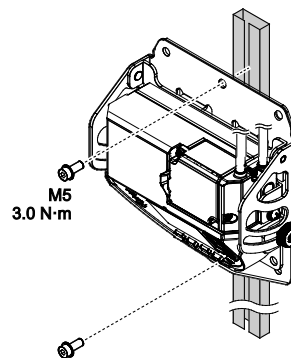


- (C) When mounting to a fence

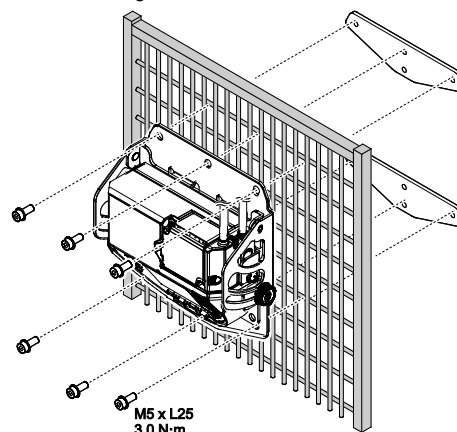


Screw dimension: M5 x L25
Recommended tightening torque: 3.0N·m

5. Adjust angle of display unit, if required.

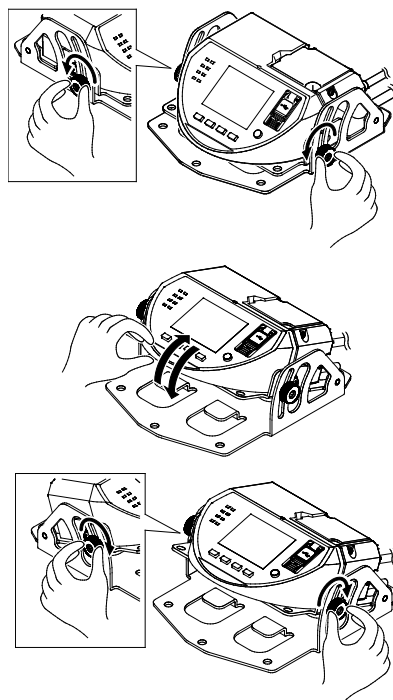


6. Fix display unit angle. Recommended tightening torque: 1.5N·m

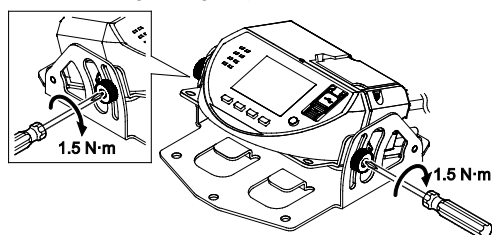


Mounting with display unit DIN rail mounting bracket (flat) (SZ-VB12)


1. As shown in the figure, mount bracket to DIN rail.

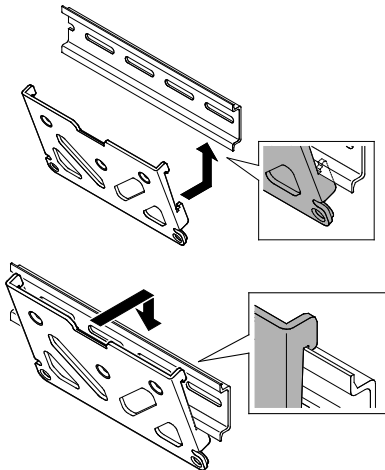


2. Fix the bracket to DIN rail using the attached screws.
Recommended tightening torque: 1.5N·m

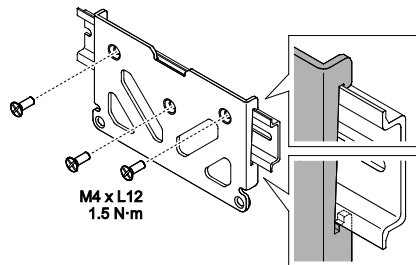


3. As shown in the figure, connect power cable and connection cable to the display unit.

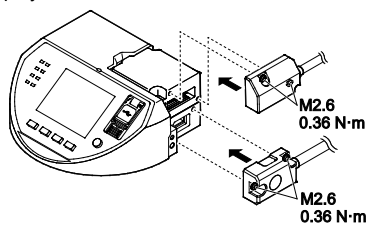


4. As shown in the figure, mount display unit on the bracket.

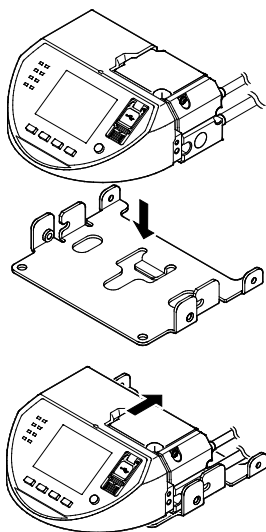


5. Fix display unit to the bracket using attached screws.
Recommended tightening torque: 1.5N·m

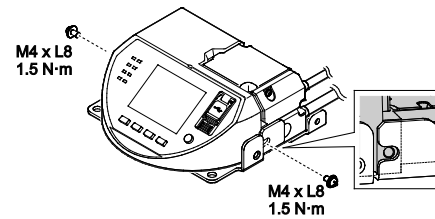

6. Mount the bracket with display unit to the bracket fixed on the DIN rail.

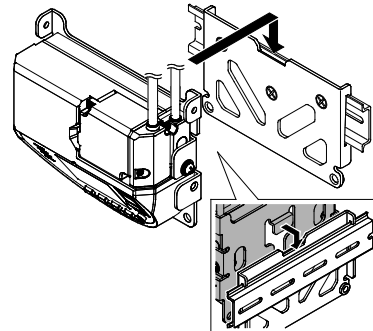


7. Fix the brackets together with attached screws.
Recommended tightening torque: 3.0N·m

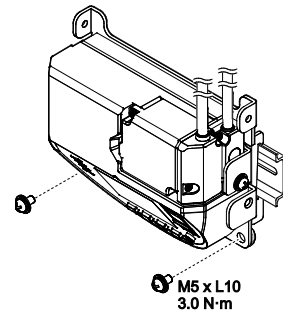


Mounting with display unit DIN rail mounting bracket (slim) SZ-VB13


1. As shown in the figure, mount bracket to DIN rail.

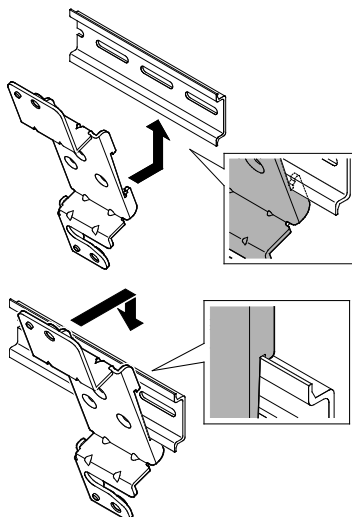


2. Fix the bracket to DIN rail using the attached screws.
Recommended tightening torque: 1.5N·m

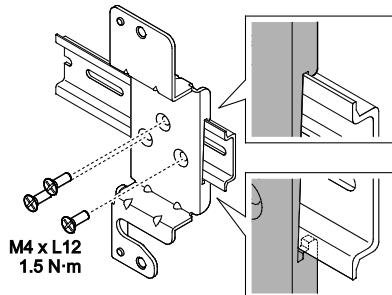


3. As shown in the figure, connect power cable and connection cable to the display unit.

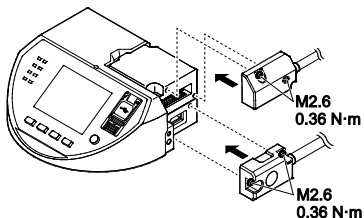


4. As shown in the figure, mount display unit on the bracket.

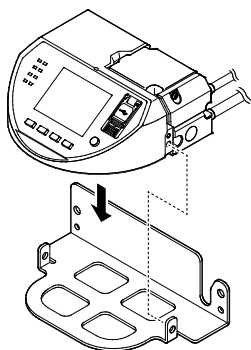


5. Fix display unit to the bracket using attached screws.
Recommended tightening torque: 1.5N·m

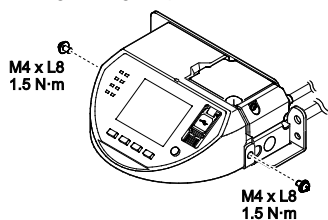

6. Mount the bracket with display unit to the bracket fixed on the DIN rail.

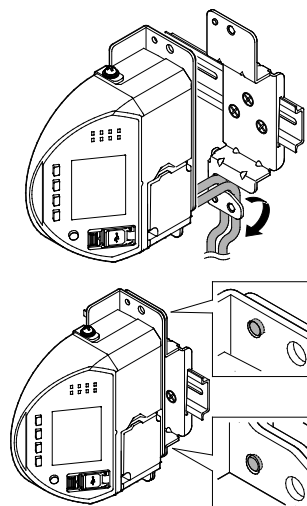

7. Fix the brackets together with attached screws.
Recommended tightening torque: 3.0N·m

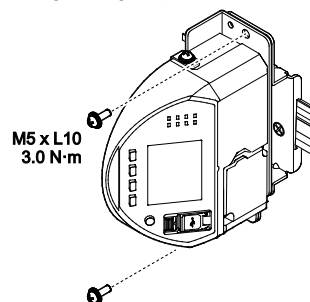


For separate setups or cascading: Mounting a scanner head


Mount the scanner head in the same manner as the integrated setup installation. The mounting brackets are also the same.

Mounting the protection cover


1. As shown in the figure, take away release paper on the bracket.

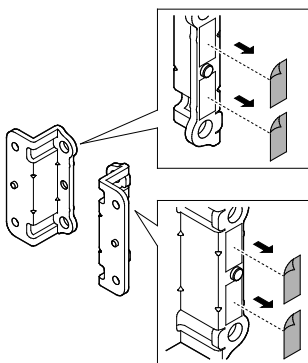


2. As shown in the figure, mount the bracket temporarily to scanner head using attached adhesive tape.

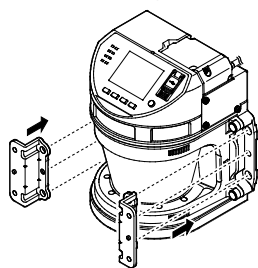


- 3.

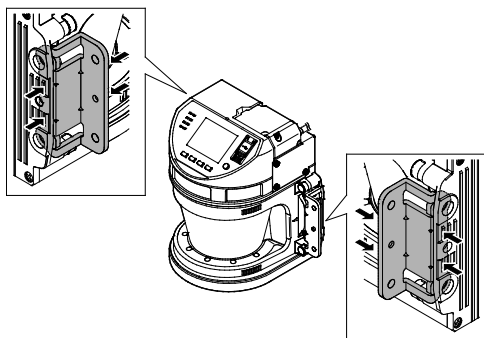

4. As shown in the figure, secure scanner head and temporarily fixed bracket to machine. Screw to fix the bracket to a machine is not included. The appropriate screws must be purchased separately. Recommended screw: M6 (mounting part thickness: 8mm)
Recommended tightening torque: 5.2N·m

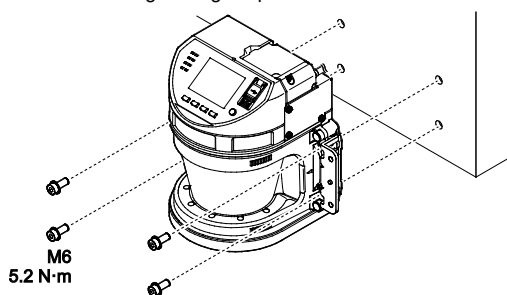

5. Recommended tightening torque: 3.0N·m

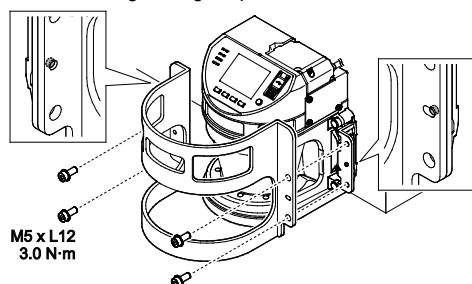

⚠ DANGER

Losing the screw caused by the vibration or shock to the SZ-V must be avoided. It may cause the displacement of detection plane of the SZ-V. Failure to follow this warning may result in a significant harm to the machine operators, including serious injury or death.

Reference

For more information on the dimensions of SZ-V or the mounting bracket, see "Dimensions" (page 133).

4. Wiring

- Always turn off the power to the SZ-V when performing electrical wiring.
- You must fulfill the electrical standards and regulations in the country or region in which the SZ-V is being used when you perform the electrical wiring.
- To avoid the risk of electric shock, do not connect any of the SZ-V inputs to DC power sources outside of the range of 24 V DC +20% or to any AC power source.
- To avoid the risk of electric shock, be sure that the hazardous voltage must be isolated from all wiring of the SZ-V with the reinforced insulation or double insulation.
- Do not install the electric wiring of the SZ-V together with or in parallel with the high-voltage electrical or power lines.
- For the wiring between SZ-V and a safety-related machine control system, both OSSD 1 and OSSD 2 must be always wired to a safety-related machine control system in order to ensure the safety. Similarly, both OSSD 3 and OSSD 4 must be always wired to a safety-related part of a machine control system if you assign a function for OSSD 3/4. If one OSSD is only wired to a safety-related machine control system, it results in a significant harm to the machine operators, including serious injury or death, due to OSSD malfunction.
- If you selected PNP/NPN select for PNP, do not cause short-circuit between the OSSD and +24V. Otherwise, OSSDs keep staying at the ON-state and it causes a dangerous situation.
- If you selected PNP/NPN select for PNP, be sure to connect the load between the OSSD and 0 V to avoid a dangerous situation. If the load is incorrectly connected between the OSSD and +24V, the logic of OSSD operation will be reversed, and then OSSD will turn to the ON-state when the SZ-V detects an object in the specified protection zone. This is a dangerous situation.
- If you selected PNP/NPN select for NPN, do not cause short-circuit between the OSSD and 0V. Otherwise, OSSDs keep staying at the ON-state and it causes a dangerous situation.
- If you selected PNP/NPN select for NPN, be sure to connect the load between the OSSD and +24V to avoid a dangerous situation. If the load is incorrectly connected between the OSSD and 0 V, the logic of OSSD operation will be reversed, and then OSSD will turn to the ON-state when the SZ-V detects an object in the specified protection zone. This is a dangerous situation.
- In case of wiring, you must fulfill the requirements of Clause 9.4.3 in IEC60204-1: 2005 in order to protect against malfunction due to an OSSD earth fault.
- The AUX output is not allowed to be used as a safety output for safety-related control systems. Usage of these functions as safety output could result in the serious injury or death.
- You cannot use the laser off input as safety output. Do not connect output from safety device that is part of the safety-related control system to the laser off input. If the laser off input is connected to the safety output, it may result in significant harm to machine operators, including serious injury or death.
- The connector cable must have a length less than or equal to the specification in this user's manual. Usage of connector cables longer than the specified length may cause the improper operation of safety functions and may cause a dangerous situation.

⚠ DANGER

Reference

If the power supply for the SZ-V is shared with the one for the machine or the other electronic devices, voltage reduction to the SZ-V or noise influence to the SZ-V may occur due to the temporary increasing of the current consumption on the machine or the other electronic devices. Since the SZ-V may go to the error state in such case, the power supply for the SZ-V should only be shared with the one for the load and muting devices. We do not recommend the power supply for the SZ-V is shared with the one for the machine or the other electronic devices.

4-1 Power Supply

If the power supply for the SZ-V is the converting type, the power supply for the SZ-V must meet the conditions listed below in order to meet the requirements specified in IEC61496-1, UL61496-1, and EN61496-1.

- (a) A rated output voltage of 24 V DC (SELV circuit, Overvoltage Category II) within $\pm 10\%$.
- (b) Double insulation or reinforced insulation between the primary and secondary circuits.
- (c) Output holding time of 20 ms or more.
- (d) A power supply must meet the requirements of the electrical safety and electromagnetic compatibility (EMC) regulations or standards in all countries and/or regions where the SZ-V is used.

▶ Important

If the power supply for the SZ-V is shared with the one for the machine or the other electronic devices, voltage reduction to the SZ-V or noise influence to the SZ-V may occur due to the temporary increasing of the current consumption on the machine or the other electronic devices. Since the SZ-V may go to the error state in such case, the power supply for the SZ-V should only be shared with the one for the load and muting devices. We do not recommend the power supply for the SZ-V is shared with the one for the machine or the other electronic devices.

4-2 Wire color and assigned function

- Depending on the Display unit model and functions used, the cable colors and assigned functions vary.
- The functions assigned to the AUX outputs can be changed in the settings.
- * The settings are configured in the SZ-V Configurator. For details on the settings procedure, see "Configuring the settings" (Page 74).

Wire color and assigned function of SZ-V04 type

- Depending on whether the functions below are used or not determines which of the six types of wiring patterns is used.
 - "Multi-OSSD Function" (page 54)
 - "Bank Switching Function" (page 49)
 - "Muting function" (page 55)

Pattern (1) to (3) OSSD3/4: Not used

| Wire color | Pattern (1) | Pattern (2) | Pattern (3) |
|--------------------|---|-----------------------------------|------------------------|
| Multi OSSD | Not used | Not used | Not used |
| Bank switching | Not used | Not used | Used (4 banks or less) |
| Muting | Not used | Used | Not used |
| Brown | +24 V | | |
| Blue | 0V | | |
| Black | OSSD 1 | | |
| White | OSSD 2 | | |
| Gray | Not used | | |
| Gray/Black | Not used | | |
| Yellow | Reset input / Laser off input | | |
| Red | EDM input | | |
| Light blue | Not used | Muting input 1 | Bank input A |
| Light blue / Black | Not used | Muting input 2 | Bank input a |
| Yellow / Black | Not used | Override input | Bank input B |
| Red / Black | Not used | Not use | Bank input b |
| Orange | AUX output 1 (State information output 1) | | |
| Orange / Black | AUX output 2 (State information output 2) | | |
| Pink | AUX output 3 | | |
| Pink / Black | AUX output 4 | | |
| Green | AUX output 5 | | |
| Green / Black | AUX output 6 | AUX output 6 (Muting lamp output) | AUX output 6 |

Pattern (4) to (6) OSSD3/4: Used

| Wire color | Pattern (4) | Pattern (5) | Pattern (6) |
|--------------------|---|------------------------|---|
| Multi OSSD | Used | Used | Used |
| Bank switching | Not used | Used (2 banks or less) | Used (4 banks or less, or independent bank switching) |
| Muting | Not used | Not used | Not used |
| Brown | +24 V | | |
| Blue | 0V | | |
| Black | OSSD 1 | | |
| White | OSSD 2 | | |
| Gray | OSSD 3 | | |
| Gray / Black | OSSD 4 | | |
| Yellow | Reset input (1/2) / Laser off input | | Bank input b |
| Red | EDM input (1/2) | | |
| Light blue | Not used | Bank input A | |
| Light blue / Black | Not used | Bank input a | |
| Yellow / Black | Reset input (3/4) | | Bank input B |
| Red / Black | EDM input (3/4) | | |
| Orange | AUX output 1 (State information output 1) | | |
| Orange / Black | AUX output 2 (State information output 2) | | |
| Pink | AUX output 3 | | |
| Pink / Black | AUX output 4 | | |
| Green | AUX output 5 | | |
| Green / Black | AUX output 6 | | |

Wire color and assigned function of SZ-V32 type

- The way the "Bank Switching Function" (page 49) is used determines which of the four types of wiring patterns is used.

Pattern (1) to (4)

| Wire color | Pattern (1) | Pattern (2) | Pattern (3) | Pattern (4) |
|------------------------|---|---|--|-------------------|
| Bank switching | Not used | Used | Used | Used |
| Bank switching method | | Single or Binary | | Encoder |
| Available no. of banks | | Single: 8 banks or less Binary: 16 banks or less | Single: 10 banks or less Binary: 32 banks or less | |
| Brown | +24 V | | | |
| Blue | 0V | | | |
| Black | OSSD 1 | | | |
| White | OSSD 2 | | | |
| Gray | AUX output 1 (State information output) | | | |
| Gray / Black | AUX output 2 (State information output) | | | |
| Yellow | Reset input / Laser off input | | | |
| Red | EDM input | | | |
| Light blue | Not used | Bank input A | | |
| Light blue / Black | Not used | Bank input a | | |
| Yellow / Black | Not used | Bank input D | | Encoder input 1A |
| Red / Black | Not used | Bank input d | | Encoder input 2A |
| Orange | Not used | Bank input B | | |
| Orange / Black | Not used | Bank input b | | |
| Pink | Not used | Bank input C | | Encoder input 1B |
| Pink / Black | Not used | Bank input c | | Encoder input 2B |
| Green | AUX output 3 | | Bank input E | Encoder input 1A- |
| Green / Black | AUX output 4 | | Bank input e | Encoder input 2A- |

Wire color and assigned function of SZ-V32N type

■ When PROFIsafe is not used

- Depending on whether the functions below are used or not determines which of the five types of wiring patterns is used.
 - "Bank Switching Function" (page 49)
 - "Muting function" (page 55)

Patterns 1 and 2 when not using bank switching

| Wire color | Pattern (1) | Pattern (2) |
|-----------------------------|---|-----------------------------------|
| Bank switching | Not used | Not used |
| Muting | Not used | Used |
| Brown | +24 V | |
| Blue | 0V | |
| Black | OSSD 1 | |
| White | OSSD 2 | |
| Gray | AUX output 1 (State information output 1) | |
| Gray / Black | AUX output 2 (State information output 2) | |
| Yellow (Input1) | Reset input / Laser off input | |
| Red (Input2) | EDM input | |
| Light blue (Input3) | Not used | Muting input 1 |
| Light blue / Black (Input4) | Not used | Muting input 2 |
| Yellow / Black (Input5) | Not used | Override input |
| Red / Black (Input6) | Not used | |
| Orange (Input7) | Not used | |
| Orange / Black (Input8) | Not used | |
| Pink (Input9) | Not used | |
| Pink / Black (Input10) | Not used | |
| Green | AUX output 3 | |
| Green / Black | AUX output 4 | AUX output 4 (Muting lamp output) |

Patterns 3 to 5 when using bank switching

| Wire color | Pattern (3) | Pattern (4) | Pattern (5) |
|------------------------------|---|--|-------------------|
| Bank switching | Used | Used | Used |
| Bank switching method | Single or binary | | Encoder |
| Available number of banks | Single: 8 banks or less Binary: 16 banks or less | Single: 10 banks or less Binary: 16 banks or less | |
| Muting | Not used | Not used | Not used |
| Brown | +24 V | | |
| Blue | 0V | | |
| Black | OSSD 1 | | |
| White | OSSD 2 | | |
| Gray | AUX output 1 (State information output 1) | | |
| Gray / Black | AUX output 2 (State information output 2) | | |
| Yellow (Input1) | Reset input / Laser off input | | |
| Red (Input2) | EDM input | | |
| Light blue (Input3) | Bank input A | | |
| Light blue / Black (Input4) | Bank input a | | |
| Yellow / Black (Input5) | Bank input D | | Encoder Input 1A |
| Red / Black (Input6) | Bank input d | | Encoder Input 2A |
| Orange (Input7) | Bank input B | | |
| Orange / Black (Input8) | Bank input b | | |
| Pink (Input9) | Bank input C | | Encoder Input 1B |
| Pink / Black (Input10) | Bank input c | | Encoder Input 2B |
| Green (AUX3/Input11) | AUX output 3 | Bank input E | Encoder Input 1A- |
| Green / Black (AUX4/Input12) | AUX output 4 | Bank input e | Encoder Input 2A- |

■ When PROFIsafe is used


| Wire color | Function |
|------------|----------|
| Brown | +24 V |
| Blue | 0V |

* When using PROFIsafe, use the dedicated PROFIsafe power cable (SZ-VP10PW). When using a non-PROFIsafe power cable, please note that all non-power wires will be deactivated.

Wire color and assigned function of SZ-V32NC type

| Wire color | Function |
|------------|----------|
| Brown | +24 V |
| Blue | 0V |

Wire color and assigned function when the power cable extension (M12 4-pin) is used

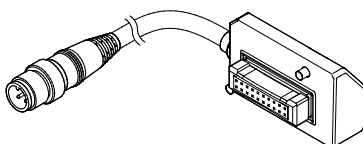

M12 connector pin layout



| Pin number | Color | Function |
|------------|-------|----------|
| (1) | Brown | +24 V |
| (2) | White | OSSD2 |
| (3) | Blue | 0V |
| (4) | Black | OSSD1 |

4-3 Examples of wiring

Functions differ depending on the Display unit model that is selected. Wiring differs depending on the functions that are used. The type of wiring that will need to be performed is determined by the procedure below.

1. Select the type that is to be used (SZ-V04 type, SZ-V32 type, and SZ-V32N type)
2. Select the functions that are going to be used. Determine the appropriate wiring pattern to use and the detailed connection method.

Wiring for the SZ-V04 type

Determining the wiring pattern to use

1. Depending on whether the functions below are used or not determines which of the six types of wiring patterns is used.

- "Bank Switching Function" (page 49)
- "Multi-OSSD Function" (page 54)
- "Muting function" (page 55)

| | Pattern (1) | | Pattern (2) | Pattern (3) | Pattern (4) | Pattern (5) | Pattern (6) | |
|-------------------------|------------------------|------------------------|------------------------|------------------------|-------------|------------------------|------------------------|----------------------------|
| OSSD3/4 function | Not used | | Not used | Not used | Multi-OSSD | Multi-OSSD | Multi-OSSD | Independent bank switching |
| Bank switching function | Not used | | Not used | Not used | Not used | Used (2 banks or less) | Used (4 banks or less) | Used (2 banks) |
| Muting | Not used | | Used | Not used | Not used | Not used | Not used | Not used |
| Examples of wiring | Example 1 (Page 33) | Example 2 (Page 34) | Example 3 (Page 34) | Example 4 (Page 35) | | Example 5 (Page 35) | Example 6 (Page 36) | |


2. The detailed connection method differs depending on whether the functions below are used or not.

- "Select PNP or NPN" (page 46)
- "Interlock function" (page 47)
- "EDM Function" (page 48)

SZ-V04 wiring example 1

OSSD3/4 Not used
Bank switching Not used
Muting Not used
Interlock Not used
EDM Not used


PNP/NPN wiring example

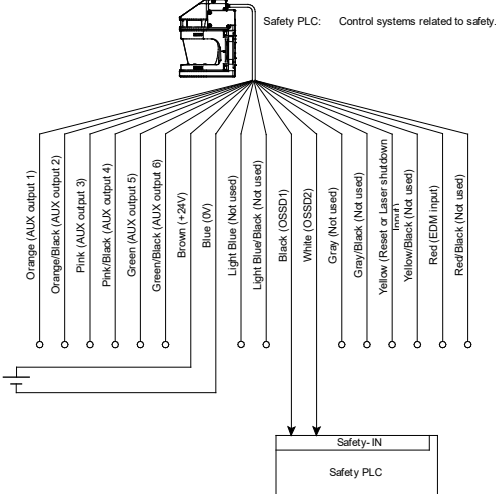

SZ-V04 wiring example 2

| | |
|----------------|----------|
| OSSD3/4 | Not used |
| Bank switching | Not used |
| Muting | Not used |
| Interlock | Used |
| EDM | Used |


PNP wiring example

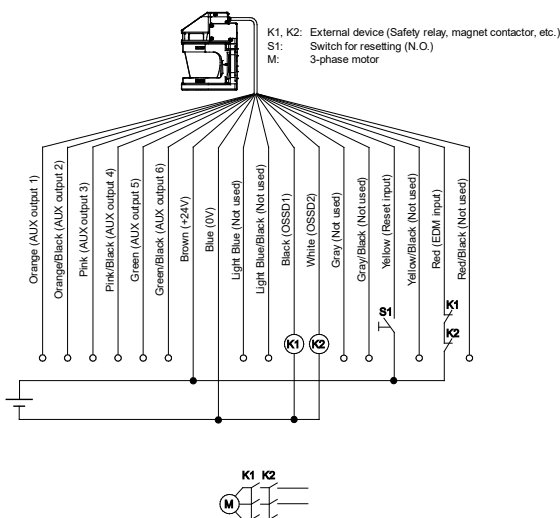


SZ-V04 wiring example 3

| | |
|----------------|-------------------------------|
| OSSD3/4 | Not used (usage not possible) |
| Bank switching | Not used (usage not possible) |
| Muting | Used |
| Interlock | Used |
| EDM | Used |


PNP wiring example

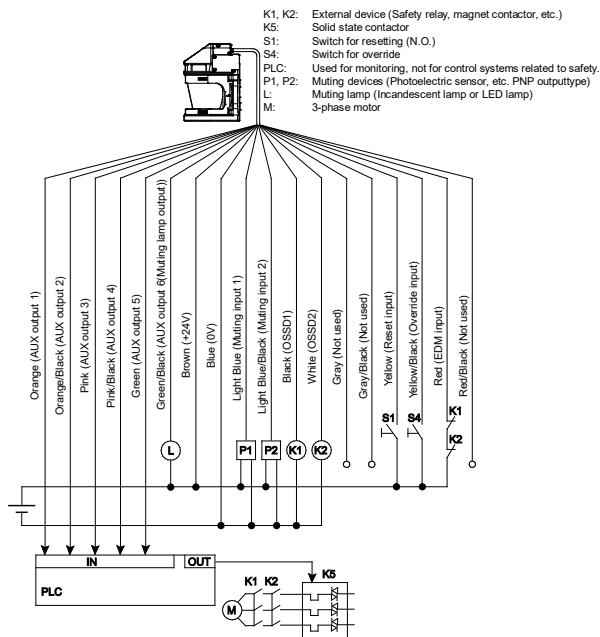

NPN wiring example

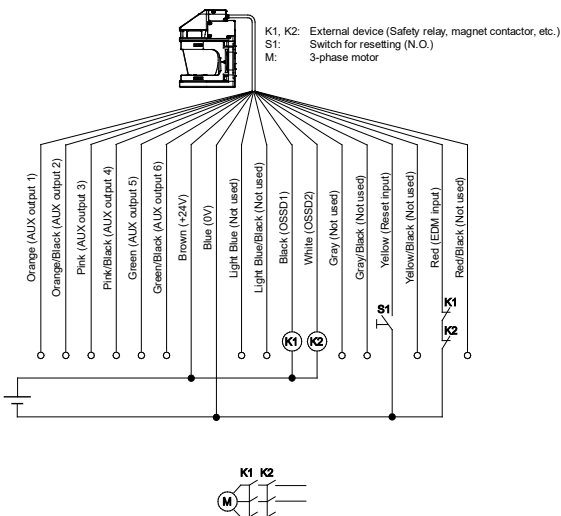


NPN wiring example

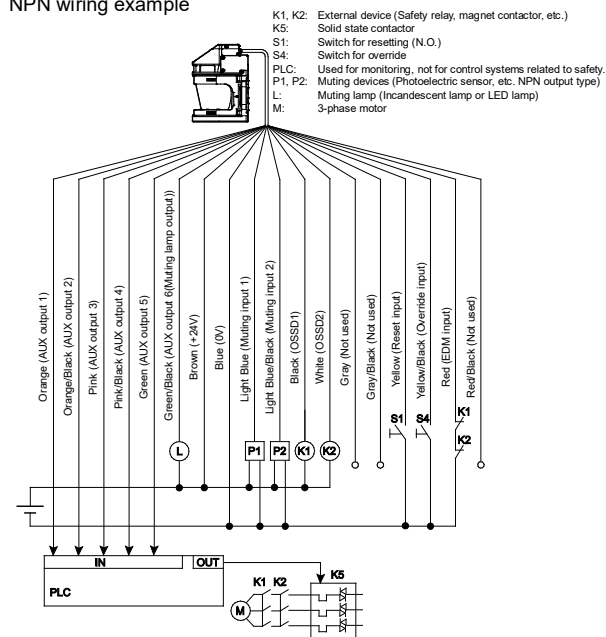


SZ-V04 wiring example 4

| | |
|----------------|-------------------------------|
| OSSD3/4 | Not used |
| Bank switching | Used |
| Muting | Not used (usage not possible) |
| Interlock | Used |
| EDM | Used |

PNP wiring example

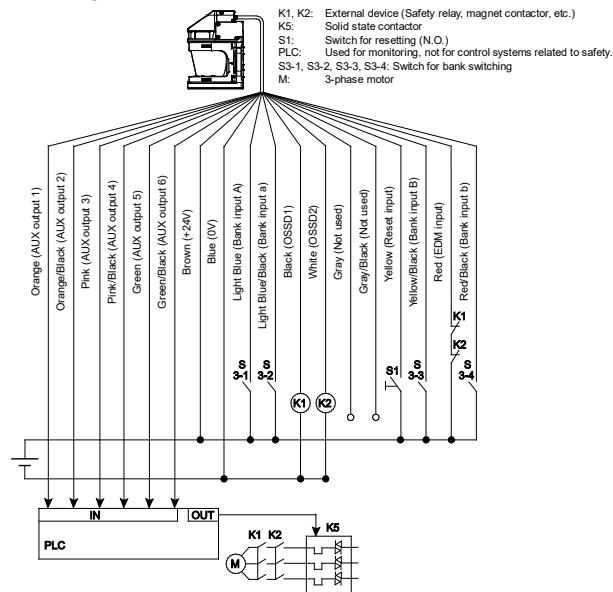


NPN wiring example

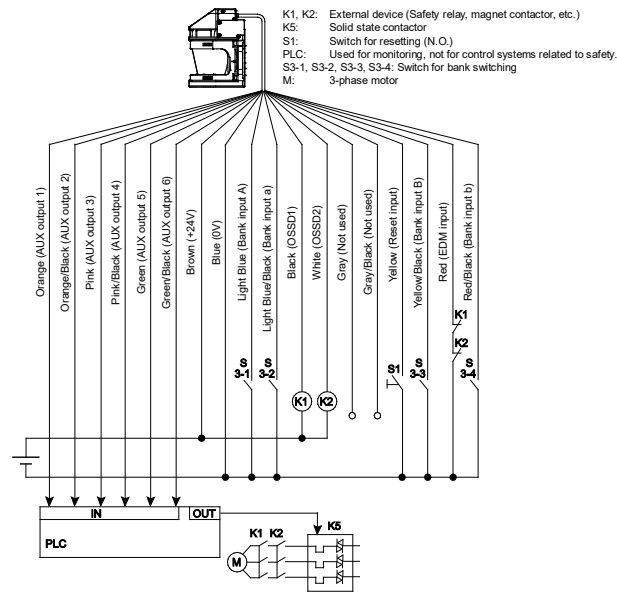


SZ-V04 wiring example 5

| | |
|----------------|-------------------------------|
| OSSD 3/4 | Multi-OSSD function |
| Bank switching | Used |
| Muting | Not used (usage not possible) |
| Interlock | Used |
| EDM | Used |

PNP wiring example

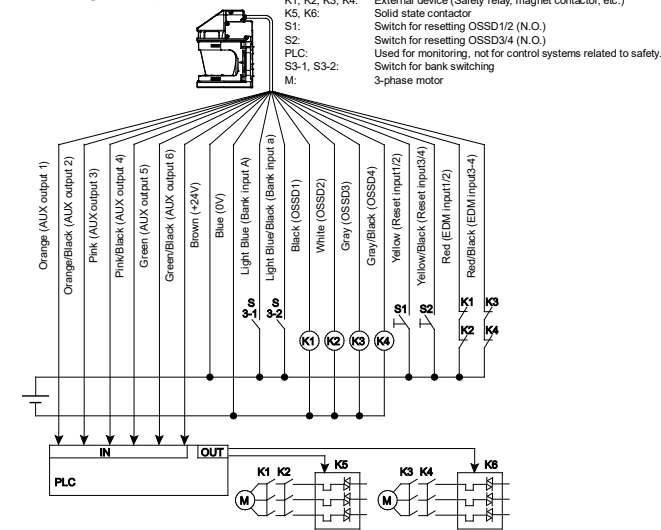


NPN wiring example

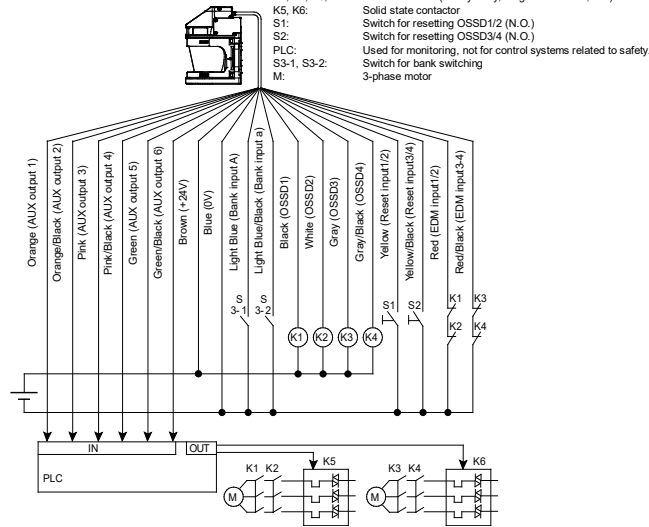


SZ-V04 wiring example 6

| | |
|----------------|-------------------------------|
| OSSD3/4 | Independent bank switching |
| Bank switching | Used |
| Muting | Not used (usage not possible) |
| Interlock | Not used (usage not possible) |
| EDM | Used |

PNP wiring example

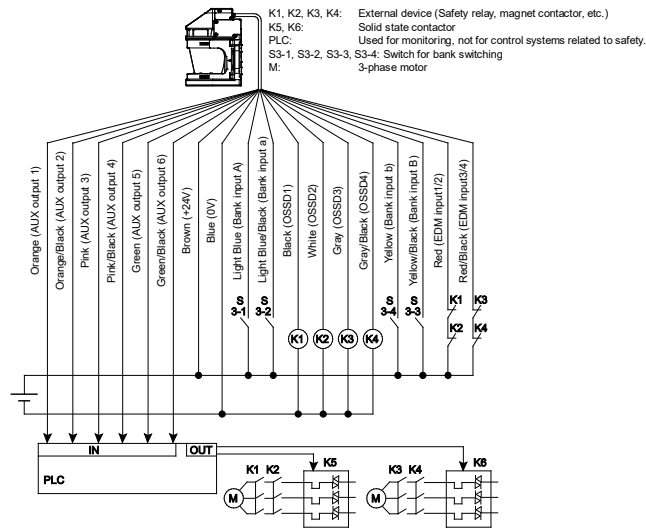

NPN wiring example

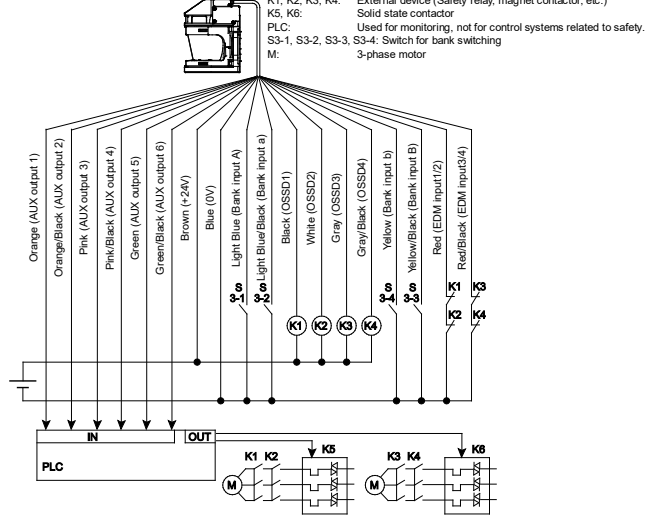

Wiring for the SZ-V32 type

Determining the wiring pattern to use

1. Depending on how the “Bank Switching Function” (page 38) is used determines which of the four types of wiring patterns is used. “Bank Switching Function” (page 49)

| | Pattern (1) | Pattern (2) | Pattern (3) | Pattern (4) |
|---------------------------|---------------------|---|---|---------------------------------|
| Bank switching | Not used | Used | Used | Used |
| Bank switching method | | Switching through wiring input (single input or binary input) | Switching through wiring input (single input or binary input) | Switching through encoder input |
| Available number of banks | | Single: 8 banks or less Binary: 16 banks or less | Single: 10 banks or less Binary: 32 banks or less | |
| Examples of wiring | Example 1 (Page 37) | Example 2 (Page 38) | Example 3 (Page 38) | Example 4 (Page 39) |


2. The detailed connection method differs depending on whether the functions below are used or not.

- “Select PNP or NPN” (page 46)
- “Interlock function” (page 47)
- “EDM Function” (page 48)

SZ-V32 wiring example 1

Bank switching Not used
Interlock Not used
EDM Not used


PNP/NPN wiring example

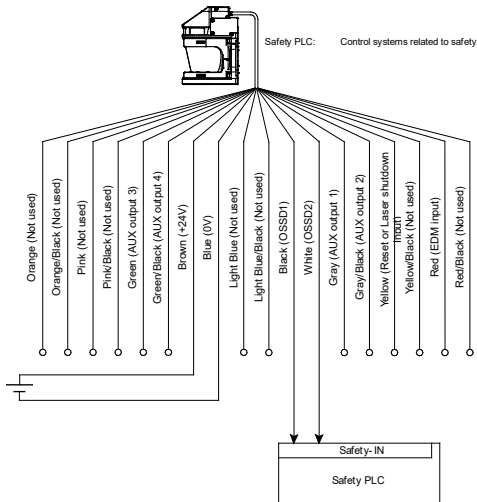


SZ-V32 wiring example 2

| | |
|-------------------------|---|
| Bank switching | Used |
| Bank switching method | Switching through wiring input |
| Number of banks to used | Single input: 8 or less Binary input: 16 or less |
| Interlock | Used |
| EDM | Used |

PNP wiring example

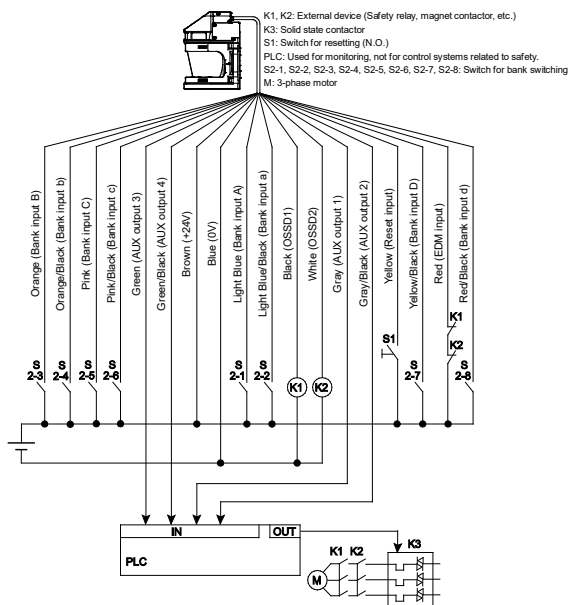


NPN wiring example

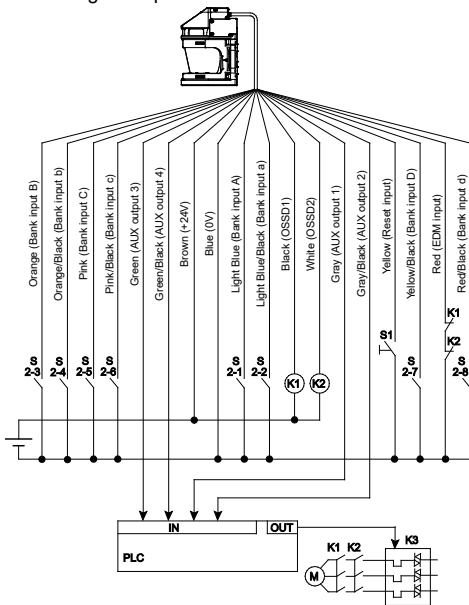


SZ-V32 wiring example 3

| | |
|-------------------------|---|
| Bank switching | Used |
| Bank switching method | Switching through wiring input |
| Number of banks to used | Single input: 9, 10 Binary input: 17 to 32 |
| Interlock | Used |
| EDM | Used |

PNP wiring example

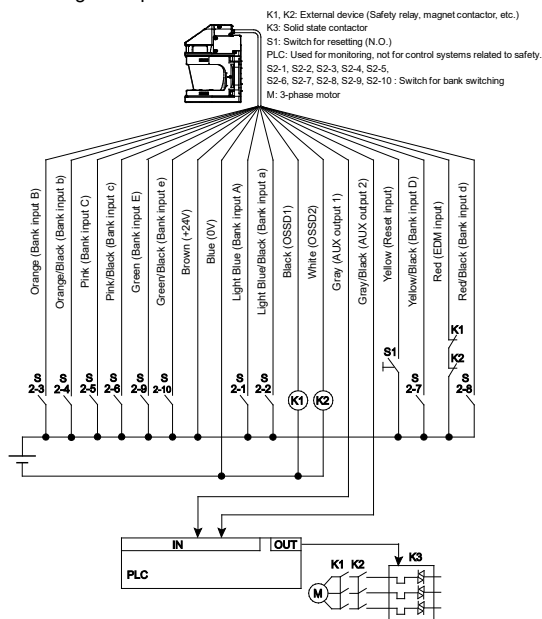

NPN wiring example

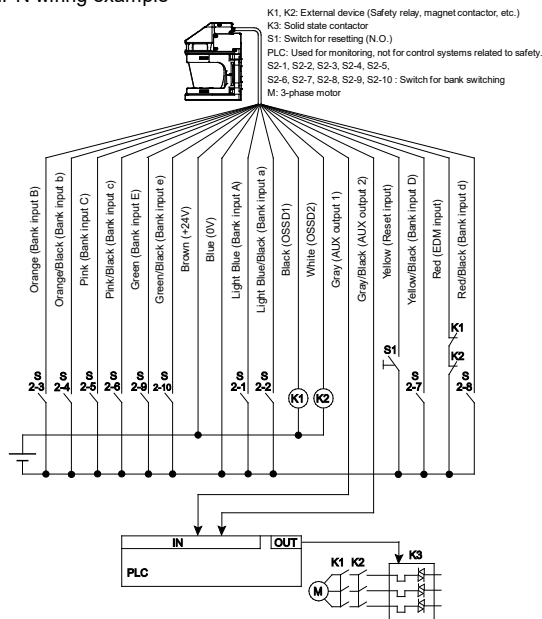

| | |
|-----------------------|---------------------------------|
| Bank switching | Used |
| Bank switching method | Switching through encoder input |
| Interlock | Used |
| EDM | Used |

K1, K2: External device (Safety relay, magnet contactor, etc.)
K3: Solid state contactor
S1: Switch for resetting (N.O.)
PLC: Used for monitoring, not for control systems related to safety.
E1, E2: Rotary encoder
S2-1, S2-2, S2-3, S2-4 : Switch for bark switching
M: 3-phase motor



K1, K2: External device (Safety relay, magnet contactor, etc.)
K3: Solid state contactor
S1: Switch for resetting (N.O.)
PLC: Used for monitoring, not for control systems related to safety.
E1, E2: Rotary encoder
S2-1, S2-2, S2-3, S2-4 : Switch for bank switching
M: 3-phase motor



Determining the wiring pattern to use

- Depending on whether the functions below are used or not determines which of the six types of wiring patterns is used.
 - “Bank Switching Function” (page 49)
 - “Muting function” (page 55)
 - PROFI-safe communication

| | Pattern (1) | Pattern (2) | Pattern (3) | Pattern (4) | Pattern (5) | Pattern (6) |
|---------------------------|---------------------|---------------------|---|---|---------------------------------|---------------------|
| PROFI-safe | Not use | Not use | Not use | Not use | Not use | Used |
| Bank switching | Not used | Not used | Used | Used | Used | |
| Bank switching method | | | Switching through wiring input (single input or binary input) | Switching through wiring input (single input or binary input) | Switching through encoder input | |
| Available number of banks | | | Single: 8 banks or less Binary: 16 banks or less | Single: 10 banks or less Binary: 32 banks or less | | |
| Muting | Not used | Used | Not used | Not used | Not used | |
| Examples or wiring | Example 1 (Page 40) | Example 2 (Page 41) | Example 3 (Page 41) | Example 4 (Page 42) | Example 5 (Page 42) | Example 6 (Page 43) |


- The detailed connection method differs depending on whether the functions below are used or not.

- “Select PNP or NPN” (page 46)
- “Interlock function” (page 47)
- “EDM Function” (page 48)

SZ-V32N wiring example 1

Bank switching Not used
Muting Not used
Interlock Not used
EDM Not used


PNP/NPN wiring example

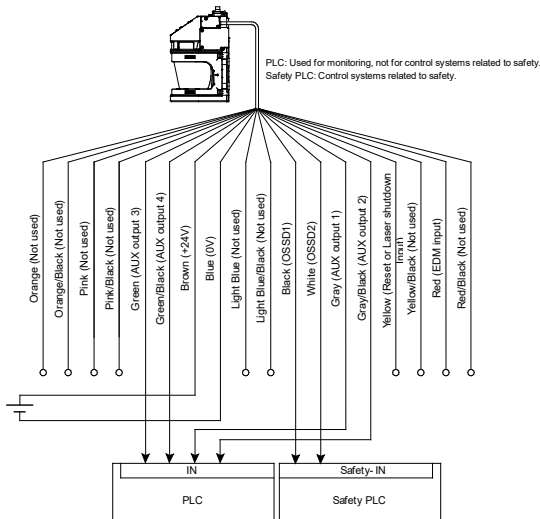


SZ-V32N wiring example 2

| | |
|----------------|-------------------------------|
| Bank switching | Not used (usage not possible) |
| Muting | Used |
| Interlock | Not used |
| EDM | Not used |

PNP wiring example

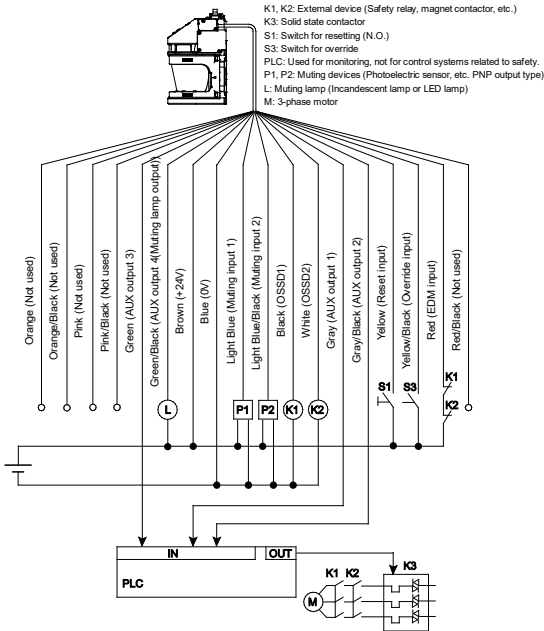


NPN wiring example

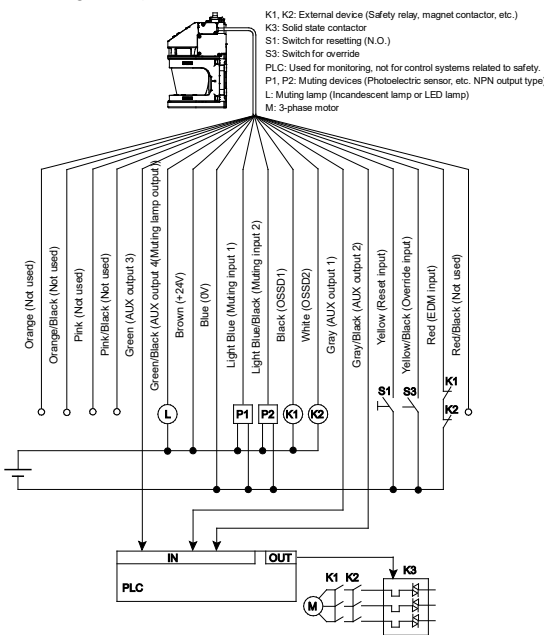


SZ-V32N wiring example 3

| | |
|-------------------------|---|
| Bank switching | Used |
| Bank switching method | Switching through wiring input |
| Number of banks to used | Single input: 8 or less Binary input: 16 or less |
| Muting | Not used (usage not possible) |
| Interlock | Not used |
| EDM | Not used |

PNP wiring example

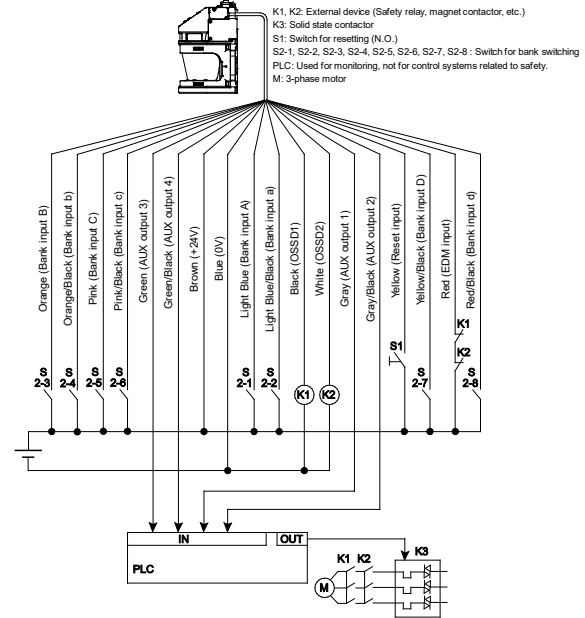


NPN wiring example

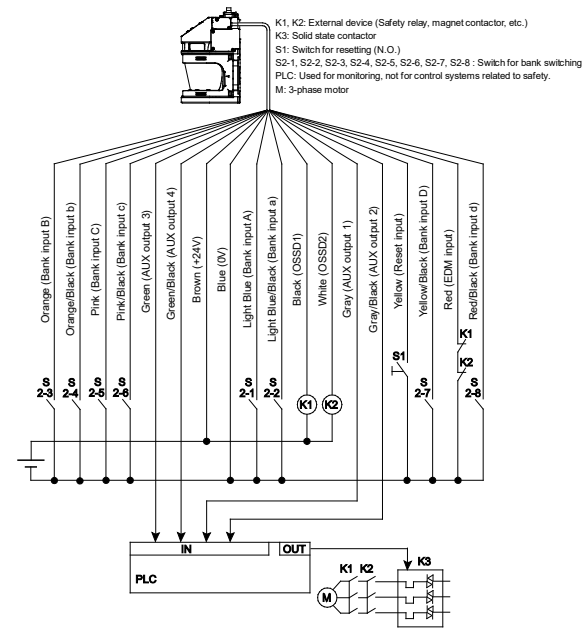


SZ-V32N wiring example 4

| | |
|-------------------------|---|
| Bank switching | Used |
| Bank switching method | Switching through wiring input |
| Number of banks to used | Single input: 9, 10 Binary input: 17 to 32 |
| Muting | Not used (usage not possible) |
| Interlock | Not used |
| EDM | Not used |

PNP wiring example

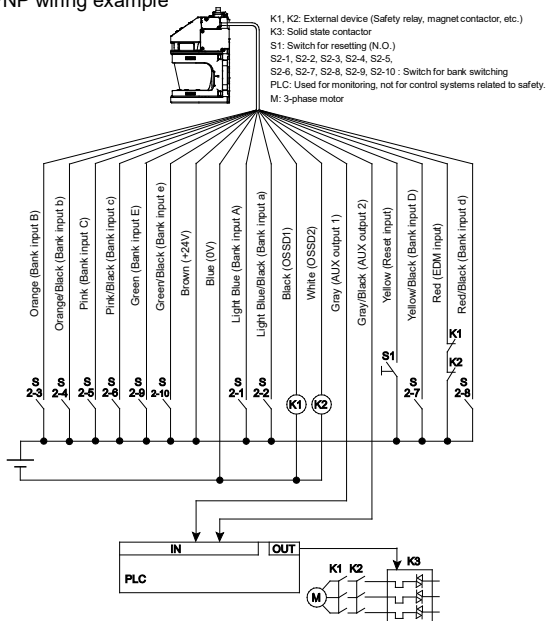


NPN wiring example

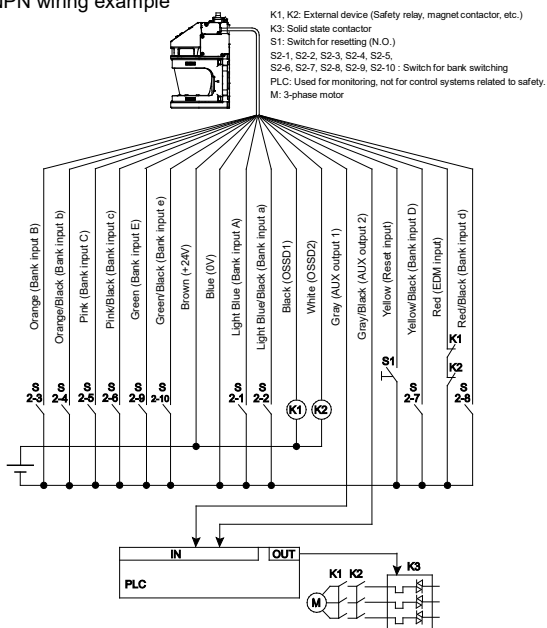


SZ-V32N wiring example 5

| | |
|-----------------------|---------------------------------|
| Bank switching | Used |
| Bank switching method | Switching through encoder input |
| No. of banks to used | (no restrictions) |
| Muting | Not used (usage not possible) |
| Interlock | Not used |
| EDM | Not used |

PNP wiring example

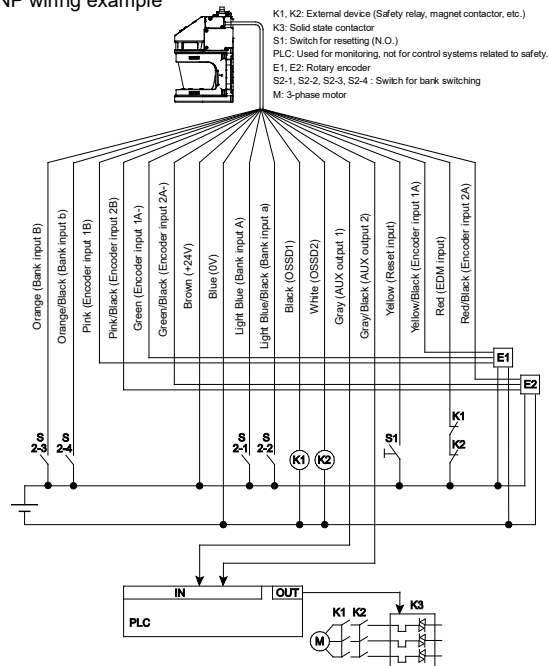


NPN wiring example

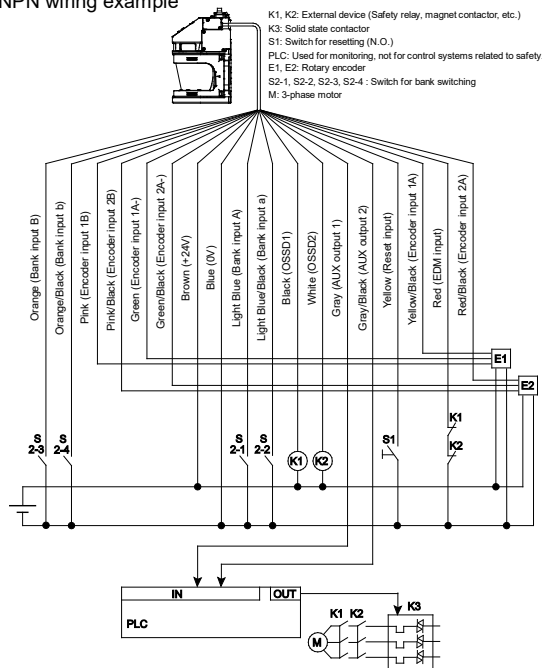


SZ-V32N wiring example 6

PROFIsafe : Used

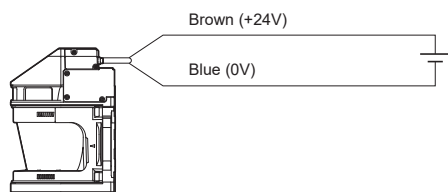


Wiring for the SZ-V32NC type

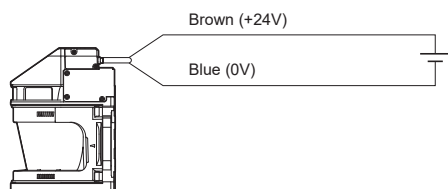


4-4 Input and Output Circuit

OSSD output circuit (Safety output)

PNP output

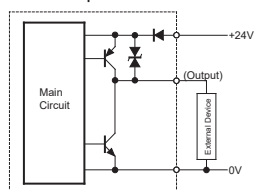


NPN output

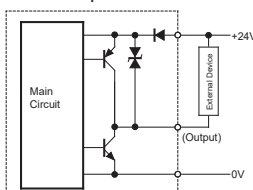


AUX output circuit

Common for both PNP and NPN output

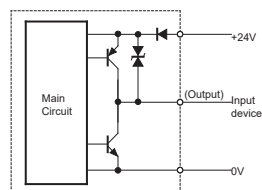

Muting lamp output circuit


NPN output

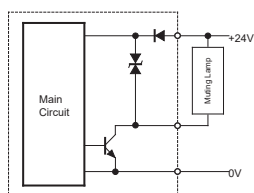


*Muting lamp output will always be a NPN output regardless of PNP/NPN selection.

Input circuit

PNP input

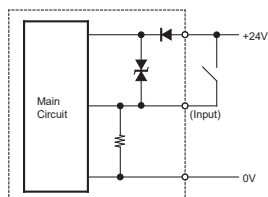

NPN input

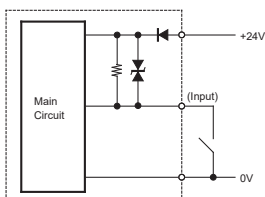

5. Basic Functions

5-1 OSSD/ "Protection Zone State" Data

The OSSD is a safety output for the safety-related part of a machine control system.

When the SZ-V detects an object (someone or something) in the protection zone, the OSSD goes to the OFF-state. "Protection zone" (page 17)
OSSD 1/2 is a pair of safety outputs that performs the output in the same state. Similarly, OSSD 3/4 is also a pair of safety outputs that performs the output in the same state.

The SZ-V generates self-diagnosis signals on its internal control circuit to perform diagnostics on the OSSD. These signals periodically force the OSSD into a temporary OFF-state when the OSSD is in the ON-state (when the SZ-V detects no objects in the protection zone.).

The internal control circuit receives a feed-back signal (OFF-signal) based on the self-diagnosis, the SZ-V determines that its OSSD is operating normal. If the OFF-signal is not returned to the internal control circuit, the SZ-V determines that there is a problem with the OSSD or wiring and goes to the error state.

The SZ-V32N type can utilize PROFI-safe communication and the SZ-V32NC type can utilize CIP Safety™ communication over EtherNet/IP™. When using PROFI-safe, the OSSDs cannot be used. The SZ-V32NC type does not have OSSDs. "Protection zone A state" of PROFI-safe or CIP Safety™ communication data is equivalent to the signals OSSD1/2 and "Protection zone B state" is equivalent to the signals OSSD3/4. The "Protection zone state" data can be used as the safety output for the safety-related part of a machine control system.

The number of OSSDs available depends on the SZ-V type.

| Type | OSSD 1 | OSSD2 | OSSD3 ^{*1} | OSSD4 ^{*1} |
|--------------|--------|-------|---------------------|---------------------|
| SZ-V04 type | ○ | | | ○ |
| SZ-V32 type | ○ | | | |
| SZ-V32N type | ○ | | | |

^{*1} For more information about OSSD3/4, see "Multi-OSSD Function" (page 54).

OSSD operation and "Protection zone state" data

Depending on the state of the SZ-V, the state of the OSSD differs.

| SZ-V State | OSSD state | "Protection zone state" data |
|----------------------------|---|------------------------------|
| Starting | OFF | 0 |
| Normal operation | ON. | 1 |
| | However, it turns OFF or to 0 in the following conditions: 1. A person or object is detected in the protection zone(s) by any of the scanner heads ^{*1} 2. A reference point is not detected by one of the scanner heads ^{*1} 3. It is in the laser off state 4. The laser shutdown bank is selected 5. It is in the interlock-reset-ready state 6. It is in the waiting for bank input state 7. During ON-delay | |
| Error State | OFF | 0 |
| Other states ^{*2} | OFF | 0 |


^{*1} When multi-OSSD is being used, any scanner head that is linked with that OSSD.

^{*2} Other states refers to any of the following states:

- Waiting for configuration
- Transferring settings
- Calibrating the window
- Clearing system configuration information
- Testing AUX output
- Changing the password
- Initializing
- Other cases where detection is not performed

Point The alert state does not affect the OSSD state and the "Protection zone state"

Timing chart for self-diagnosis pulse

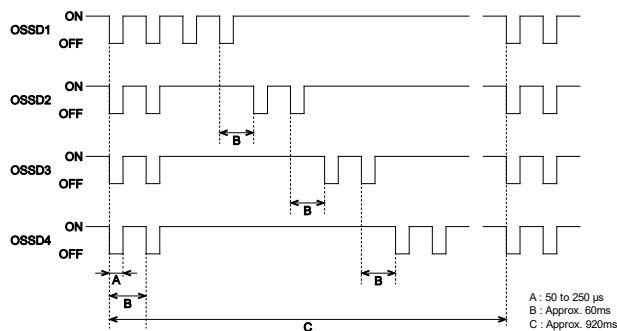

- ⚠ DANGER**
- For the wiring to a safety-related machine control system, the output of both OSSD 1 and OSSD 2 must be used by the safety-related machine control system in order to create a safety system.
 - Similarly, the output of both OSSD 3 and OSSD 4 must be used a machine control system if you assign a function to either OSSD 3 or 4.
 - If one OSSD is only wired to a safety-related machine control system, it results in a significant harm to the machine operators, including serious injury or death, due to OSSD malfunction.

Important The devices connected to the OSSD, such as safety relay or contactor, should not respond to these temporary, self-diagnostic OFF-signals.

Reference For the input and output circuit diagram, see "Input and Output Circuit" (page 43).

5-2 Operation modes

In the SZ-V, two types of operation modes can be chosen from in accordance with the application.

| Operation mode | Standard Mode (Default Setting) | High Speed Mode |
|----------------|--|--|
| Advantages | <ul style="list-style-type: none"> • The maximum protection zone can be large • Not easily affected by suspended matter such as dust | <ul style="list-style-type: none"> • The response time can be faster |
| Disadvantages | <ul style="list-style-type: none"> • The response time is slower | <ul style="list-style-type: none"> • The maximum protection zone is smaller |


Reference The size of the maximum protection zone differs depending on the minimum detectable object settings as well. "Minimum detectable object" (page 45)


5-3 Minimum detectable object

The minimum detectable object size can be selected for the SZ-V. Depending on the minimum detectable object size that is selected, the maximum configurable distance for the protection zone and warning zone differs.

| Minimum detectable object size (mm) | Operation mode: Standard (Default Setting) | | Operation mode: High Speed | |
|-------------------------------------|--|-----------------------------------|--------------------------------------|-----------------------------------|
| | Maximum protection zone distance (m) | Maximum warning zone distance (m) | Maximum protection zone distance (m) | Maximum warning zone distance (m) |
| φ20 mm | 1.6 m | 21 m | 1.1 m | 15 m |
| φ30 mm | 2.9 m | 23 m | 2.0 m | 18 m |
| φ40 mm | 4.3 m | 24 m | 2.9 m | 20 m |
| φ50 mm | 5.6 m | 25 m | 3.8 m | 21 m |
| φ70 mm | 8.4 m | 26 m | 5.7 m | 23 m |
| φ150 mm | 8.4 m | 26 m | 5.7 m | 23 m |

* The settings are configured in the SZ-V Configurator. For details on the settings procedure, see "Configuring the settings" (page 74).

| | |
|---|---|
|  | <ul style="list-style-type: none"> The necessary safety distance varies depending on the minimum detectable object size you specify. The protection zone must be configured so as to ensure the safety distance, which has been calculated according to the laws, regulations, and standards of the country and region in which the SZ-V is installed. "Safety Distances" (page 20) If you select the minimum detectable object size of 150 mm, "H" (Height of detection plane) exceeds 1,000 mm. You must select the minimum detectable object size of 70 mm or less if you want to configure the area protection (direction of approach parallel to the protection zone). |
| | |

 Even if an object is smaller than the minimum detectable object size, it may still be detected; however this is not guaranteed.

5-4 Response Time and Scan Cycle

The response time of the SZ-V is the time from when an object (someone or something) enters the protection zone, to when the OSSD goes to the OFF-state due to the detection of the object. When using PROFIsafe or CIP Safety™, the response time is the time from when an object enters the protection zone, to when the "protection zone state" data changes to "0". The response time can be selected by the user. Shorter response times allow the safety distance to be smaller. Longer response times decrease the potential for the OSSD to turn OFF due to dust or ambient light.


The response times that can be selected differ based on the following settings:


- "Operation modes" (page 44)
- "Mutual Interference Reduction Function" (page 58)

Response time

| Operation mode: Standard Default Setting | | | Operation mode : High-speed | | |
|---|--------------|--------------|-----------------------------|--------------|--------------|
| Scan cycle A (Default Setting) | Scan cycle B | Scan cycle C | Scan cycle A | Scan cycle B | Scan cycle C |
| 160 ms | 168 ms | 176 ms | 80 ms | 84 ms | 88 ms |
| 240 ms | 252 ms | 264 ms | 120 ms | 126 ms | 132 ms |
| 320 ms | 336 ms | 352 ms | 160 ms | 168 ms | 176 ms |
| 400 ms | 420 ms | 440 ms | 200 ms | 210 ms | 220 ms |
| 480 ms | 504 ms | 528 ms | 240 ms | 252 ms | 264 ms |
| 560 ms | 588 ms | 616 ms | 280 ms | 294 ms | 308 ms |
| 640 ms | 672 ms | 704 ms | 320 ms | 336 ms | 352 ms |
| 720 ms | 756 ms | 792 ms | 360 ms | 378 ms | 396 ms |
| 800 ms | 840 ms | 880 ms | 400 ms | 420 ms | 440 ms |
| 880 ms | 924 ms | 968 ms | 440 ms | 462 ms | 484 ms |
| 960 ms | 1008 ms | 1056 ms | 480 ms | 504 ms | 528 ms |
| 1040 ms | 1092 ms | 1144 ms | 520 ms | 546 ms | 572 ms |
| 1120 ms | 1176 ms | 1232 ms | 560 ms | 588 ms | 616 ms |
| 1200 ms | 1260 ms | 1320 ms | 600 ms | 630 ms | 660 ms |
| 1280 ms | 1344 ms | 1408 ms | 640 ms | 672 ms | 704 ms |

When using PROFIsafe, 6 ms is added to the response time. When using CIP Safety™, 10ms is added to the response time.

| | |
|---|--|
|  | <ul style="list-style-type: none"> The necessary safety distance varies depending on the response time you specify. The protection zone must be configured so as to ensure the safety distance, which has been calculated according to the laws, regulations, and standards of the country and region in which the SZ-V is installed. "Safety Distances" (page 20) The response time must be 90 ms or less when the SZ-V is used for the detection for access protection (trip device using whole-body detection with normal approach). The SZ-V may not detect the person in the protection zone if the specified response time is more than 90 ms. |
| | |

 Only one scan cycle and operation mode can be set for a scanner head. The protection zone and warning zone response times for a scanner head can only be chosen from the same scan cycle.

- Response times can be individually set for the protection zone and warning zone.

When using the multi-OSSD function, response times of Protection Zone A and Protection Zone B can be set individually.


When using two warning zones, response times of Warning Zone A and Warning Zone B can be set individually.

5-5 Select PNP or NPN

The input and output circuit polarity can be selected from NPN or PNP.

- Not configured (default setting), PNP, NPN

*The settings are configured in the SZ-V Configurator. For details on the settings procedure, see "Configuring the settings" (page 74).

| | |
|---|--|
|  | <ul style="list-style-type: none"> • If you selected PNP/NPN select for PNP, do not cause short-circuit between the OSSD and +24V. Otherwise, OSSDs keep staying at the ON-state and it causes a dangerous situation. • If you selected PNP/NPN select for PNP, be sure to connect the load between the OSSD and 0 V to avoid a dangerous situation. If the load is incorrectly connected between the OSSD and +24V, the logic of OSSD operation will be reversed, and then OSSD will turn to the ON-state when the SZ-V detects an object in the specified protection zone. This is a dangerous situation. • If you selected PNP/NPN select for NPN, do not cause short-circuit between the OSSD and 0V. Otherwise, OSSDs keep staying at the ON-state and it causes a dangerous situation. • If you selected PNP/NPN select for NPN, be sure to connect the load between the OSSD and +24V to avoid a dangerous situation. If the load is incorrectly connected between the OSSD and 0 V, the logic of OSSD operation will be reversed, and then OSSD will turn to the ON-state when the SZ-V detects an object in the specified protection zone. This is a dangerous situation. |
|---|--|

► Important

You cannot use SZ-V if PNP/NPN selection is set to "Not configured". Make sure to select either "PNP" or "NPN". This is not necessary when using PROIsafe or CIP Safety™ communication.

5-6 AUX Output

AUX outputs are outputs that can inform the user of the SZ-V operations. The number of available AUX outputs and application functions vary based on the model.

Maximum AUX output count

| | SZ-V04 type | SZ-V32 type | SZ-V32N type |
|-----------------------|-------------|-----------------|-----------------|
| Number of AUX outputs | 6 | 4 ^{*1} | 4 ^{*1} |

*1 Depending on the combination of functions that are used, the number of AUX outputs may decrease.


Functions assigned to AUX outputs

For details about each function, see the relevant reference page.

| | SZ-V04 type | SZ-V32 type | SZ-V32 N type |
|--|-------------|-------------|---------------|
| Not used | ○ | ○ | ○ |
| State information output ^{*1} (Page 60) | ○ | ○ | ○ |
| Error output (Page 64) | ○ | ○ | ○ |
| Alert output (Page 64) | ○ | ○ | ○ |
| Error or alert output (Page 64) | ○ | ○ | ○ |
| Muted or override condition output (Page 56) | ○ | -- | ○ |
| Muting lamp output ^{*2} (Page 56) | ○ | -- | ○ |
| OSSD state output (Page 61) | ○ | ○ | ○ |
| Detection in the protection zone output (Page 65) | ○ | ○ | ○ |
| Detection in the warning zone output (Page 65) | ○ | ○ | ○ |
| Interlock-Reset-Ready Output (Page 66) | ○ | ○ | ○ |
| Encoder error output (Page 64) | -- | ○ | ○ |
| Transition to Normal Operation Output (Page 66) | ○ | ○ | ○ |

*1 The state information output uses two outputs: AUX 1 and AUX 2. AUX 3 through 6 cannot be used for the state information output.

*2 For the muting lamp output, the SZ-V04 type uses AUX 6 and the SZ-V32N type uses AUX 4. Any of other AUX outputs cannot be used for the muting lamp output.

| | |
|---|---|
|  | <p>The AUX output is not allowed to be used as a safety output for safety-related control systems. Usage of this function as safety output could result in the significant harm to the machine operators, including serious injury or death.</p> |
|---|---|

Reference

- In the following states, the AUX outputs are forcibly set to OFF (state of high impedance).
 - Starting
 - Waiting for configuration
 - Transferring settings
 - Calibrating the window
 - Clearing system configuration information
 - Changing the password
- For the input and output circuit diagrams, see "Input and Output Circuit" (page 43).

5-7 Interlock function

Interlock is a function that prevents the OSSD from automatically going into the ON-state from the OFF-state. This prevents the unintended start-up and/or the unintended restart of the machine if the interlock is applied to the SZ-V. It is necessary to perform the reset operation in order for the SZ-V to go back to normal operation from the interlock condition. To use the interlock function, configure the interlock function settings in the SZ-V Configurator and connect a reset switch to the reset input terminal.

When using PROFIsafe or CIP Safety™, control of the Reset A / Reset B bits of the Output data is required to perform the reset operation.

*For details on wiring, see "Wiring" (page 30).

*The settings are configured in the SZ-V Configurator. For details on the settings procedure, see "Configuring the settings" (page 74).

Reference When you are using the Multi-OSSD function, you can configure the interlock function for both OSSD 1/2 and OSSD 3/4. "Multi-OSSD Function" (page 54)

Interlock

For the interlock function settings, select from the following three variations:

| At start-up | At restart | Notes |
|-------------|------------|-----------------|
| Automatic | Automatic | Default Setting |
| Manual | Automatic | |
| Manual | Manual | |

In this manual, start-up and restart refer to the following.

Start-up:

- At start-up (when the power is supplied, after the SZ-V loads and the machine transitions to normal operation),
- When the SZ-V is restored from an error state through a reset operation,
- When configuration is completed with the SZ-V Configurator.

Restart:

- When the OSSD goes back to the ON-state from the OFF-state, except for start-up

Here, Automatic and Manual refer to the following operations:

Automatic:

The OSSD goes to the ON-state automatically if the SZ-V detects no object in the protection zone at start-up or during restart.

Manual:

The OSSD keeps the OFF-state at start-up or during restart (interlock state).


Terminating the interlock state

It is necessary to perform a reset operation when the SZ-V detects no object in the protection zone, in order for the machine to start operation. After the reset operation, the OSSD goes to the ON-state, and then the interlock state is disabled.

Point How to use automatic and manual restart appropriately:

- **Automatic:** This mode is used for machines where nobody can enter or approach the hazardous area by simply passing through the protection zone, or if the safety-related part of the control system other than the SZ-V, such as a safety relay unit, can ensure the safety with other means.
- **Manual:** Unexpected or unintended start-up of the machine or system can/should be prevented. Prevents automatic restart of the machine even if a person or object leaves the SZ-V protection zone. In both cases, the machine can be started with a start switch or the likes after a safety check is complete.

Timing chart

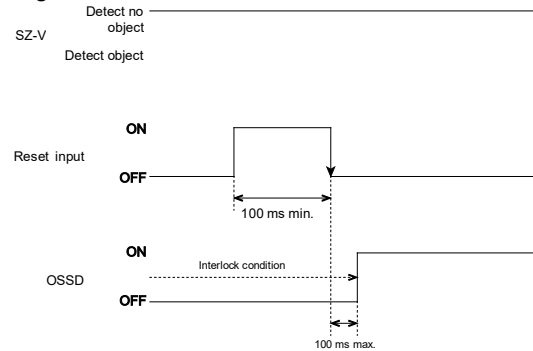

DANGER

- Be sure to absolutely confirm that there is nobody in the hazardous zone before the interlock condition is terminated (i.e. the machine system restarts) by the interlock reset mechanism. Failure to follow this warning may result in a significant harm to the machine operators, including serious injury or death.
- If you set the interlock function to "Automatic/Automatic", you must prevent unintended start-up/restart and ensure the safety with machine control system except for the SZ-V.
- Make sure that the reset input does not short-circuit to other inputs or outputs.

- Reference**
- The OSSD keeps the OFF-state during an error state regardless of the configuration of the interlock function. "Troubleshooting" (page 139)
 - When using the interlock function (if the start or restart mode is set to "Manual/Automatic" or "Manual/Manual"), some functions are no longer available. "Functions That Cannot Be Set Together" (page 150)


ON-delay

The time from when the object detected by the SZ-V is removed from the protection zone and when the OSSD goes back to the ON-state. This ON-delay time can be set from 2 seconds to 60 seconds in one second increments (default setting: 2 seconds).

However, if the ON-delay function is not used, the OSSD goes back to the ON-state after passing the response time (OFF to ON). "Response Time and Scan Cycle" (page 45)

When using PROFIsafe or CIP Safety™, the change in the "Protection zone state" data from 0 to 1 is delayed.

Timing chart

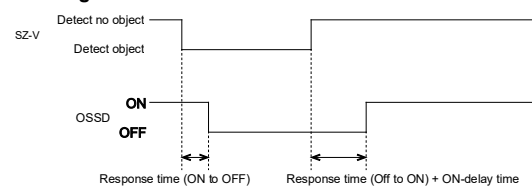


- Reference**
- The ON-delay does not work if the OSSD goes back to the ON-state due to the termination of the laser off input. "Operation Check Function" (page 57)
 - The ON-delay does not work if the OSSD goes back to the ON-state due to the override input. "Override function" (page 56)

5-8 Monitoring External Devices (EDM Function)

The SZ-V can monitor the state of external devices, such as a safety relay or contactors that are connected to the OSSD, in order to detect the failure of the external device. This monitoring function is called the EDM function.


To use the EDM function, wiring between the SZ-V and the N.C. (Normally Closed) contacts of the external device(s) must be performed according to the following diagrams.

The EDM input must be open-circuited if EDM is not applied to the SZ-V. If wiring is incorrectly performed, "Unused Wire error" occurs on the SZ-V.

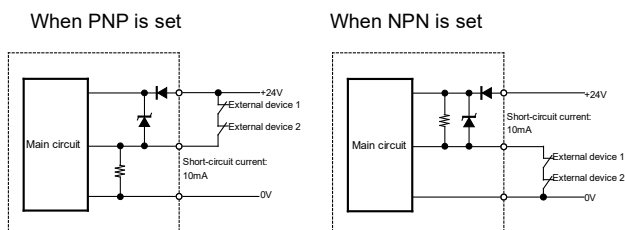

Default setting: "Not used"

Timing chart

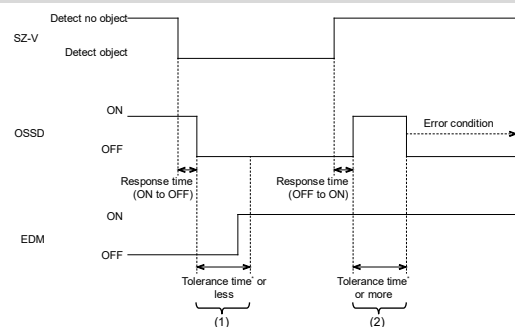

- (1) The SZ-V continues normal operation because the SZ-V detects the operation of an external device within the tolerance time* after the operation of OSSD 1/2 (ON to OFF).
- (2) The SZ-V detects an error on the external device and generates the error state of "EDM error", because the SZ-V does not detect the operation of external device within the tolerance time.
"Troubleshooting" (page 139)

* The EDM tolerance time can be changed in the SZ-V Configurator. For details of the settings procedure, see "Configuring the settings" (page 74).

- 0.15 seconds, 0.3 seconds (default setting), 0.6 seconds, and 3 seconds

- Reference**
- When OSSD3/4 are enabled, EDM can also be applied to OSSD 3/4. "Multi-OSSD Function" (page 54)
 - For more details about the EDM error, see "Error State" (page 139).
 - When using PROFIsafe or CIP Safety™, the EDM function cannot be used.

6. Advanced Functions

6-1 Switching Protection Zones (Bank Switching Function)

The number of zones can be set in the SZ-V. The bank switching function is a function that can switch a set of warning and protection zones (Bank) according to external inputs (bank inputs). The appropriate protection zone(s) can be selected by configuring the SZ-V to switch the banks that correspond to the hazard and/or hazardous area.

The bank refers to a combination of protection zone, warning zone and reference points.

When multiple scanner heads are used, protection zones, warning zones, and reference points can be set for each scanner head.

Bank switching methods

The following three bank switching methods are available:

- Switching through wiring inputs (single input)
- Switching through wiring inputs (binary input)
- Switching through rotary encoder inputs (encoder input)

Number of configurable banks

The maximum number of configurable banks, and the number of protection and warning zones configurable per bank varies depending on the model of Display unit that is used and the functions used.

- "Multi-OSSD Function" (page 54)
- "Independent bank switching" (page 54)

• The maximum number of banks and zones for the SZ-V04 type

| Functions | Bank switching method | Maximum no. of configurable banks | Per bank | |
|---------------------------------------|-----------------------|-----------------------------------|-------------------------|----------------------|
| | | | No. of protection zones | No. of warning zones |
| Not used | Single | 4 | 1 | 2 |
| | Binary | 4 | 1 | 2 |
| Multi-OSSD function | Single | 2 | 2 | 2 |
| | Binary | 4 | 2 | 2 |
| Multi-OSSD Independent bank switching | Single | 2 ^{*1} | 2 ^{*2} | 2 ^{*2} |

*1 Two banks are configurable for both OSSD 1/2 and OSSD 3/4

*2 One protection zone and one warning zone is available for both OSSD 1/2 and OSSD 3/4. "Independent bank switching" (page 54)


• The maximum number of banks and zones for the SZ-V32 type and SZ-V32N^{*1} type

| Bank switching method | Maximum no. of configurable banks | Per bank | |
|-----------------------|-----------------------------------|-------------------------|----------------------|
| | | No. of protection zones | No. of warning zones |
| Single input | 10 | 1 | 2 |
| Binary | 32 | 1 | 2 |
| Encoder | 32 ^{*2} | 1 | 2 |

*1 When using PROFIsafe, the bank switching function cannot be used. If you want to use the multiple bank function, use the "Bank Function" (page 53).

*2 A combination of 4-bank wire switching (single input) and 8-velocity range.

Banks can be switched according to the signal combination of bank inputs (ON/OFF state combination). Appropriate protection zones can be selected by configuring the SZ-V to switch the banks corresponding to the hazard and/or hazardous area.

| | |
|---|--|
|  DANGER | <p>Someone may be able to approach the hazard and/or hazardous area without passing through the SZ-V protection zone if the bank switching is performed at unintended timing. Therefore, you must perform the risk assessment on your own responsibility, taking into account the bank transition time, in order to establish the appropriate control system for bank switching.</p> |
|---|--|

Reference By designating one bank as the "laser shutdown bank" it is

possible to stop the SZ-V laser and control the standby state when this bank is selected. "Operation Check Function" (page 57)

Details on the bank switching methods

Switching through wiring input (single input)

Banks are switched based on the signal state (ON/OFF) of the bank input wires. As shown in the following table, it is possible to switch from bank 0 to bank 9 according to the signal combination of bank inputs (bank input A to E and bank inputs a to e).

*For details on wiring, see "Wiring" (page 30).

| | Bank input | | | | | | | | | |
|--------|------------|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| | A | a | B | b | C | c | D | d | E | e |
| Bank 0 | ON | OFF | OFF | OFF | OFF | OFF | OFF | OFF | OFF | OFF |
| Bank 1 | OFF | ON | OFF | OFF | OFF | OFF | OFF | OFF | OFF | OFF |
| Bank 2 | OFF | OFF | ON | OFF | OFF | OFF | OFF | OFF | OFF | OFF |
| Bank 3 | OFF | OFF | OFF | ON | OFF | OFF | OFF | OFF | OFF | OFF |
| Bank 4 | OFF | OFF | OFF | OFF | ON | OFF | OFF | OFF | OFF | OFF |
| Bank 5 | OFF | OFF | OFF | OFF | OFF | ON | OFF | OFF | OFF | OFF |
| Bank 6 | OFF | OFF | OFF | OFF | OFF | OFF | ON | OFF | OFF | OFF |
| Bank 7 | OFF | OFF | OFF | OFF | OFF | OFF | OFF | ON | OFF | OFF |
| Bank 8 | OFF | OFF | OFF | OFF | OFF | OFF | OFF | OFF | ON | OFF |
| Bank 9 | OFF | OFF | OFF | OFF | OFF | OFF | OFF | OFF | OFF | ON |

Reference


- When using single input with the SZ-V04 type, the maximum number of configurable banks is 4. Banks 4 to 9 cannot be used.
- When using independent bank switching with the SZ-V04 type, the bank switching method differs. "Independent bank switching" (page 54)
- To use more than 11 banks with the SZ-V32 type or the SZ-V32N type, binary input switching should be used.
- The SZ-V does not start operation if the signal combination of bank inputs is different from the combinations shown above at start-up, because the SZ-V goes to the state of "Waiting for bank input". The SZ-V starts operation automatically if the signal combination of bank inputs is the same as one of the combinations shown above.
- If the signal combination of bank inputs is different from the combination shown above during normal operation, the SZ-V changes to "Bank input error."
- Bank switching must be performed according to the bank transition time specified in the SZ-V Configurator. The SZ-V goes to the error state of "Bank error" if the time does not meet the specified bank transition time.
- For details on the error state, see "Error State" (page 139).
- Individually insulate any bank inputs that are not used.

Point

Here, start-up refers to the following:

- At start-up (when the power is supplied after SZ-V loading and the machine transitions to normal operation),
- When the SZ-V is restored from error state through a reset operation,
- When configuration is completed with the SZ-V Configurator.

■ Timing chart

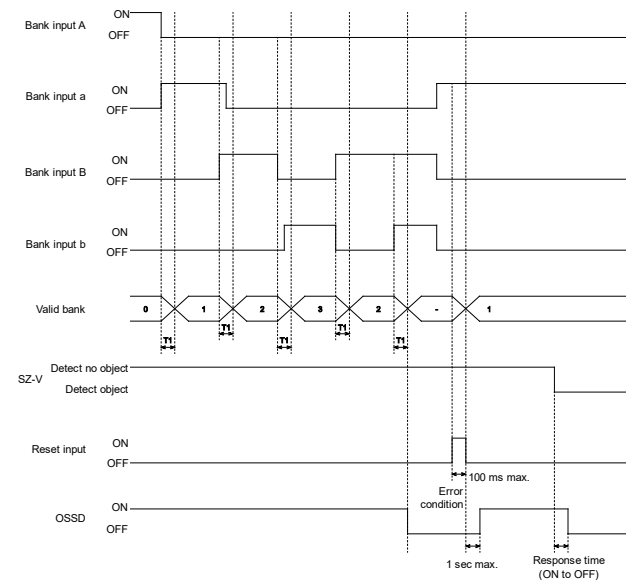

- Reference**
- T_1 is sum of the following parameters:
 - Bank transition time
 - Scan cycle (80ms for standard mode, 40ms for High speed mode)
 - Communication overhead (15ms)
 - Bank transition time can be selected from the following: 0.02/0.05/0.1 (default setting)/0.25/0.5/1/2.5/5 (seconds)
 - If the bank switching function is used for types which the muting function is available (SZ-V04 type and SZ-V32N type), the muting function cannot be used.

Switching through wiring input (binary input)

Banks are switched based on the signal state (ON/OFF) of the bank input wires. As shown in the following table, it is possible to switch from bank 0 to bank 31 according to the signal combination of bank inputs (bank inputs A to E and bank inputs a to e).

※ For details on wiring, see "Wiring" (page 30).

| | Bank input | | | | | | | | | |
|---------|------------|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| | A | B | C | D | E | a | b | c | d | e |
| Bank 0 | OFF | OFF | OFF | OFF | OFF | ON | ON | ON | ON | ON |
| Bank 1 | ON | OFF | OFF | OFF | OFF | OFF | ON | ON | ON | ON |
| Bank 2 | OFF | ON | OFF | OFF | OFF | ON | OFF | ON | ON | ON |
| Bank 3 | ON | ON | OFF | OFF | OFF | OFF | OFF | ON | ON | ON |
| Bank 4 | OFF | OFF | ON | OFF | OFF | ON | ON | OFF | ON | ON |
| Bank 5 | ON | OFF | ON | OFF | OFF | OFF | ON | OFF | ON | ON |
| Bank 6 | OFF | ON | ON | OFF | OFF | ON | OFF | OFF | ON | ON |
| Bank 7 | ON | ON | ON | OFF | OFF | OFF | OFF | OFF | ON | ON |
| Bank 8 | OFF | OFF | OFF | ON | OFF | ON | ON | ON | OFF | ON |
| Bank 9 | ON | OFF | OFF | ON | OFF | OFF | ON | ON | OFF | ON |
| Bank 10 | OFF | ON | OFF | ON | OFF | ON | OFF | ON | OFF | ON |
| Bank 11 | ON | ON | OFF | ON | OFF | OFF | OFF | ON | OFF | ON |
| Bank 12 | OFF | OFF | ON | ON | OFF | ON | ON | OFF | OFF | ON |
| Bank 13 | ON | OFF | ON | ON | OFF | OFF | ON | OFF | OFF | ON |
| Bank 14 | OFF | ON | ON | ON | OFF | ON | OFF | OFF | OFF | ON |
| Bank 15 | ON | ON | ON | ON | OFF | OFF | OFF | OFF | OFF | ON |
| Bank 16 | OFF | OFF | OFF | OFF | ON | ON | ON | ON | ON | OFF |
| Bank 17 | ON | OFF | OFF | OFF | ON | OFF | ON | ON | ON | OFF |
| Bank 18 | OFF | ON | OFF | OFF | ON | ON | OFF | ON | ON | OFF |
| Bank 19 | ON | ON | OFF | OFF | ON | OFF | OFF | ON | ON | OFF |
| Bank 20 | OFF | OFF | ON | OFF | ON | ON | ON | OFF | ON | OFF |
| Bank 21 | ON | OFF | ON | OFF | ON | OFF | ON | OFF | ON | OFF |
| Bank 22 | OFF | ON | ON | OFF | ON | ON | OFF | OFF | ON | OFF |
| Bank 23 | ON | ON | ON | OFF | ON | OFF | OFF | OFF | ON | OFF |
| Bank 24 | OFF | OFF | OFF | ON | ON | ON | ON | ON | OFF | OFF |
| Bank 25 | ON | OFF | OFF | ON | ON | OFF | ON | ON | OFF | OFF |
| Bank 26 | OFF | ON | OFF | ON | ON | ON | OFF | ON | OFF | OFF |
| Bank 27 | ON | ON | OFF | ON | ON | OFF | OFF | ON | OFF | OFF |
| Bank 28 | OFF | OFF | ON | ON | ON | ON | ON | OFF | OFF | OFF |
| Bank 29 | ON | OFF | ON | ON | ON | OFF | ON | OFF | OFF | OFF |
| Bank 30 | OFF | ON | ON | ON | ON | ON | OFF | OFF | OFF | OFF |
| Bank 31 | ON | ON | ON | ON | ON | OFF | OFF | OFF | OFF | OFF |

- Reference**
- Bank No. is represented with binary code consisting of the signal combination of bank inputs A, B, C, D, and E. For bank inputs a, b, c, d, and e, these are inverted signals from bank inputs A, B, C, D, and E.
 - The SZ-V does not start operation if the signal combination of bank inputs is different from the combinations shown above at start-up, because the SZ-V goes to a state of "Waiting for bank input". The SZ-V starts operation automatically if the signal combination of bank inputs is the same as one of the combinations shown above. If the signal combination of bank inputs is different from the combination shown above during normal operation, the SZ-V changes to "Bank input error."
 - Bank switching must be performed according to the bank transition time was specified through the SZ-V Configurator. The SZ-V goes to the error state of "Bank error" if the time does not meet the specified bank transition time.
 - When using the SZ-V04 type, the maximum number of configurable banks is 4. Banks 4 to 31 cannot be used.
 - If the total number of banks is 16 or less, bank inputs E and e are not used.
 - If the total number of banks is 8 or less, bank inputs D, E, d and e are not used.


- If the total number of banks is 4 or less, bank inputs C, D, E, c, d and e are not used.
- If the total number of banks is 2 or less, bank inputs B, C, D, E, b, c, d and e are not used.
- For details on the error state, see "Error State" (page 139).
- Individually insulate any bank inputs that are not used.

Point

Start-up refers to the following:

- **At start-up (SZ-V loading completes after power is supplied and the machine transitions to normal operation),**
- **When the SZ-V is restored from an error state through a reset operation,**
- **When configuration is completed with the SZ-V Configurator.**

Timing chart

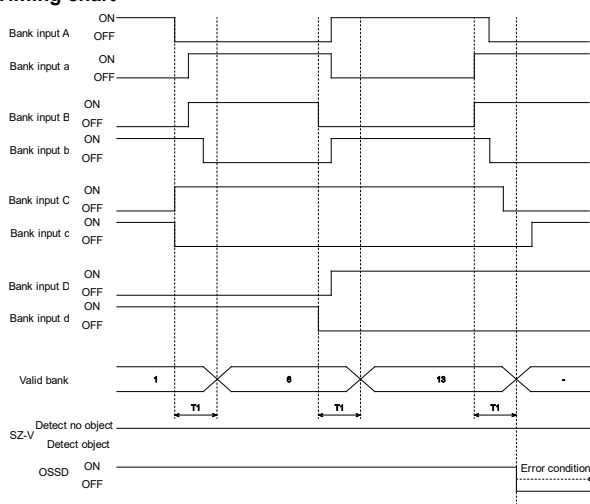

Reference

- T1 is sum of the following parameters:
 - Bank transition time
 - Scan cycle (80ms for standard mode, 40ms for High speed mode)
 - Communication overhead (15ms)
- The bank transition time can be selected from the following: 0.02/0.05/0.1 (default setting)/0.25/0.5/1/2.5/5 (seconds)
- If the bank switching function is used on types which the muting function is available (SZ-V04 type and SZ-V32N type), the muting function cannot be used.

Switching through rotary encoder input (encoder input)

This is a function that is available when encoders are connected to the SZ-V. Zones can be switched in accordance with velocity information received from two independent encoders. The velocity range (velocity bank) is configurable in 8 stages.

By combining single input wiring inputs, it is possible to switch between up to 4 wiring banks.

With combination of 8 velocity banks and 4 wiring banks, it is possible to switch between maximum 32 banks.

| | | | | | |
|---------------|-----------------|-------|--------|--------|--------|
| Wiring bank | A | ON | OFF | OFF | OFF |
| | a | OFF | ON | OFF | OFF |
| | B | OFF | OFF | ON | OFF |
| | b | OFF | OFF | OFF | ON |
| Velocity bank | Velocity range1 | Bank0 | Bank8 | Bank16 | Bank24 |
| | Velocity range2 | Bank1 | Bank9 | Bank17 | Bank25 |
| | Velocity range3 | Bank2 | Bank10 | Bank18 | Bank26 |
| | Velocity range4 | Bank3 | Bank11 | Bank19 | Bank27 |
| | Velocity range5 | Bank4 | Bank12 | Bank20 | Bank28 |
| | Velocity range6 | Bank5 | Bank13 | Bank21 | Bank29 |
| | Velocity range7 | Bank6 | Bank14 | Bank22 | Bank30 |
| | Velocity range8 | Bank7 | Bank15 | Bank23 | Bank31 |

Encoders must meet the following conditions:

- Power voltage of DC 24 V
- A rotary encoder that has A and B phase, as well as an A- output (A phase inverse output)
- Complimentary output


- Maximum pulse frequency: 100 kHz

The settings can be configured as follows in accordance with the type of encoder that is used and the application:

| | |
|--|--|
| Encoder Velocity Setting (Number of pulses per 1mm of AGV travel) | <ul style="list-style-type: none"> • 5 to 100 (pulses/mm) • Default: 5 (pulses/mm) |
| Allowable Variation | <ul style="list-style-type: none"> • 0 to 45 % • Default: 25% |
| Maximum Variation Time | <ul style="list-style-type: none"> • 10 s • 30 s (default) • 1 min |

For details on each setting, see "Encoder settings" (page 76).


Timing chart

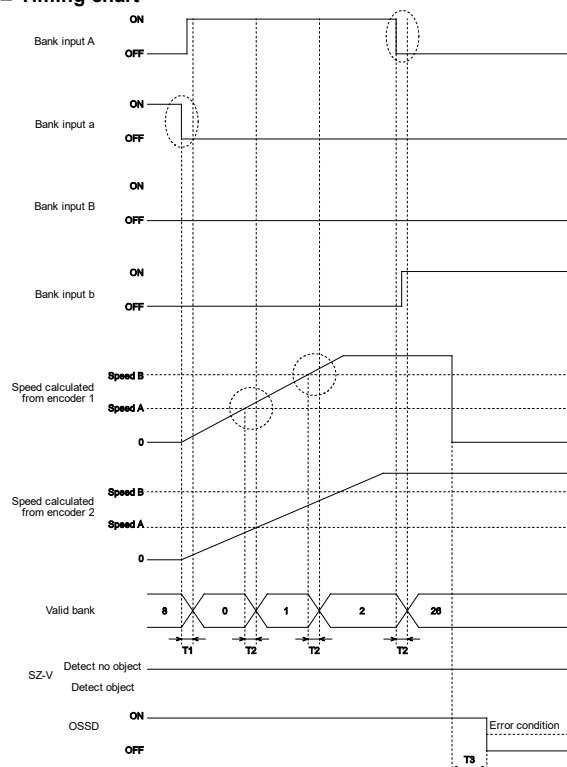


- T1 is sum of the following parameters:
 - Bank transition time
 - Scan cycle (80ms for standard mode, 40ms for High speed mode)
 - Communication overhead (15ms)
- The bank transition time can be selected from the following: 0.02/0.05/0.1 (default setting)/0.25/0.5/1/2.5/5 (seconds)
- T2 is sum of the following parameters:
 - Encoder velocity recognition time (72ms)
 - Scan cycle (80ms for standard mode, 40ms for High speed mode)
 - Communication overhead (15ms)
- T3 depends on type of error:
 - Encoder Mismatch Error: Maximum variation time
 - Error related to one encoder only: 400ms

- When the velocity of the two encoders is not the same, the higher velocity is used as the determined velocity.
- It is possible to receive an output for an encoder error. "Encoder error output" (page 64)
- For the SZ-V04 type, encoder input switching cannot be selected.
- If the bank switching function is used on the SZ-V32N type, the muting function cannot be used.
- During normal operation, the SZ-V results in an error if one of the following conditions is met.
 - The encoder velocity exceeds the set velocity range.
 - An input is received that exceeds the maximum pulse frequency (100 kHz).
 - The velocity difference between the two encoders is more than the allowable variation and exceeds the maximum variation time.
 - The encoder velocity is zero and one of the following mismatches is detected:
 - Encoder input 1A and 1A- mismatch
 - Encoder input 2A and 2A- mismatch
- The direction of rotation of two encoders must be same, when AGV is moving. If encoders are used in an application where the direction of rotation of two encoders are different, wiring needs to be adjusted like the example below.

Two encoders are rotated in the same direction.

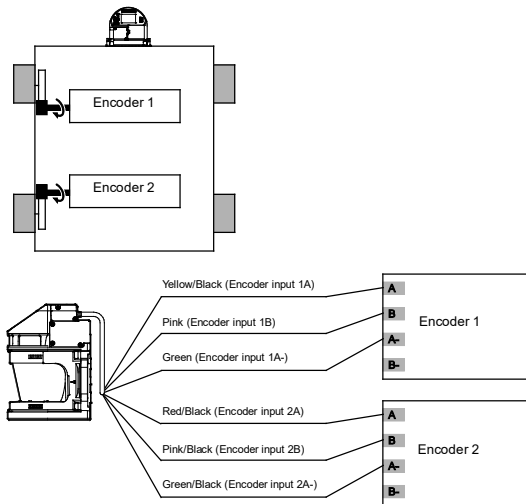

Two encoders are rotated in the different direction

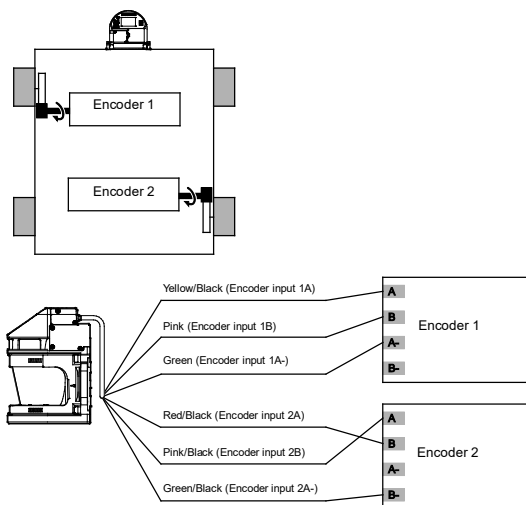

Number of pulses per 1mm of AGV travel

Calculation method

$$P = p / (r \times D_{AGV} \times \pi)$$

P: Number of pulses per 1mm move of AGV [pulses/mm]

p: Number of pulses per one rotation of encoder [pulses]


r: Number of AGV tire rotations per one rotation of encoder

D_{AGV} : Diameter of AGV tire [mm]

Calculation example

When using a friction wheel attached to an encoder.

D_f : Diameter of friction wheel [mm]

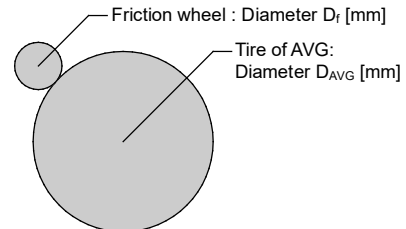

$p = 1000$ [pulses]

Number of pulses per one rotation of encoder

$D_{AGV} = 450$ [mm]

Diameter of AGV tire

$D_f = 54$ [mm]

Diameter of friction wheel

$r = D_f / D_{AGV} = 54 / 450 = 0.12$ Number of AGV tire rotation per one rotation of encoder

Number of pulses per 1mm move of AGV

$$P = p / (r \times D_{AGV} \times \pi) = 1000 / (0.12 \times 450 \times \pi) = 5.9 \text{ [pulses/mm]}$$



If the object to be detected moves parallel to the detection plane, SZ-V cannot detect the object moving at speed over 1.6m/s, regardless of the encoder setting.

6-2 Using Multiple Banks (Bank Function)

When using PROFIsafe or CIP Safety™, up to 16 banks can be used simultaneously. In one bank, up to four zones (protection zone A / B and warning zone A / B) can be set.

The "Protection Zone State" and "Warning Zone State" in all of the banks can be read individually. The "Protection Zone State" can be used as a safety output for the safety-related part of a machine control system.

- Reference** • When using bank function, a "Laser shutdown bank" cannot be designated.

6-3 Monitoring the Zone Switching Sequence (Bank Sequence Monitoring Function)

The SZ-V can monitor the sequence of bank switching so that the OSSD goes to the OFF-state due to an error state if the SZ-V detects a signal combination of bank inputs in an unexpected sequence. This prevents machine operation with an unintended protection zone selected through the use of the bank sequence monitoring.

For each bank, 3 bank numbers can be assigned to follow. The SZ-V goes to the error state of "Bank sequence error" if the bank number indicated by the signal combination of bank inputs is different from the specified bank number that is to be followed under the bank sequence monitoring function.


KEYENCE Corporation strongly recommends enabling the bank sequence monitoring function to specify the proper bank sequence for the machine application.

*The settings are configured in the SZ-V Configurator. For details on the settings procedure, see "Configuring the settings" (page 74).

<Application example>

When the AGV which mounts the SZ-V moves a certain path as shown in the following figure, the SZ-V can switch the bank in the following sequence, bank 1 → bank 2 → bank 3 → bank 1.

The AGV can stop because the SZ-V goes to the error state of "Bank sequence error" if the bank number indicated by the signal combination of bank inputs is different from the specified bank number that is to be followed under the the bank sequence monitoring function.

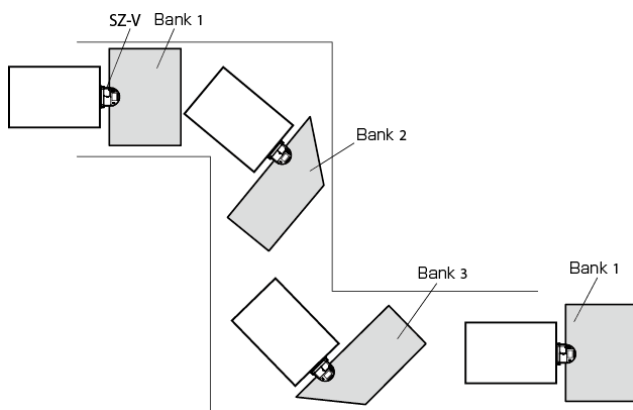


- Reference** For details on the error state, see "Error State" (page 139).

6-4 Protecting Two Zones at the Same Time (Multi-OSSD Function)

When using the multi-OSSD function, it is possible to set two independent protection zones for one scanner head.

The two protection zones are called Protection Zone A and Protection Zone B. OSSD 1/2 goes to the OFF-state if the SZ-V detects an object in protection zone A. OSSD 3/4 goes to the OFF-state if the SZ-V detects an object in protection zone B. "Protection zone" (page 17)

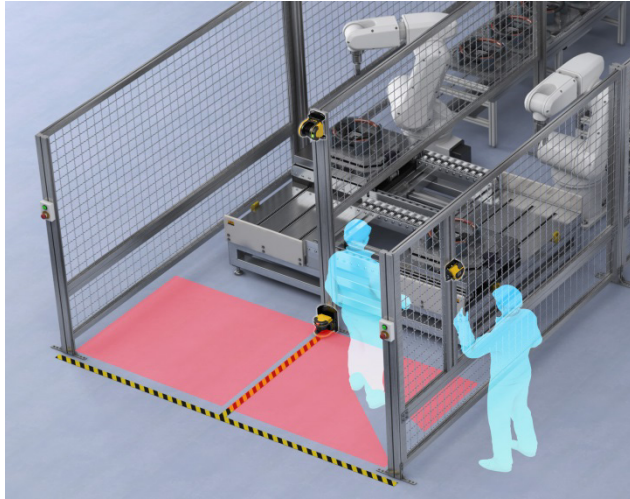

* The settings are configured in the SZ-V Configurator. For details of the settings procedure, see "Configuring the settings" (page 74).

When adding more scanner heads, it is possible to assign each scanner head a protection zone for OSSD 1/2 and OSSD 3/4. "OSSD output selection" (page 75)

When using PROFI-safe or CIP Safety™, "Protection Zone A State" and "Protection Zone B State" can be read via communication.

DANGER

If you control two hazard sources independently, you must fully consider the SZ-V installation position and orientation. If there is unprotected space where the operator can approach into the hazardous area, you must take additional countermeasure against the hazard.

Reference • Even when using the multi-OSSD function, maximum number of warning zones is two.


Independently switching two zones (Independent bank switching)

This function can only be applied when using the SZ-V04 type.

The independent bank switching function can be used in combination with the bank switching function.

"Bank Switching Function" (page 49)


Normally when the bank switching function is used, the protection zone for OSSD 1/2 (Protection Zone A) and the protection zone for OSSD 3/4 (Protection Zone B) switch at the same time. However, if the independent bank switching function is used, Protection Zone A and Protection Zone B can be switched at different times.

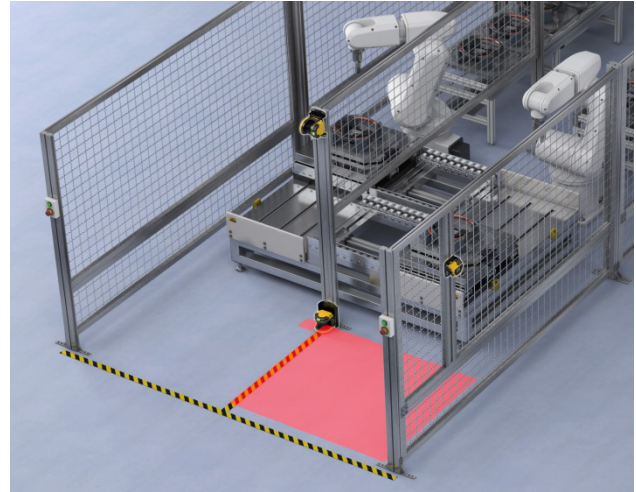

* The settings are configured in the SZ-V Configurator. For details on the settings procedure, see "Configuring the settings" (page 74).

| OSSD 1/2 Protection zone A | OSSD 3/4 Protection zone B | Bank input | | | |
|----------------------------------|----------------------------------|------------|-----|-----|-----|
| | | A | a | B | b |
| Bank 0 | --- | ON | OFF | -- | -- |
| Bank 1 | --- | OFF | ON | -- | -- |
| --- | Bank 0 | -- | -- | ON | OFF |
| --- | Bank 1 | -- | -- | OFF | ON |


■ Timing chart

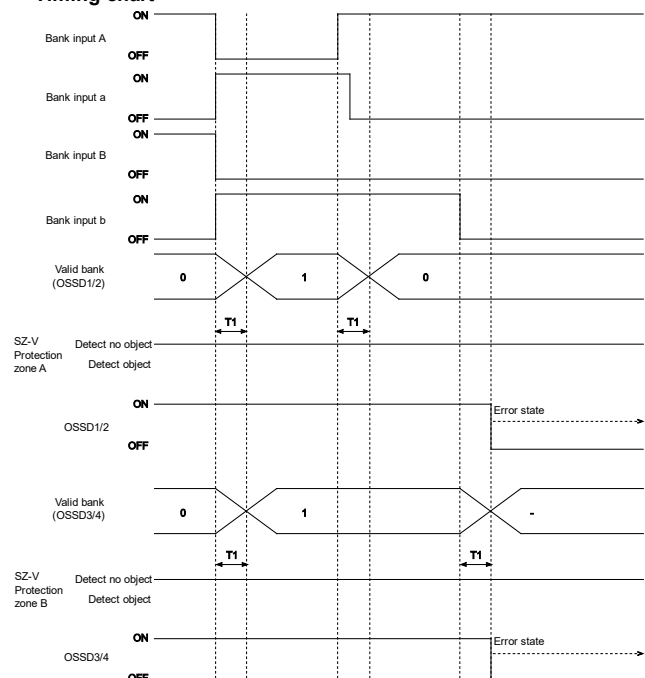

Reference • Certain functions cannot be used at the same time as the independent bank switching function. "Functions That Cannot Be Set Together" (page 150)

6-5 Temporarily Disabling the Safety Function

The SZ-V04 type and the SZ-V32N type have a function that can temporarily disable the safety function when specific conditions are met. While the specific signals, which fulfill that condition, are activated, the OSSD keeps the ON-state even if the SZ-V detects something or someone in the protection zone, or if the SZ-V detects a change of position monitored through the reference points monitoring function.

| | |
|---|--|
|  | <p>The conditions, SZ-V settings, peripheral devices, and the installation of those devices in order to disable the SZ-V safety function must fulfill the conditions specified in this user's manual as well as the requirements of the laws, rules, regulations, and standards in the country or region in which the SZ-V and those devices are used. Failure to follow this warning may result in a significant harm to the machine operators, including serious injury or death.</p> |
|---|--|

- Reference**
- The state of suspension of safety function can be checked through the muting indicator and AUX output signal. The configuration of AUX outputs is necessary to check the state of suspension through AUX output signals.
 - Checking through a PLC:
 - "Muted or override condition output" (page 56)
 - Checking an indicator light or lamp:
 - "Muting lamp output" (page 56)
 - Certain functions cannot be used if the muting function is used. "Functions That Cannot Be Set Together" (page 150)

Temporarily disabling the safety function (Muting function)

A muting zone can be configured anywhere in the protection zone. The SZ-V goes to the muted condition when the conditions for initiation of muting are fulfilled. The OSSD keeps the ON-state even if the SZ-V detects an object in the muting zone.

(Even if the conditions for initiation of muting are fulfilled, the OSSD goes to the OFF-state when the SZ-V detects an object in the protection zone where the muting zone is not configured.)

For example, it is not necessary to stop the machine when an AGV enters the hazardous area by configuring the muting zone in the protection zone where the AGV would pass through.

The muting input terminals on the SZ-V must be connected to muting devices to use the muting function.

Restrictions on the muting device

- Output must be N.O. (normally open)
- Must be a contact output or PNP/NPN output which corresponds to the settings selected in the selection of PNP or NPN.
- Do not use one muting device with multiple outputs in place of two or more muting devices (always one output for one device).
- If the muting device has a timer function that can adjust the output timing, do not use that function.

Conditions for initiation of muting

Muted condition is initiated if all of the following conditions are met.

- Muting inputs go to the ON-state within the specified sequence and within the specified time between them.
- The SZ-V detects no objects in the protection zone.
- The OSSD is in the ON-state.

Conditions for termination of muting

The muted condition is terminated if one of the following conditions is met:


- Either of muting inputs go to the OFF-state for more than 0.015 sec.
- The SZ-V goes into an error state.
- The laser off input goes to the ON-state ("Operation Check Function" (page 57)).
- The power supply is interrupted.
- The maximum muting period of time has passed.

Configuring muting conditions

The settings can be configured as follows in accordance with the application:

| | |
|-----------------------------------|---|
| Sequence of muting inputs | <ul style="list-style-type: none"> Muting input 1 to Muting input 2 fixed (default) Muting input 2 to Muting input 1 fixed Not specified |
| Time period between muting inputs | <ul style="list-style-type: none"> 0.04 to 3.0 (default) 0.04 to 5.0 0.04 to 10.0 0.04 to (not specified) |
| Maximum muting period of time | <ul style="list-style-type: none"> Approx. 1 minute Approx. 5 minutes (Default) Approx. 10 minute Not specified |


Timing chart

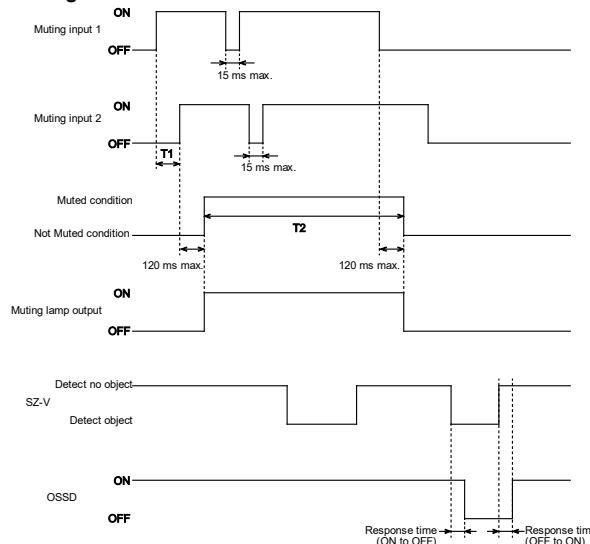

T1: Time period between muting inputs (default: 0.04 to 3s)

Configurable from SZ-V Configurator.

T2: Maximum muting period of time (default: 5 min) Configurable from SZ-V Configurator.

| | |
|---|---|
|  | <p>The responsible personnel must perform the risk assessment based on the machine application in order to appropriately determine the risk if "Not specified" is selected for the maximum muting period of time. Moreover, based on this result, enact additional safeguards if necessary. Failure to follow this warning may result in a significant harm to the machine operators, including serious injury or death.</p> |
|---|---|

Point

Consider the potential danger due to the muting sensor unexpectedly failing. Also, note the following when "Not specified" is selected for both the maximum muting period and time between muting inputs.

- If the time between muting inputs exceeds 3 seconds, the muting state will be terminated approximately 5 minutes later. (If the time between muting inputs is within 3 seconds, the muting state continues and is unlimited as per the settings.)

Reference

Upon start up, the SZ-V starts from the muting terminated state regardless of the muting input state. The SZ-V is unable to power on into a muted state.

Restarting after a suspended disabled state (Override function)

With the safety function temporarily disabled by the muting function, the OSSD goes to the OFF-state if that suspension is interrupted for any reason. If this occurs while an object is still in the protection zone, then the machine remains stopped because the muting function cannot initiate again since the SZ-V detects an object in the protection zone. The override is a helpful function suitable for such a situation. The SZ-V goes to the override condition when the conditions for initiation of override are met. When override is activated, an object in the protection zone can be easily removed.

All of the scanner heads and protection zones go into the override state when this function is activated and the safety function is disabled. (It is not possible to suspend the safety function for only a part of the protection zone or to disable just one scanner head.)

Conditions for initiation of override

Override is initiated when the reset input* goes to the ON-state within 0.04 to 1 sec. after the override input goes to the ON-state, and if all of the following conditions are met:

1. The SZ-V is not in an error state.
2. At least one scanner head detects an object in the protection zone.
3. The OSSD is in the OFF-state. (Including interlock condition)
4. Either muting input or both muting inputs are in the ON-state.

If the operation check function with laser off input is used, the laser off input must go in the ON-state instead of the reset input for the initiation of override.

Conditions for termination of override

The override condition is terminated if one of the following conditions is met:


1. All muting inputs go to the OFF-state.
2. Either override input or reset input goes to the OFF-state.
3. The SZ-V goes into an error state.
4. Maximum override period of time has passed.

Configuring override conditions

The settings can be configured as follows in accordance with the application:

| | |
|---------------------------------|---|
| Maximum override period of time | • 1 minute (default), 5 minutes, 10 minutes |
|---------------------------------|---|

■ Timing chart (Initial settings when the Muting Function is used)

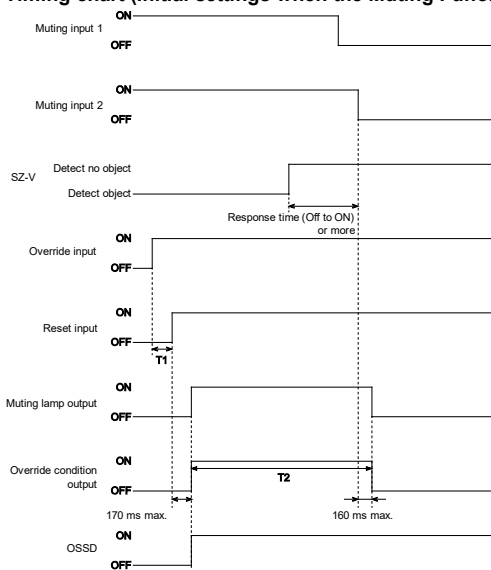

T1: 0.04 to 1s Cannot be changed


T2: Maximum override period of time (default: 1 min) Configurable from SZ-V Configurator

Displaying the disabled state


The disabled state of the safety functions can be displayed on the SZ-V or output to an external device.

Checking the state on the SZ-V display

Muting state

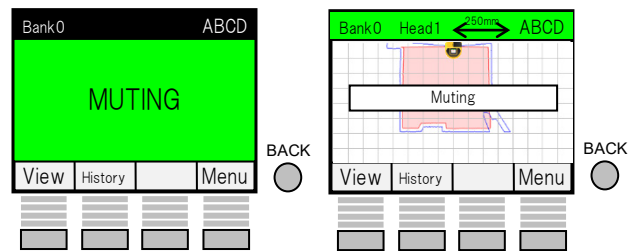

Override state

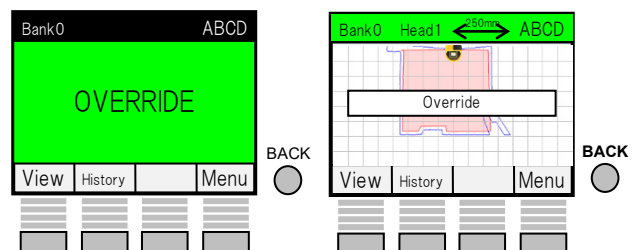

Using an output to display the state on an external device

By assigning the following functions to an AUX output, it is possible to check whether the SZ-V safety function is disabled by signaling the state.

*The settings are configured in the SZ-V Configurator. For details on the settings procedure, see "Configuring the settings" (page 74).

■ Muted or override condition output

The AUX Output goes to the ON-state if the safety function is temporarily disabled by the muting function or override function.

■ Muting lamp output

In addition to functioning in the same manner as the muted or override condition output, a muting lamp can be controlled directly with the SZ-V.

The following conditions must be fulfilled if a muting lamp is connected to the muting lamp output.

- - In case of incandescent lamp: DC 24 V, 1.0-5.5 W
- - In case of LED indicator: Current consumption 10-230 mA

DANGER

Muting, override state output, or muting output cannot be used as a safety output for safety-related control systems. Misuse of this function as safety output could result in the significant harm to the machine operators, including serious injury or death.

- Reference
- The muting lamp output can only be assigned to AUX 6 (AUX 4 for the SZ-32N).
 - The muting lamp output will always be a NPN output, even if the selection of PNP or NPN is PNP.
 - Alerts about muting lamp failure, such as a blowout of the lamp, disconnection or overcurrent, can be signaled through the alert output, error output, or state information output. "State information output" (page 60)
 - The performance of SZ-V under the muting lamp failure can be defined as either error (muting lamp error) or alert. The SZ-V goes to the error state in case of muting lamp failure in accordance with the default configuration.


6-6 Monitoring Doors and Other Locations That Change (Reference Points Monitoring Function)

Reference points monitoring is a safety-related function where the SZ-V monitors the position change of a structure (such as protective guarding or a door) located at a specified reference point. Similar to when the SZ-V detects an object in the protection zone, the OSSD goes to the OFF-state if the position of the structure (such as protective guarding or door) varies exceeding the specified tolerance. When using PROFIsafe or CIP Safety™, "Protection Zone State" data goes to 0.

*The settings are configured in the SZ-V Configurator. For details on the settings procedure, see "Configuring the settings" (page 74).


Examples of applications for detection for area protection

When the reference point is set on the position of a movable part, such as a door, the OSSD goes to the OFF-state if the SZ-V detects the position change of the movable part.

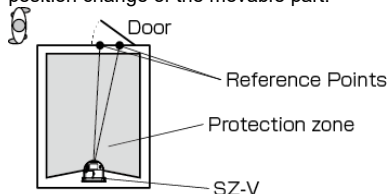

Examples of applications for detection for access protection

When the SZ-V is used in combination with other protective structures as safety measures, the configured protection zone may not ensure the safety, because an unintended area allowing possible approach points could be generated due to the displacement of protective structures or the SZ-V itself. With the reference point monitoring function, the SZ-V can monitor the position of the protective structure. Therefore, it can ensure the safety since the OSSD goes to the OFF-state in case of position changes of the protective structure.

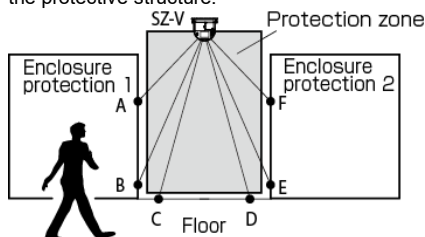

2 or more reference points must be set on one structure so as to ensure the detection of its position change. As shown in the above "Example of reference point", two reference points are set on each of the three structures (protective structure 1, protective structure 2 and the floor) for a total of six points (A to F).

DANGER

Reference point monitoring function must be applied when the SZ-V is used for the access protection specified in IEC61496-3:2008 Annex A.12 and A.13 (the application where the angle of the approach exceeds $\pm 30^\circ$ to the detection plane). In this case, the tolerance for reference points must be ± 100 mm or less and the response time must be 90 ms or less. Additional countermeasures for protection must be provided if there is a space between the protection zone and the protective structure that the minimum detectable object is not detected by the SZ-V.

- Maximum of 15 reference points can be set.
- When using bank switching function, maximum of 15 reference points can be set for protection zone of each bank.
- The OSSD turning OFF because an object or person was detected in the protection zone, or the reference point monitor function turning OFF the OSSD can be distinguished with the SZ-V display and the detection history. "Checking the Detection History" (page 99)
- The reference point monitoring function stops while the safety function is temporarily disabled.

6-7 Turning OFF the SZ-V OSSD (Operation Check Function)

Using the operation check function stops the laser light and forcibly turns OFF the OSSD. By using the operation check function, all OSSDs can be turned OFF and it is possible to check whether the intended machine stopped. An AGV or machine can be temporarily stopped by putting the SZ-V into standby mode.


There are three ways to use the operation check function.

- Operation check with laser off input
- Operation check with bank switching
- Operation check with communication

Operation check with laser off input

Use an external input to turn off the laser light and turn the OSSD OFF.

■ Timing chart

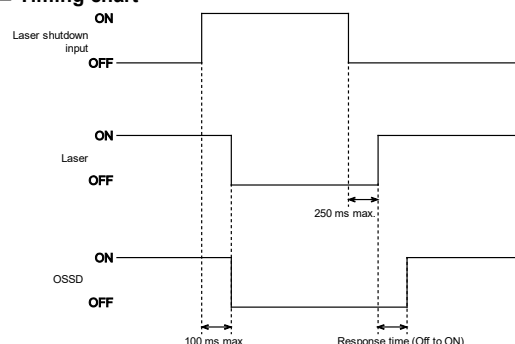


Reference If the Start/Restart mode settings are not "Automatic/Automatic", laser off input cannot be used. "Interlock function" (Page 47)

Operation check with bank switching

By designating one bank as the "laser shutdown bank," it is possible to stop the SZ-V laser and turn the OSSD OFF.

For example, if the laser shutdown bank is set to bank 0 and bank 0 is selected with the bank switching inputs, then the SZ-V stops the laser and turns the OSSD OFF. The SZ-V goes back to the normal operation if a different bank number is selected.

■ Timing chart

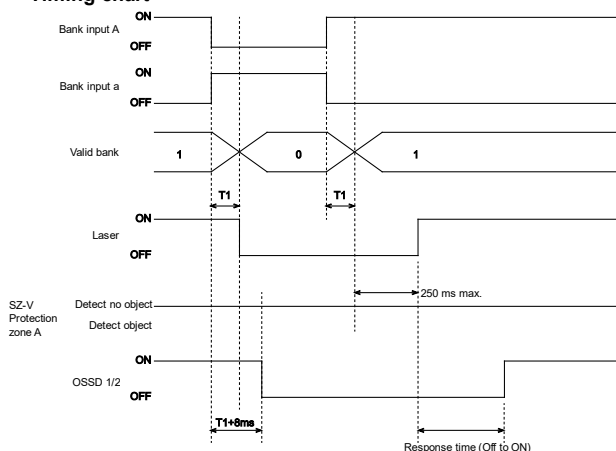

Operation check with communication

When using PROFIsafe or CIP Safety™, the operation check function can be used with communication. If "Laser OFF" data goes to 1, the SZ-V stops the laser and all "Protection Zone State" data turn to 0. The timing chart is the same as "Operation check with laser off input".

6-8 Reducing Interference Between SZ-Vs (Mutual Interference Reduction Function)

If multiple SZ-Vs are installed in close proximity, their scan cycles can be changed to reduce mutual interference. The scan cycle indicates the SZ-V's emission timing. SZ-V has three different scan cycles. Any cycle can be selected.

When installing two SZ-Vs close to each other, by applying different scan cycles, it is possible to prevent mutual interference between the two SZ-Vs. The possibility of mutual interference is reduced between three SZ-Vs if different scan cycles are set. The selectable response times vary depending on the scan cycle specified.

"Response Time and Scan Cycle" (page 45)

6-9 Reducing Power Consumption (Power Saving Mode)

If Power Saving Mode is selected and the SZ-V is not operated for a certain period of time, part of the display will turn off. In this way, power consumption is reduced.

If 30 seconds passes since the last key operation, the display turns off.

Scanner head: Scanner head state indicator

Display unit: Display backlight

However, in the following cases, the display will not turn off:

- In the 30 seconds since the power was turned on
- During an error state


Default setting: Not used

6-10 Privacy of Camera Images (Camera Blur Function)


Scanner heads with cameras have the ability to monitor images taken with the cameras, and save photos and videos of the moments that objects and/or people were detected.

Due to privacy considerations, if keeping detailed images is not desired, the camera image can be blurred using the camera blur function.

Without the camera blur function

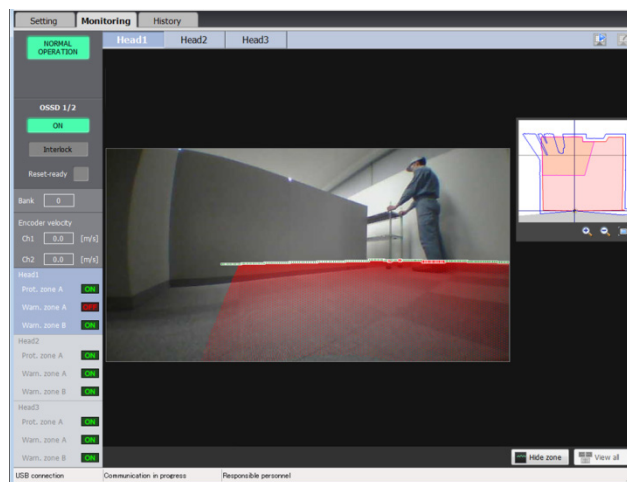

With the camera blur function

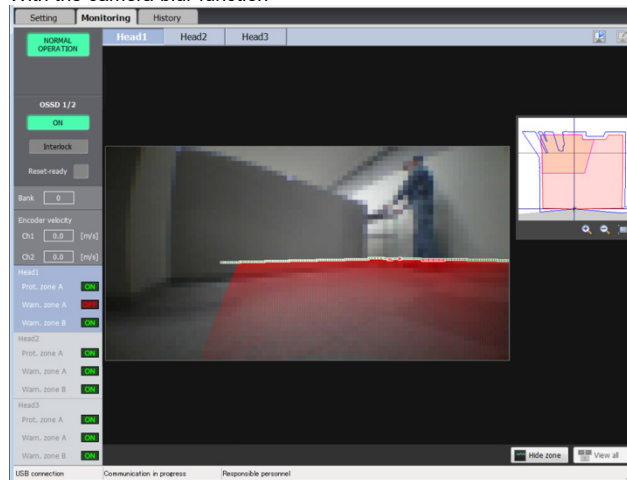

- * The settings are configured in the SZ-V Configurator. For details on the settings procedure, see "Configuring the settings" (page 74).

6-11 Replacing damaged units without configuration transfer (System Memory)

All settings and zone data are saved in the system memory. Therefore, when replacing the Display unit or scanner head, it is possible to automatically copy all the settings and zone data to the new Display unit or scanner head by using the same system memory.

If an Display unit is replaced because it broke, the amount of transfer time is greatly reduced.

For details on the replacement procedure, see "Replacing the Display unit" (page 149).

▶ Important

When connecting an SZ-V unit (Display unit and scanner head) to the system memory with the setting information, use an SZ-V unit that has never been connected to another system memory. If the SZ-V unit has been connected to another system memory, the SZ-V will experience an error (system configuration error) and not function properly.

Reference

- To clear a system configuration error, it is necessary to use the configuration software (SZ-V Configurator) to delete the system configuration information on the SZ-V unit. "Clear system configuration" (page 108)
- Transferring new settings from the SZ Configurator can overwrite the system configuration information. "Setting Procedure" (page 73)
- Initializing the settings from the SZ Configurator, can also overwrite the system configuration information. "Initialization" (page 107)
- As the following data is not saved in system memory, it cannot be copied to a new SZ-V.
 - SZ-V panel brightness
 - Enable/disable use of the key lock function
 - Type of view selected before last power off (Status view, Monitor view, Camera view)


7. Checking Operation Status

7-1 Checking the Current Detection Status

Checking on the SZ-V display


The state of the SZ-V can be checked on the Display unit display and with the indicators.

For details, see "How to Read the SZ-V Display" (page 114).

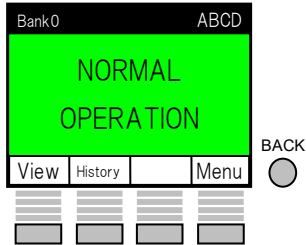

Checking on the SZ-V Configurator

The detection state can be checked on the SZ-V Configurator monitor. For details, see "Monitoring Operations" (page 94).

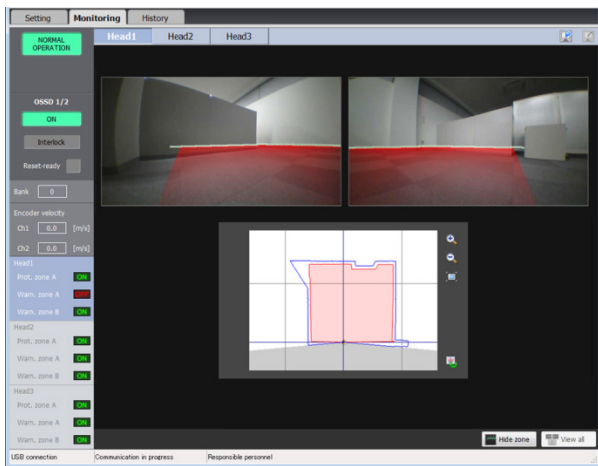

Checking with outputs

Information that indicates the current state of the SZ-V can be checked through outputs by assigning following functions to AUX output.

- * The settings are configured in the SZ-V Configurator. For details on the settings procedure, see "Configuring the settings" (page 74).

| | |
|--|---|
| | State information output and OSSD state output cannot be used as safety output to safety-related control systems. Misuse of this function as safety output could result in significant harm to the machine operators, including serious injury or death. |
|--|---|

State information output

The state information output is a function used to inform an external device of the current state of the SZ-V through two AUX outputs.

The state information output 1 is assigned to AUX output 1, while the state information output 2 is assigned to AUX output 2. The state information output 1 is the strobe signal for information output. The state information output 2 is the informative pulse signal for the exact state of the SZ-V.

The state information output 1 goes to the ON-state for a certain interval. While the state information output 1 is in the ON-state, the SZ-V generates the pulse signals on state information output 2. If the pulses are counted on the state information output, the current state of the SZ-V can be received. (The state information output 1 goes back to the OFF-state when the SZ-V has completed generating the pulses on state information output 2.)

The following table shows the relationship between the number of pulses and the state of the SZ-V. Use this function for monitoring the SZ-V operation through a PLC.

If multiple states are occurring at the same time, only the state with the highest priority is output.

■ The number of pulses for the state information output and details

Some of the details differ depending on whether the bank switching function or the muting function is used.

| No. of pulses | Details | | Priority |
|---------------|--|--------------------------------|----------|
| | When using the bank switching function | When using the muting function | |
| 1 | Normal operation (ON) bank 0 | Normal operation (ON) | B 5 |
| 2 | Interlock-reset-ready or reset ON-delay | | B 1 |
| 3 | Scanner head 1 protection zone is in detection state | | A 12 |
| 4 | Scanner head 2 protection zone is in detection state | | A 13 |
| 5 | Scanner head 3 protection zone is in detection state | | A 14 |
| 6 | Normal operation (ON) bank 1 | Muting state | B 3 |
| 7 | Normal operation (ON) bank 2 | Override state | B 2 |
| 8 | Normal operation (ON) bank 3 | Muting input is ON* | B 4 |
| 9 | Waiting for bank input | | A 11 |
| 10 | Bank input error or bank sequence error | Muting lamp error | A 2 |
| 11 | Window alert | | A 7 |
| 12 | Light interference alert | | A 8 |
| 13 | High reflection alert | | A 9 |
| 14 | Other alerts | | A 10 |
| 15 | Window error | | A 5 |
| 16 | MI error | | A 6 |
| 17 | EDM error | | A 3 |
| 18 | OSSD error | | A 1 |
| 19 | Other errors | | A 4 |
| 20 | Normal operation (ON) bank 4 | | B 6 |
| 21 | Normal operation (ON) bank 5 | | B 7 |
| 22 | Normal operation (ON) bank 6 | | B 8 |
| 23 | Normal operation (ON) bank 7 | | B 9 |
| 24 | Normal operation (ON) bank 8 - 15 | | B 10 |
| 25 | Normal operation (ON) bank 16 - 23 | | B 11 |
| 26 | Normal operation (ON) bank 24 - 31 | | B 12 |

*When muting conditions are not met and the SZ-V is not in the muting state. For details of muting conditions, see "Muting function" (page 55)

■ Priority

Number of pulses coming out of the state information output 2 is determined by the current status of SZ-V. If SZ-V corresponds to multiple statuses, number of pulses corresponding to a status with highest priority will be output.


Status with priority A has higher priority compared to priority B. Within same priority alphabet, smaller number status has higher priority.

For statuses with priority A, if a status of priority A happens even once after the last pulse output, regardless of current status, that status will be latched and output.

■ Timing chart

Pulse output is generated from state information output 1 periodically ($100 \times T$).

When state information output 1 is ON, pulse output is generated from state information output 2. Number of pulses depends on SZ-V status.

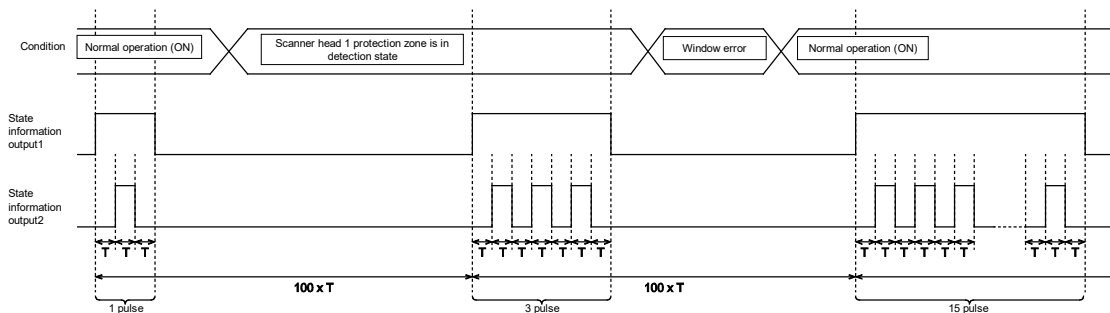


- Reference** The pulse width (T) time can be changed in the settings.
- 20 ms (default setting), 40 ms, 60 ms, 80 ms, 100 ms, 200 ms, 300 ms

OSSD state output

The OSSD state output operates corresponding to the operation of the OSSD. This can confirm the OSSD operation through external device, such as a PLC.

When using the multi-OSSD function, it is possible to select either the OSSD 1/2 state output corresponding to the OSSD 1/2 ON/OFF state, or the OSSD 3/4 state output corresponding to the OSSD 3/4 ON/OFF state.

Timing chart

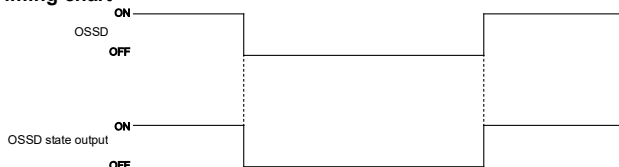

7-2 Checking the Past Detection Status (Detection History)

The history of detecting people or objects, and the error and alert occurrence histories can all be checked. If a scanner head with a camera is used, photos and videos of the moments that objects are detected can be saved.

The history of these events can be checked in the SZ-V Configurator or the SZ-V display panel.

Detection History

| Saving mode | | [Single Frame/Photo] | [Multi-Frame/Video] |
|-----------------------------------|-------------------|---|--|
| No. of saved items | Detection history | 500 | 100 |
| | Photos | 30 | - |
| | Videos | - | 10 |
| Interval between saves | Detection history | No limit | |
| | Photos | Approx. 1s | - |
| | Videos | - | Approx. 30s (Approx. 5s for scanner heads without camera) |
| Preservation of detection history | | Cleared by power OFF | Not cleared after power OFF |
| How to check detection history | | "Checking the Detection History" (Page 99) "Checking the Detection History (Detection History)" (page 117) | |

- Reference**
- The following items are included in detection history.
 - Objects or people detected in the protection zone
 - Objects or people detected in the warning zone
 - Alert occurrences
 - Only photos and videos of people and objects detected in the protection zone are saved in the detection history.
 - Select whether to save photos or videos in the settings.

Single Frame/Photo mode

Saves a single frame of the measurement status from the Monitor View, and when using a camera model, a photo at the moment of detection. Latest 30 photos will be saved. Saved photos are deleted after restarting SZ-V.

Saved images can be checked using SZ-V, or saved to PC via SZ-V Configurator.

- During single frame mode, detection history is cleared by following procedures.
 - Turn OFF the power of SZ-V.
 - Transfer settings from SZ-V Configurator.
 - Initialize SZ-V from the SZ-V Configurator.
 - Clear detection history from SZ-V Configurator.
 - Replace the scanner head.
- When the number of saved history reaches its maximum number, the oldest history is erased to save the latest detection history.

Multi-Frame/Video mode

Saves multiple frames of the measurement status from the Monitor View, and when using a camera model, a video from 2 seconds before to 2 seconds after the moment of detection. 10 videos will be saved. Saving order can be selected. Saved videos are not deleted after restarting SZ-V.

Saved videos can be checked using SZ-V, or saved to PC via SZ-V Configurator.

- During multi-frame mode, detection history is cleared by following procedures. Only responsible personnel can clear the detection history in the multi-frame mode.
 - Transfer settings from SZ-V Configurator.
 - Clear detection history from SZ-V Configurator.
 - Replace the scanner head.
- When the number of saved history reaches its maximum number, the oldest history is erased to save the latest detection history. However, if the SZ-V is configured to save first 10 occurrences, then old detection histories will not be erased, and new detection histories will not be saved.
- In multi-frame mode, an interval of approximately 30

seconds (approximately 5 seconds for scanner heads without camera) is required between video savings. During this period, SZ-V shows "History Saving", and continues normal operation, but cannot save new videos.


- In multi-frame mode, it is not possible to save a new video for approximately 5 seconds after start-up. Also, if the power of SZ-V is turned OFF while "History Saving" is displayed, it may not be possible to save a new video for approximately 30 seconds after the next start-up.
- In multi-frame mode, videos can be saved up to 1 million times maximum.

Error history


| | |
|-------------------------------|---|
| No. of saved items | 100 |
| Preservation of error history | Not cleared after power OFF |
| How to check error history | "Error history" (page 100) "Checking the error history (Error History)" (page 119) |

- Reference**
- Error history is not cleared by transferring settings from SZ-V Configurator or restarting the SZ-V.
 - To clear error history, push "Clear Error History" button on the Error History window on SZ-V Configurator. Note that clearing error history can only be done by responsible personnel.
 - Error history is cleared when SZ-V is initialized.


“Checking the Detection History” (page 99)

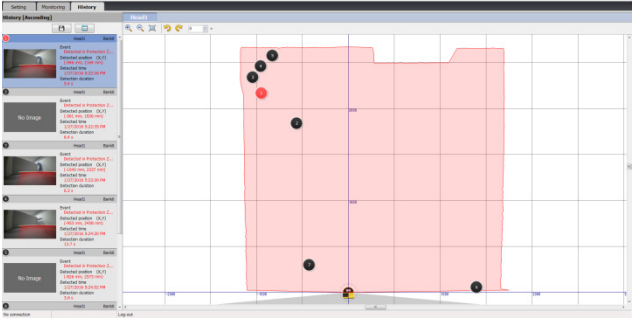


“Error history” (page 100)

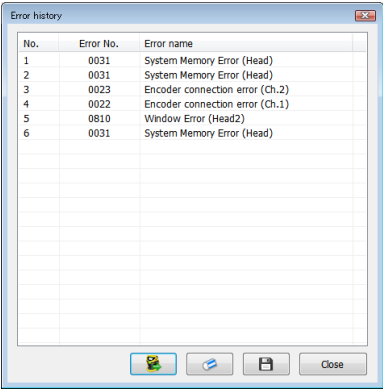

“Checking the Detection History (Detection History)” (page 117)

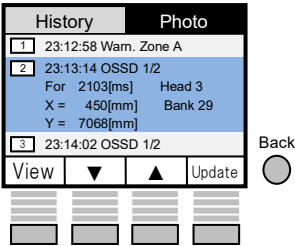

Checking the error history (Error History)” (page 119)

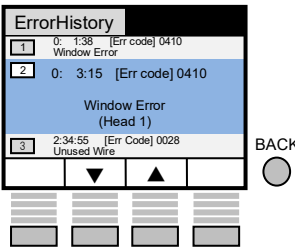


7-3 Checking Error and Alert

It is possible to check if an error or alert has occurred on the SZ-V.


Checking on the SZ-V display

Errors and alerts can be checked in detail on the Display unit display.


Display state

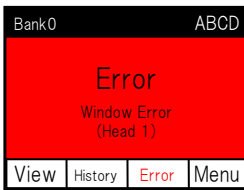

Monitor view or Camera view

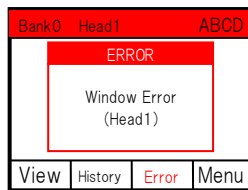


It is also possible to see the detailed explanation about error or alert on the display. This explanation is available in English only.

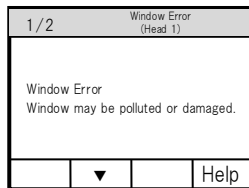

For details on how to read the display, see “Display When an Error Occurs (Error/Alert)” (page 123).

Check the details on the website (2D code display function)

Details of the error or alert can be checked on KEYENCE website. Troubleshooting can be seen in various languages by scanning the 2D code displayed on SZ-V display using portable devices.

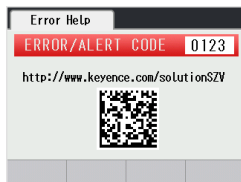

Checking with outputs


By assigning the following functions to the AUX outputs, errors and alerts can be checked through outputs.

- * The settings are configured in the SZ-V Configurator. For details on the settings procedure, see “Configuring the settings” (page 74).

Error output

The error output goes to the ON-state during normal operation. It goes to the OFF-state in case of an error state.

Timing chart

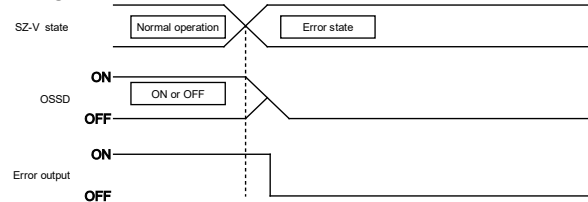


Alert output

The alert output goes to the ON-state during normal operation and when an alert is not occurring. It goes to the OFF-state during an alert. “Alert State” (page 139)

Causes of an alert state

- Light pollution on the window
- Light interference
- Highly-reflective background
- Overcurrent on AUX
- Muting lamp output failure (disconnection or overcurrent)
- Camera malfunctions, memory errors, etc.
- IP address duplication

Timing chart

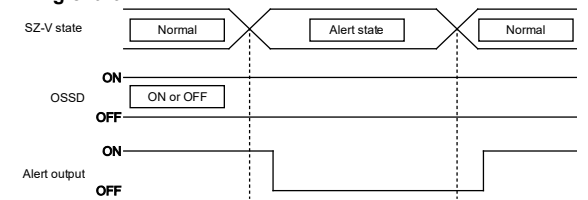

Point The alert state does not affect the OSSD state

Error or alert output

Error or alert output goes to the ON-state during normal operation and when an alert is not occurring. The error and alert output goes to the OFF-state if the SZ-V detects an error or alert.

Encoder error output

The encoder error output goes to the ON-state during normal operation. It goes to the OFF-state if an encoder error occurs.

| | |
|--|---|
| | <p>Error, alert, and encoder output cannot be used as safety output for safety-related control systems. Misuse of this function as safety output could result in significant harm to the machine operators, including serious injury or death.</p> |
|--|---|

Reference

The following conditions must all be met to be able to use the encoder error output:

- The bank switching function is being used.
- Encoder input switching is being used for the bank switching method. “Bank Switching Function” (page 49)

7-4 Notification of Whether a Person or Object is in the Protection Zone (Detection in the Protection Zone/Warning Zone Output)

Check whether a person or object is in the protection zone or warning zone.

Checking with outputs

By assigning the following outputs to the AUX outputs, it is possible to check whether a person or object is in the protection or warning zone by outputting the state.

When multiple scanner heads are cascaded, output behavior can be selected from the following options.

- Turns the output OFF when at least one of the cascaded scanner heads detects a person or object in the zone.
- Turns the output OFF when specified cascaded scanner head detects a person or object in the zone.

The settings are configured in the SZ-V Configurator. For details on the settings procedure, see "Configuring the settings" (page 74).


Detection in the protection zone output

Check the SZ-V detection state in the protection zone and at the reference points.

The output goes to the ON-state during normal operation, while it goes to the OFF-state in one of the following cases:

- When the SZ-V detects an object (someone or something) in the protection zone.
- When the SZ-V detects nothing at a reference point. "Reference Points Monitoring Function" (page 57)
- When the laser off input goes to the ON-state "Operation Check Function" (page 57)
- When an error is occurring on the SZ-V "Error State" (page 139)

■ Timing chart

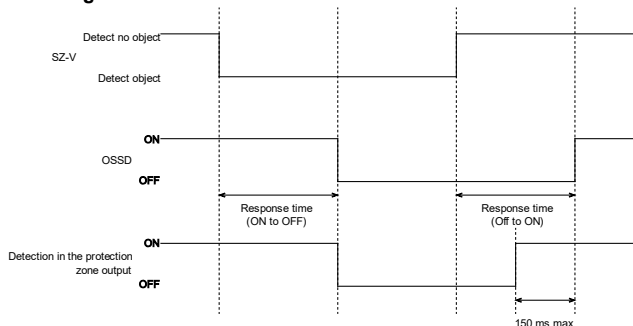

Detection in the warning zone output

Check the SZ-V detection state in the warning zone.

The output goes to the ON-state during normal operation, while it goes to the OFF-state in one of the following cases:

- When the SZ-V detects an object (someone or something) in the warning zone.
- When the laser off input goes to the ON-state. "Operation Check Function" (page 57)
- When an error is occurring on the SZ-V "Error State" (page 139)

| | |
|--|--|
| | Detection output in the protection zone and Detection output in the warning zone cannot be used as safety output for safety-related control systems. Misuse of this function as safety output could result in significant harm to the machine operators, including serious injury or death. |
|--|--|

Reference

- When using the state information output, the scanner head that detected an object or a person in a protection or warning zone can be identified. "State information output" (page 60)
- If multiple scanner heads are used, one of the following output operations can be used:
 - If at least one scanner head meets the conditions, the output goes to the OFF-state (default setting)
 - If all scanner heads meet the conditions, the output goes to the OFF-state

7-5 Notification of Interlock-Reset-Ready (Interlock-Reset-Ready Output)


By assigning interlock-reset-ready output to the AUX output, it is possible to confirm whether the SZ-V is ready for start/restart during an interlock condition.

The interlock-reset-ready output goes to the ON-state if the SZ-V is ready for the start/restart signal during an interlock condition. At this moment, the SZ-V can start/restart the operation through the termination of interlock condition, if the reset operation is performed.

If all of the following conditions are satisfied, the SZ-V is ready to be started/restarted:

- The SZ-V detects no object (someone or something) in the protection zone
- The SZ-V detects something at the reference point(s) (if reference points monitoring is activated) "Reference Points Monitoring Function" (page 57).
- The laser off input is in the OFF-state (if the check function is activated) "Operation Check Function" (page 57).
- The SZ-V is not in an error state "Error State" (page 139).

Timing chart

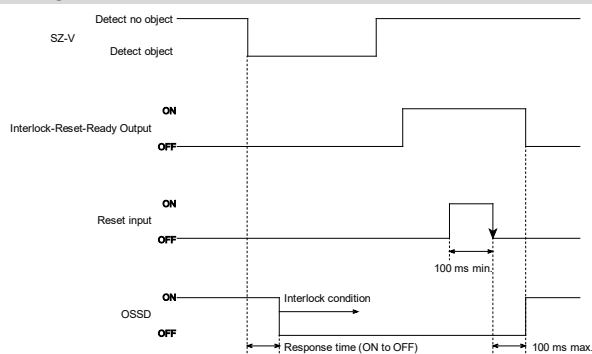


| | |
|--|---|
| | <p>Interlock-reset-ready output cannot be used as safety output for safety-related control systems. Misuse of this function as safety output could result in significant harm to the machine operators, including serious injury or death.</p> |
|--|---|

7-6 Checking the Timing for the Completion of Start-up (Transition to Normal Operation Output)

Confirm that the SZ-V completes start-up and starts normal operation.

Timing chart

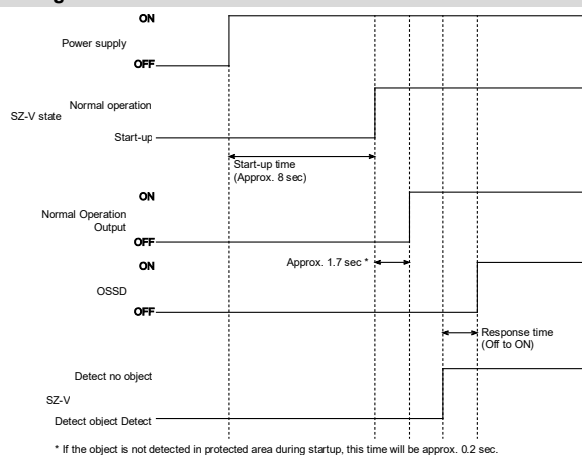

* If the object is not detected in protected area during startup, this time will be approx. 0.2 sec.

| | |
|--|--|
| | <p>Transition to normal operation output cannot be used as safety output for safety-related control systems. Misuse of this function as safety output could result in significant harm to the machine operators, including serious injury or death.</p> |
|--|--|


7-7 Checking Whether the Intended Settings Have Been Applied (Configuration Code (CRC))

Using a four digit code (Configuration Code (CRC)), it is possible to check whether the intended settings have been applied.

If the SZ-V settings change, the CRC changes. Therefore, by checking the displayed CRC, the intended settings can be confirmed.

Checking on the SZ-V display

During normal operation, the number is displayed in the top right of the Display unit display.

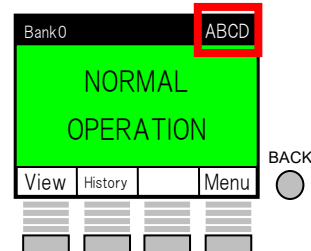

Checking on the SZ-V Configurator

The number is displayed on the Settings tab under "Information at the time of configuration."

- * For details on the settings procedure, see "Configuring the settings" (page 74).

- Reference**
- Each time the SZ-V starts, it self-diagnoses to determine whether the settings, such as the number of scanner heads, match the configuration. If the SZ-V determines that the configuration is different from the settings, an error results.
 - If the SZ-V is not configured or awaiting approval of the settings, the CRC is not displayed.

7-8 Checking with communication

When using the SZ-V32N type or SZ-V32NC type, the state information of the SZ-V can be read via communication. The information that can be read differs depending on the communication protocol. For details, see the separate "SZ-V32N / SZ-V32NC Communications Manual".


8. How to Use the SZ-V Configurator

8-1 Before using the SZ-V Configurator

System Environment


| | |
|-------------------------|---|
| CPU | Pentium 4, 1.5GHz or higher |
| OS | Windows 7 SP1 Windows 8.1 Windows 10 |
| Required memory size | 512 MB or more |
| Free space on hard disk | 500 MB or more |
| Communication interface | USB 1.1 or higher |
| Display | XGA (1024 x 768 pixels) or greater, High Color (16 bit) or greater |
| .NET Framework | .NET Framework 4.0 or 4.5 needs to be installed *1 |

*1 If .NET Framework is not installed, .NET Framework 4.0 will be automatically installed during the installation.

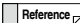 Recommended Windows DPI setting is "Smaller (100%)".

Installing Safety Device Configurator

This section describes how to install the configuration software on a computer.

 **When installing or uninstalling the software, log onto the PC as a user with Administrator privileges.**

Before installation

Check the following items before installation.

- Free space on hard disk
The configuration software can only be installed on a hard disk. The installation requires 500 MB of free space on the hard disk. If there is insufficient free space, delete unnecessary items to free up space.
- Windows environment and installation destination
The configuration software is a Windows application and the software is installed on Windows. Check that one of Windows XP/7/8/8.1/10 is installed on the computer and is working properly.
- USB port or Ethernet adapter
To transmit data, such as settings data, from the PC to the SZ-V series or use the monitoring function, the PC needs to have a USB port or be able to use an Ethernet adapter. For more information about the setting method, see the PC manual.
- Help file
The Help file for the configuration software was created in a PDF file format. The viewing software Adobe Reader from Adobe Systems Incorporated must be installed on your computer to use the help file. The latest version can be downloaded for free from the Adobe Systems Incorporated Web site: <http://www.adobe.com>

Downloading the configuration software

The configuration software can be downloaded from the KEYENCE website.

<http://www.keyence.com>

If using a computer in an environment where downloading software is not possible via the Internet, contact the nearest KEYENCE office or distributor.

Installation Procedure

Execute "setup.exe" stored in the downloaded file.
After that, start installation according to the instruction in the installation program. When installation ends successfully, the following five software applications are installed:

- Integrated software <Safety Device Configurator>.
- SZ-V configuration software <SZ-V Configurator>.
- SZ configuration software <SZ Configurator>.
- GL-R configuration software <GL-R Configurator>.
- SL-V configuration software <SL-V Configurator>.

Uninstallation Procedure

Uninstall any software by using [Add/Remove Programs] from the Windows Control Panel.

Precautions for Windows 7/8/8.1/10


If the "User Account Control" window appears during installation or uninstallation, click [Continue].

Starting the SZ-V Configurator


Start the SZ-V Configurator using the following method.

Step 1
Click the Windows [Start] button and select [All Programs] - [KEYENCE Applications] - [Safety Device Configurator], or double-click the Safety Device Configurator icon on the desktop.

The Configurator selection screen appears. Select [SZ-V Configurator].
If the powered-on SZ-V is connected via USB, this item is skipped.

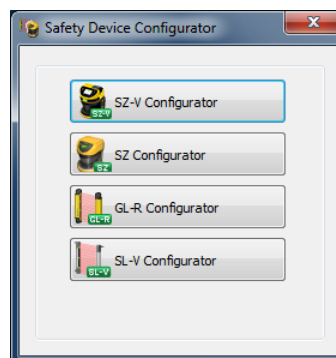

Step 2
The SZ-V Configurator starts up and the main screen and dialog box are displayed.

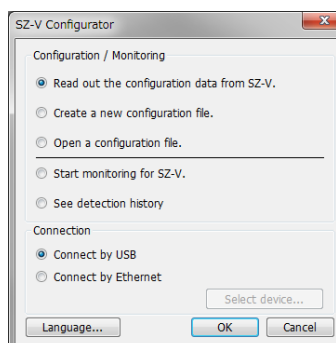

Step 3
Select the startup method and connection method, then click the [OK] button.

Selecting the Start-up Method

Select your desired method from the following five methods.


a) Retrieve the configuration data from the SZ-V

Before start-up, retrieve the configuration data saved on the SZ-V unit.

b) Create a new configuration file

Create a new configuration file.

The [Model selection] dialog box appears. Select the model and scanner head expansion settings, and click the [OK] button. The SZ-V Configurator starts with the default settings.

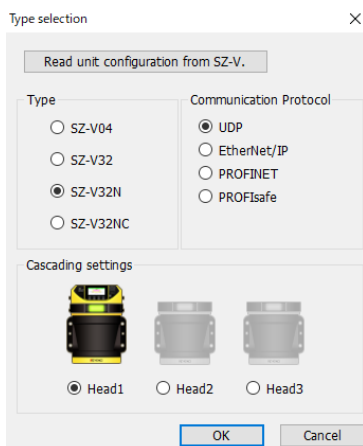

| Item | Description |
|------------------------|--|
| Type | Select the model. |
| Cascading settings | Select how many scanner heads to be added. |
| Communication Protocol | Select a communications protocol. (For the SZ-V32N type or SZ-V32NC type only) |

For the SZ-V32N type or SZ-V32NC type, it is possible to configure which SZ-V unit you want to communicate with.

By clicking the [OK] button, a dialog box appears confirming if you want to select a destination connection. If you want to select that destination connection, click the [Yes] button. The destination connection selection dialog box appears.


"Connecting to different SZ-V" (page 109)

c) Open a configuration file

Open a configuration file currently saved to a computer.

The [Open] dialog box appears.

Select the appropriate SZ-V Configurator file (*.szvd) and click the [Open] button to open the configuration file.

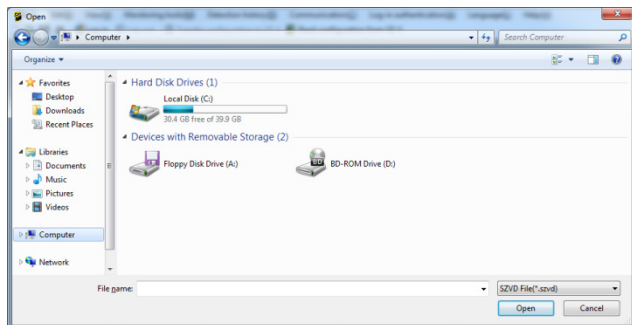

d) Start monitoring for SZ-V

Communicate with the SZ-V unit and start monitoring operations. The SZ-V Configurator retrieves the configuration data from the SZ-V unit, and displays the data on the monitor screen. "Monitoring Operations" (page 94)

e) View the detection history

When retrieving the detection history from the SZ-V, or opening the detection history file, the detection history screen appears. "Checking the Detection History" (page 99)

- Reference
 - When selecting one of the following items, check that the computer and the SZ-V Series unit are correctly connected first.
 - a) Retrieve the configuration data from the SZ-V
 - d) Start monitoring for SZ-V
 - e) Select "View the detection history" and retrieve the detection history from the SZ-V.
 - Also check that power is being supplied to the SZ-V.

Selecting a connection method


Select the desired method of connection from the following methods.

| Item | Description |
|---------------|--|
| USB (default) | Read and write configuration information with a USB cable. |
| Ethernet | Read and write configuration information with an Ethernet cable. (For the SZ-V32N type or SZ-V32NC type only) |

For details on the connection method, see "Connecting the SZ-V to a computer" (page 69).

Selecting an Ethernet connection device

If Ethernet is selected for the connection method, it is necessary to specify which SZ-V to connect to over the network. Press the [Select device...] button and configure the device.

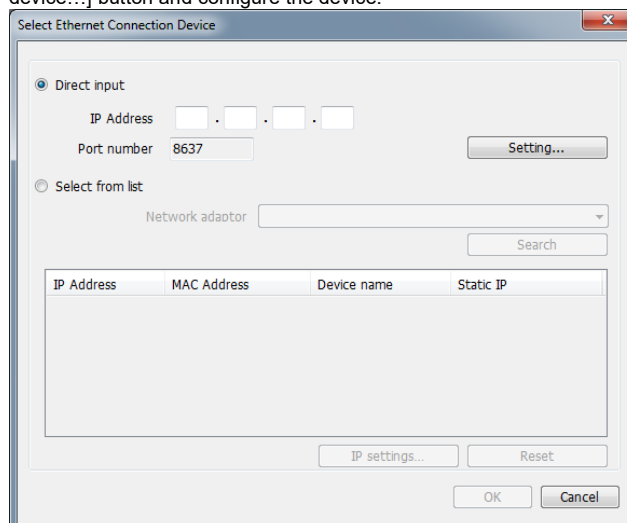

Direct Input

By directly inputting the IP address and TCP port number, it is possible to set which SZ-V to communicate with.

Select from list

Searches for any SZ-V units on the network and displays the results. Select which SZ-V to communicate with from the displayed list.

Step 1

Select the network adaptor and press the [Search] button.

Step 2

From the displayed SZ-V units, select which SZ-V to communicate with and press the [OK] button.

| IP Address | MAC Address | Device name | Static IP |
|--------------|-------------------|-------------|-----------|
| 192.168.1.15 | 00 01 FC 1C 88 45 | device1 | ✓ |
| | 00 01 FC 1C 88 3F | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

Reference

- If the IP address of the displayed SZ-V unit has not been configured, start communicating with that SZ-V by assigning it a temporary IP address.
- To assign a temporary IP address, click the [IP settings] button and set an IP address, subnet mask, and default gateway.
- A temporary IP address cannot be assigned to an SZ-V unit that has a configured IP address.
- By pressing the [Reset] button, the IP address can be restored to a not configured state. It is not possible to restore the IP address of a SZ-V configured with a Static IP.

Exiting SZ-V Configurator

When exiting the SZ-V Configurator, select [Exit] from the [File] menu. When changing the settings, the confirmation dialog box appears.

Reference


- When changing the settings, the configuration file must be saved before exiting the SZ-V Configurator. If the SZ-V Configurator is exited without saving, the changes are lost.
- On the confirmation dialog box, clicking the [No] button exits the program without saving.

Connecting the SZ-V to a computer


To connect the SZ-V to a computer, use a USB cable or an Ethernet cable. Only the SZ-V32N type or SZ-V32NC type can be connected with an Ethernet cable.

Connecting with a USB cable

1. Open the setting cover on the Display unit.

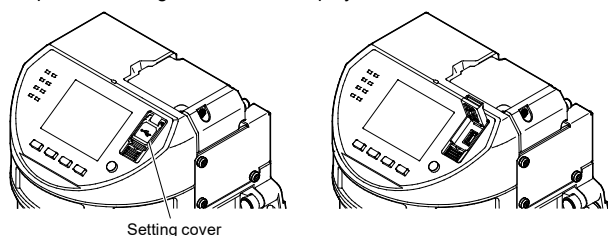

2. Use a USB cable (OP-51580 or OP-86941) to connect the Display unit to the computer.

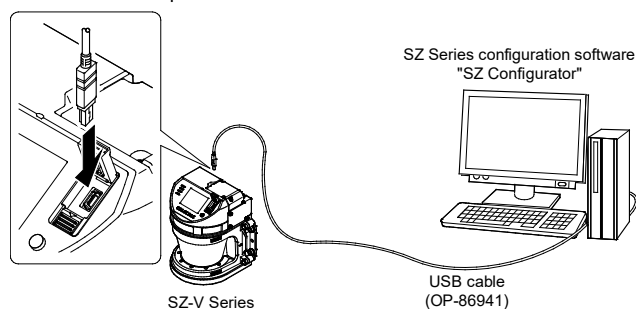


NOTICE


- If the setting cover is open, the enclosure rating IP65 cannot be satisfied. Make sure that dust does not enter the inside.
- Communication is not possible when an SZ-V with positive grounding is connected to a PC with negative grounding through a USB cable.

Connecting with an Ethernet cable (for the SZ-V32N type or SZ-V32NC type only)


1. Open the Ethernet cable cover on the Display unit.

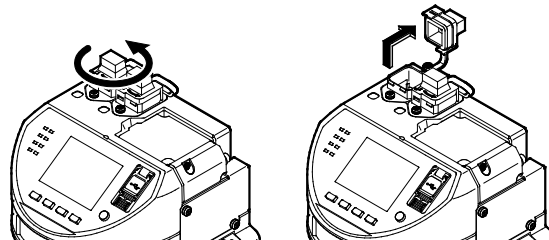

2. Connect Ethernet main unit connection cable (SZ-VNC03) with Ethernet extension cable (such as OP-88086).
 - a) Joint the three recesses on the Ethernet main unit connection cable connector and three bosses on the Ethernet extension cable connector to connect the cables.

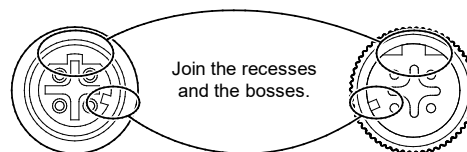

- b) Turn the screw of the connector clockwise. When connecting the cable, insert it vertically and tighten the screw while pushing it.

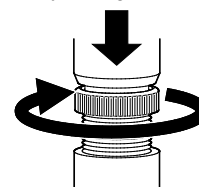


OP-88086/88087/88088/88089/88090/88091/88092

Recommended tightening torque: 0.8 to 1.0N·m

Tightening amount: 5 to 10°

3. Connect Ethernet main unit connection cable to display unit, to connect SZ-V to the computer.

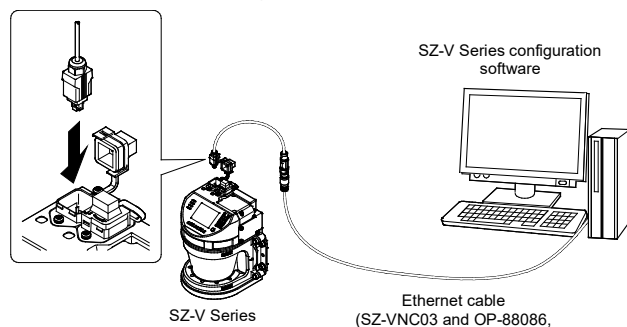


NOTICE

- When connecting to a network, please consult with someone who has knowledge of the network.
- Utilize networking in an environment where the security against threats is high.

8-2 Area and Function Names on the Screen

This section describes the names and functions of each part on the SZ-V Configurator screen.

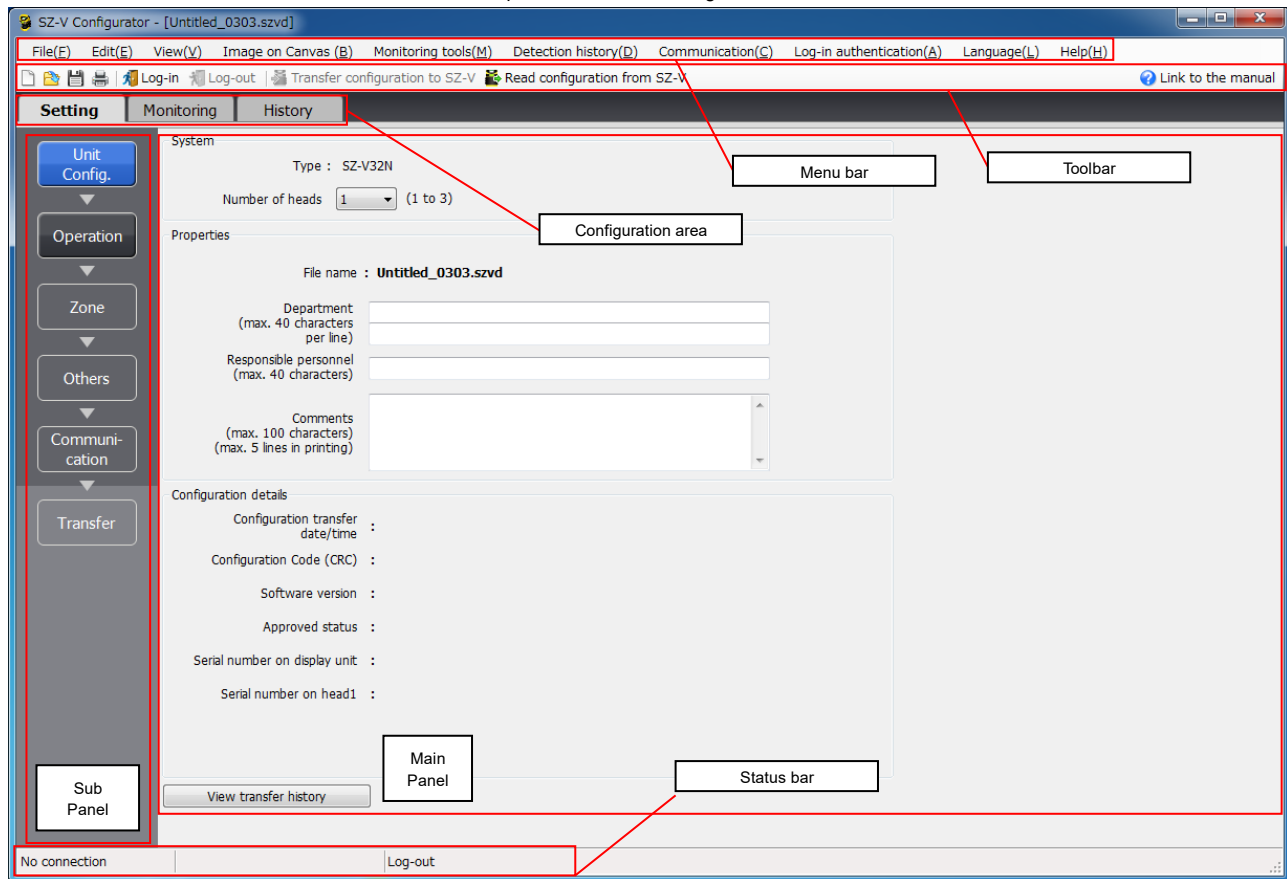

Menu bar

Displays the menus which execute each function.
For more information about the menus, see "Operation Menu" (page 103).

Toolbar

Buttons for frequently used functions are located here.

| Item | Description |
|------|--|
| | Creates a new configuration file. |
| | Opens a saved configuration file (*.szvd). |
| | Saves the configuration file being edited over the previous version of the file. |
| | Prints the information in the configuration file being edited. |
| | Enter a password to log in to the SZ-V Unit. |
| | Logs out of the SZ-V Unit. |
| | Transfers the configuration file to the SZ-V. |
| | Reads configuration data from the SZ-V. |
| | Displays the PDF file of the SZ-V Series User's Manual. |

Configuration area


It is possible to switch to the Setting tab, Monitoring tab, and History tab using these tabs.

| Item | Description |
|------------|--|
| Setting | Sets each function. "Configuring the settings" (page 74) Select the configuration item in the subpanel and set the corresponding items in the main panel. <ul style="list-style-type: none">Unit Config.: Set configuration and management information.Operation: Set the functions to be used.Zone: Set the zones for detection.Others: Sets AUX outputs and misc.Communication: Setup communication.Transfer: Write the settings to the SZ-V. |
| Monitoring | Start monitoring the SZ-V. "Monitoring Operations" (page 94) |
| History | Check the SZ-V detection history. "Checking the Detection History" (page 99) |

Subpanel

Display the navigation and SZ-V status.

The content displayed on the Setting tab, Monitoring tab, and History tab differs.

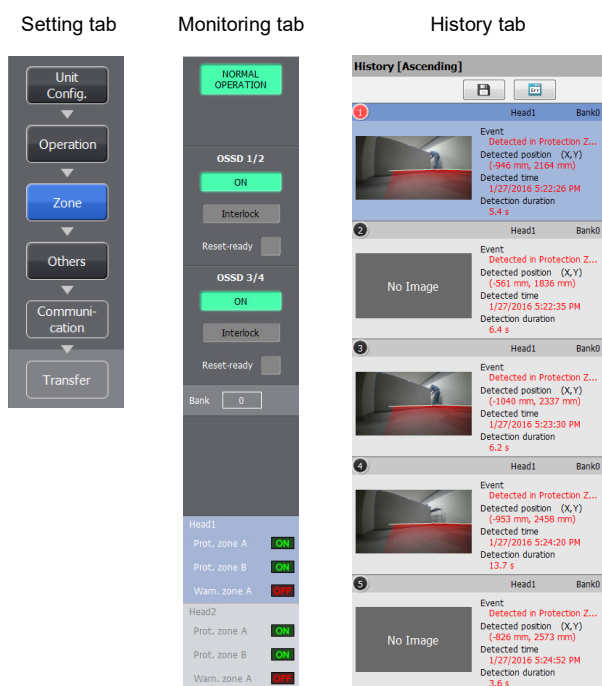


Main panel

Displays setting items and monitoring information.

The content displayed on the Setting tab, Monitoring tab, and History tab differs.

Status bar

Displays the connection mode, communication status, and log-in information.



1. Connection mode

Displays how the SZ-V is connected to the computer.

If a connection is not established with the SZ-V Configurator, it is shown as "No connection".

- USB connection, Ethernet connection, No connection

2. Communication status

Displays the communication status between the SZ-V and computer.

- Communicating, blank

3. Log-in status

Displays what authorization levels are the user is currently logged in with.

- Responsible Personnel, Maintenance Personnel, Log-out

8-3 Authorization Level and Settings

Three types of authorization levels are available in the SZ-V Configurator. User capabilities differ depending on the authorization level setting.

| Authorization level names | Overview | Initial password |
|---------------------------------------|---|------------------|
| Responsible personnel | Can perform all operations | 1111 |
| Maintenance personnel | In addition to machine operator authorization level, the following operations are possible: <ul style="list-style-type: none"> • Transfer the settings approved by the responsible personnel • Window calibration • Clear system configuration information | None |
| Machine operator (User yet to log in) | Only the following operations are possible <ul style="list-style-type: none"> • Retrieve settings • Monitor operations • Check detection history | Cannot set |

By default, valid authorization level setting is either responsible personnel or machine operator only. Maintenance personnel authorization level is disabled by default. Only the responsible personnel can change the validity of maintenance personnel authorization level, or change the password of maintenance personnel.



The configuration for safety-related functions and the others cannot be performed without the password. You must strictly keep the password.



- Maintenance personnel can transfer only settings that have been approved by the responsible personnel.
- If the maintenance personnel modifies settings, those settings cannot be transferred, even if the settings have been previously approved by the responsible personnel.
- If the responsible personnel saves the approved setting into a file, maintenance personnel can open the saved file and transfer the setting. However if maintenance personnel modifies the settings, the setting cannot be transferred.




Possible operations according to authorization level

| Operation | Responsible personnel | Maintenance personnel | Machine operator |
|--|-----------------------|-----------------------|------------------|
| Read configuration from SZ-V | ○ | ○ | ○ |
| Monitor SZ-V operation | ○ | ○ | ○ |
| See detection history | ○ | ○ | ○ |
| Transfer a setting approved by the responsible personnel | ○ | ○ | |
| Window calibration | ○ | ○ | |
| Clear system configuration information | ○ | ○ | |
| Approve the setting | ○ | | |
| Transfer a newly created setting to SZ-V | ○ | | |
| Initialization | ○ | | |
| Restart the SZ-V | ○ | ○ | |

8-4 Overview of How to Configure Settings


The SZ-V settings can be transferred with the following procedure:

- 1. Edit the settings in the SZ-V Configurator.
- 2. Select "transfer" to send the settings to the SZ-V.
- 3. Check that the transferred settings are as intended and approve them.
- 4. The SZ-V starts operating with the new settings.

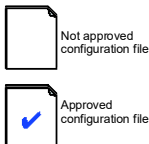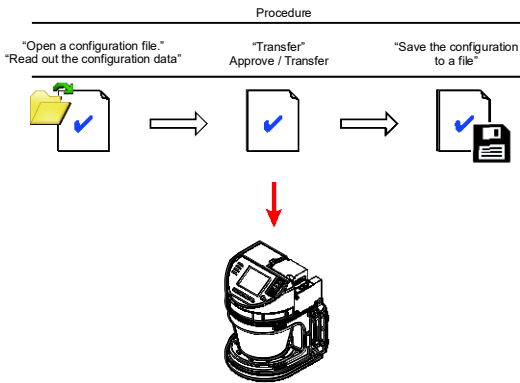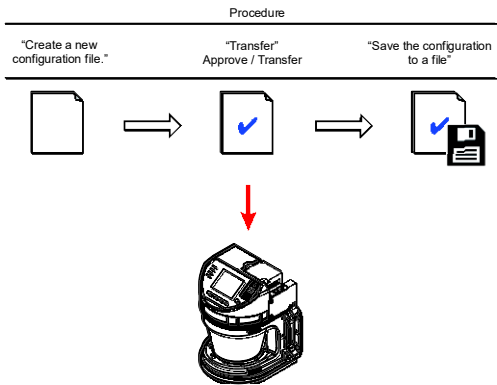

| | |
|--------|--|
| NOTICE | The following settings are not transferred. |
| | <ul style="list-style-type: none">• "View" (page 104)• "Image on Canvas" (page 105)• "Language" (page 110) |

How to read the Configuration tab

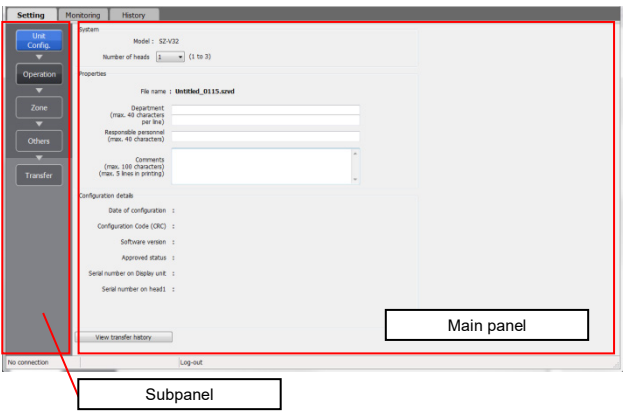

Subpanel

Items can be selected by clicking the item name. The background color of the subpanel indicates the selection status. Configure the settings in order from top to bottom.

| | |
|---------------|--|
| Unit Config. | Background Color: Blue Item is being configured on the main panel. |
| Operation | Background Color: Black Item can be selected for configuration. Click here to change the configuration on the main panel. |
| Zone | |
| Others | |
| Communication | Background Color: Gray Items not configured and cannot be selected at this time. These items can be selected once the items above them are configured. Once all the settings are configured, the [Transfer] button can be selected. |
| Transfer | |

Main panel

Displays detailed setting items.
For details, see "Setting Procedure" (page 73).

8-5 Setting Procedure

1. Determine the configuration

Click the [Configuration] button on the subpanel and input the configuration information.

The screenshot shows the 'Setting' tab of the SZ-V Configurator. On the left is a sidebar with buttons: 'Unit Config.', 'Operation', 'Zone', 'Others', and 'Transfer'. The main area is divided into three sections: 'System' with 'Model: SZ-V32' and 'Number of heads' (dropdown set to 1, range 1 to 3); 'Properties' with 'File name: Untitled_0115.szvd', 'Department' (max 40 characters), 'Responsible personnel' (max 40 characters), and 'Comments' (max 100 characters, 5 lines); and 'Configuration details' with fields for 'Date of configuration', 'Configuration Code (CRC)', 'Software version', 'Approved status', 'Serial number on Display unit', and 'Serial number on head1'. A 'View transfer history' button is at the bottom of the configuration details section. The status bar at the bottom shows 'No connection' and 'Log-out'.

| Item | | Description |
|--------------------------|--------------------------------|--|
| System | Model | Displays the set SZ-V model. |
| | Number of heads | Select the number of scanner heads the SZ-V connects to. |
| Properties | File name | Displays the configuration file's name. "untitled_MMDD.szvd" is displayed as the name for new, unsaved files. MMDD represents the date information. Example: January 1 st 2016: untitled_0101.szvd |
| | Department | Enter title or department information. Up to 80 characters can be entered (40 characters per line). |
| | Responsible personnel | Enter the name of the person in charge of configuration. Up to 40 characters can be entered. |
| | Comments | Enter any comments here. Up to 100 characters* ¹ can be entered. |
| Configuration Details *3 | Date of configuration | This shows the date and time that the configuration was transferred from the SZ-V Configurator to the SZ-V* ² . |
| | Configuration Code (CRC) | Displays a four digit code to identify the settings information* ² . |
| | Software version | This shows the version information for the SZ-V Configurator software that was used to create the settings file* ² . |
| | Approved status * ² | Displays whether these settings have been approved by the responsible personnel. Both the responsible personnel and maintenance personnel can transfer approved settings to the SZ-V. |
| | Serial number on Display unit | Displays the serial numbers of the Display unit and scanner heads* ² . |
| | Serial number on head 1 | |
| | Serial number on head 2 | |
| | Serial number on head 3 | |
| | [View transfer history] button | The history of the past 20 transfers can be viewed. The transfer history includes the following information: <ul style="list-style-type: none"> • Date and time of transfer • File name • Configuration Code (CRC) • The serial number of the Display unit that transferred the file The log in authorization levels of the person who transferred the file |

*1 Line breaks can be inserted into comments. However, each line break counts as two characters.

*2 In the following cases, these items will be left blank.

- The settings file is newly created and has never been transferred to the SZ-V.
- The content of the settings file retrieved from the SZ-V was modified.

*3 Displayed only after settings are retrieved from SZ-V.

2. Configuring the settings

Click the [Settings] button on the sub-panel and configure the settings.

Basic settings related to safety

| Item | Description | Related items |
|---------------------------|---|--------------------------------|
| PNP/NPN select | Select whether to set the SZ-V input and output logic to PNP or NPN. • Not configured (default) • PNP • NPN | "Select PNP or NPN" (page 46) |
| Interlock (Start/Restart) | Set the desired reset behavior when starting and restarting. • Automatic / Automatic (default) • Manual / Automatic • Manual / Manual | "Interlock function" (Page 47) |
| ON-delay | Set the delay when starting and restarting. Place a check mark <input checked="" type="checkbox"/> in the [Enable] check box to turn on the delay timer. Setting range: 2 to 60 (seconds) Default: 2 | |
| EDM | Set the status of the external device monitoring function. • Not used (default) • Apply | "EDM Function" (Page 48) |
| EDM time | If the EDM function is used, set the tolerance time needed for the external device to respond within. • 0.15 s • 0.3 s (default) • 0.6 s • 3 s | |

Protection zone settings

| Item | Description | Related items | | | | | | | | | | | | | | | | | | | | |
|-------------------------------------|--|--|-------------------------------------|---------------|-----------------|--------|-------|-------|--------|-------|-------|--------|-------|-------|--------|-------|-------|--------|-------|-------|---------|-------|
| Operation mode | Set the operation mode. • High speed mode • Standard mode (default) | "Operation modes" (page 44) | | | | | | | | | | | | | | | | | | | | |
| Minimum detectable object size | Configure the minimum detectable object size. Default: 70mm | "Minimum detectable object" (page 45) | | | | | | | | | | | | | | | | | | | | |
| Configurable area | This shows the maximum protection distance. This cannot be changed. The maximum configurable distance varies depending on the operation mode and minimum detectable object size setting. <table border="1"> <thead> <tr> <th>Minimum detectable object size (mm)</th><th>Standard Mode</th><th>High Speed Mode</th></tr> </thead> <tbody> <tr> <td>φ20 mm</td><td>1.6 m</td><td>1.1 m</td></tr> <tr> <td>φ30 mm</td><td>2.9 m</td><td>2.0 m</td></tr> <tr> <td>φ40 mm</td><td>4.3 m</td><td>2.9 m</td></tr> <tr> <td>φ50 mm</td><td>5.6 m</td><td>3.8 m</td></tr> <tr> <td>φ70 mm</td><td>8.4 m</td><td>5.7 m</td></tr> <tr> <td>φ150 mm</td><td>8.4 m</td><td>5.7 m</td></tr> </tbody> </table> | | Minimum detectable object size (mm) | Standard Mode | High Speed Mode | φ20 mm | 1.6 m | 1.1 m | φ30 mm | 2.9 m | 2.0 m | φ40 mm | 4.3 m | 2.9 m | φ50 mm | 5.6 m | 3.8 m | φ70 mm | 8.4 m | 5.7 m | φ150 mm | 8.4 m |
| Minimum detectable object size (mm) | Standard Mode | High Speed Mode | | | | | | | | | | | | | | | | | | | | |
| φ20 mm | 1.6 m | 1.1 m | | | | | | | | | | | | | | | | | | | | |
| φ30 mm | 2.9 m | 2.0 m | | | | | | | | | | | | | | | | | | | | |
| φ40 mm | 4.3 m | 2.9 m | | | | | | | | | | | | | | | | | | | | |
| φ50 mm | 5.6 m | 3.8 m | | | | | | | | | | | | | | | | | | | | |
| φ70 mm | 8.4 m | 5.7 m | | | | | | | | | | | | | | | | | | | | |
| φ150 mm | 8.4 m | 5.7 m | | | | | | | | | | | | | | | | | | | | |
| Scan cycle | Configure the scan cycle. | "Response Time and Scan Cycle" (page 45) | | | | | | | | | | | | | | | | | | | | |
| Response time | Set the SZ-V response time for the protection zone. | | | | | | | | | | | | | | | | | | | | | |

► Important

Make sure to select the PNP/NPN Select. If the PNP/NPN Select is not selected, the settings cannot be transferred to the SZ-V. This is not necessary when using PROFIsafe or CIP Safety™.

Warning zone settings

| Item | Description | Related items | | | | | | | | | | | | | | | | | | | | |
|-------------------------------------|--|--|-------------------------------------|---------------|-----------------|--------|------|------|--------|------|------|--------|------|------|--------|------|------|--------|------|------|---------|------|
| Minimum detectable object size | Configure the minimum detectable object size. | "Minimum detectable object" (page 45) | | | | | | | | | | | | | | | | | | | | |
| Configurable area | <p>This shows the maximum warning distance. This cannot be set.</p> <p>The maximum configurable distance varies depending on the operation mode and minimum detectable object size settings.</p> <table border="1"> <thead> <tr> <th>Minimum detectable object size (mm)</th><th>Standard Mode</th><th>High Speed Mode</th></tr> </thead> <tbody> <tr> <td>φ20 mm</td><td>21 m</td><td>15 m</td></tr> <tr> <td>φ30 mm</td><td>23 m</td><td>18 m</td></tr> <tr> <td>φ40 mm</td><td>24 m</td><td>20 m</td></tr> <tr> <td>φ50 mm</td><td>25 m</td><td>21 m</td></tr> <tr> <td>φ70 mm</td><td>26 m</td><td>23 m</td></tr> <tr> <td>φ150 mm</td><td>26 m</td><td>23 m</td></tr> </tbody> </table> | | Minimum detectable object size (mm) | Standard Mode | High Speed Mode | φ20 mm | 21 m | 15 m | φ30 mm | 23 m | 18 m | φ40 mm | 24 m | 20 m | φ50 mm | 25 m | 21 m | φ70 mm | 26 m | 23 m | φ150 mm | 26 m |
| Minimum detectable object size (mm) | Standard Mode | High Speed Mode | | | | | | | | | | | | | | | | | | | | |
| φ20 mm | 21 m | 15 m | | | | | | | | | | | | | | | | | | | | |
| φ30 mm | 23 m | 18 m | | | | | | | | | | | | | | | | | | | | |
| φ40 mm | 24 m | 20 m | | | | | | | | | | | | | | | | | | | | |
| φ50 mm | 25 m | 21 m | | | | | | | | | | | | | | | | | | | | |
| φ70 mm | 26 m | 23 m | | | | | | | | | | | | | | | | | | | | |
| φ150 mm | 26 m | 23 m | | | | | | | | | | | | | | | | | | | | |
| Response time | <p>Set the SZ-V response time for the warning zone.</p> <p>As the scan cycle is the same as the scan cycle for the protection zone, it cannot be set here.</p> | "Response Time and Scan Cycle" (page 45) | | | | | | | | | | | | | | | | | | | | |

Advanced Settings

| Item | Description |
|--|---|
| Reference points monitoring | <p>Set the reference points monitoring function.</p> <ul style="list-style-type: none"> Not used (default) Apply <p>"Reference Points Monitoring Function" (Page 57)</p> |
| Multi-OSSD function (OSSD3/4) | <p>Set the multi-OSSD function.</p> <ul style="list-style-type: none"> Not used (default) Apply <p>"Multi-OSSD Function" (Page 54)</p> |
| Bank switching function (Bank function when using PROFIsafe) | <p>Set the bank switching function.</p> <ul style="list-style-type: none"> Not used (default) Apply <p>"Bank Switching Function" (Page 49)</p> |
| Muting | <p>Set the muting function.</p> <ul style="list-style-type: none"> Not used (default) Apply <p>"Muting function" (Page 55)</p> |
| Use second warning zone (warning zone B) | <p>Set whether to use two warning zones per bank.</p> <ul style="list-style-type: none"> Not used (default) Apply <p>"Warning zone" (Page 17)</p> |
| Laser off input | <p>Set the laser off input.</p> <p>When using the laser off input, use an external input to set the SZ-V to laser shutdown.</p> <ul style="list-style-type: none"> Not used (default) Apply <p>"Operation Check Function" (Page 57)</p> |
| MI error detection time | <p>Set the time until an MI error occurs.</p> <ul style="list-style-type: none"> 5 s (default) 2 h |

- Reference**
- The multi-OSSD function can only be set on the SZ-V04.
 - The muting function can only be set on the SZ-V04 and SZ-V32N.

Reference point monitoring

There are no detailed setting items.

Multi-OSSD function

Safety Configuration (OSSD 3/4)

| Item | Description | Related items |
|---------------------------|---|--------------------------------|
| Interlock (Start/Restart) | <p>Configure the reset behavior when starting and restarting.</p> <ul style="list-style-type: none"> Automatic / Automatic (default) Manual / Automatic Manual / Manual | "Interlock function" (Page 47) |
| ON-delay | <p>Set the delay when starting and restarting.</p> <p>Place a check mark <input checked="" type="checkbox"/> in the [Enable] check box to set the delay time.</p> <p>Setting range: 2 to 60 (seconds)</p> <p>Default: 2</p> | |
| EDM | <p>Utilize the external device monitoring function.</p> <ul style="list-style-type: none"> Not used (default) Apply | "EDM Function" (Page 48) |

Protection zone settings (OSSD3/4)

| Item | Description | Related items | | | | | | | | | | | | | | | | | | | | |
|-------------------------------------|--|--|-------------------------------------|---------------|-----------------|--------|-------|-------|--------|-------|-------|--------|-------|-------|--------|-------|-------|--------|-------|-------|---------|-------|
| Minimum detectable object size | Configure the minimum detectable object size. | "Minimum detectable object" (page 45) | | | | | | | | | | | | | | | | | | | | |
| Configurable area | <p>This shows the maximum protection distance. This cannot be set.</p> <p>The maximum configurable distance varies depending on the operation mode and minimum detectable object size setting.</p> <table border="1"> <thead> <tr> <th>Minimum detectable object size (mm)</th><th>Standard Mode</th><th>High-speed Mode</th></tr> </thead> <tbody> <tr> <td>φ20 mm</td><td>1.6 m</td><td>1.1 m</td></tr> <tr> <td>φ30 mm</td><td>2.9 m</td><td>2.0 m</td></tr> <tr> <td>φ40 mm</td><td>4.3 m</td><td>2.9 m</td></tr> <tr> <td>φ50 mm</td><td>5.6 m</td><td>3.8 m</td></tr> <tr> <td>φ70 mm</td><td>8.4 m</td><td>5.7 m</td></tr> <tr> <td>φ150 mm</td><td>8.4 m</td><td>5.7 m</td></tr> </tbody> </table> | | Minimum detectable object size (mm) | Standard Mode | High-speed Mode | φ20 mm | 1.6 m | 1.1 m | φ30 mm | 2.9 m | 2.0 m | φ40 mm | 4.3 m | 2.9 m | φ50 mm | 5.6 m | 3.8 m | φ70 mm | 8.4 m | 5.7 m | φ150 mm | 8.4 m |
| Minimum detectable object size (mm) | Standard Mode | High-speed Mode | | | | | | | | | | | | | | | | | | | | |
| φ20 mm | 1.6 m | 1.1 m | | | | | | | | | | | | | | | | | | | | |
| φ30 mm | 2.9 m | 2.0 m | | | | | | | | | | | | | | | | | | | | |
| φ40 mm | 4.3 m | 2.9 m | | | | | | | | | | | | | | | | | | | | |
| φ50 mm | 5.6 m | 3.8 m | | | | | | | | | | | | | | | | | | | | |
| φ70 mm | 8.4 m | 5.7 m | | | | | | | | | | | | | | | | | | | | |
| φ150 mm | 8.4 m | 5.7 m | | | | | | | | | | | | | | | | | | | | |
| Response time | <p>Set the SZ-V response time for the protection zone.</p> | "Response Time and Scan Cycle" (page 45) | | | | | | | | | | | | | | | | | | | | |

OSSD output selection

| Item | Description |
|----------|--|
| OSSD 1/2 | <p>Set which scanner heads have protection zones that relate to OSSD 1/2. If you check <input checked="" type="checkbox"/> the check box for each scanner head, you can control if the protection zone relates to OSSD 1/2.</p> <p>Default: ON</p> |
| OSSD 3/4 | <p>Set which scanner heads have protection zones that relate to OSSD 3/4. If you check <input checked="" type="checkbox"/> the check box for each scanner head, you can control if the protection zone relates to OSSD 3/4.</p> <p>Default: ON</p> |

- Reference**
- OSSD output selection can be set only when two or more scanner heads are selected in the configuration.
 - The OSSD output selection can be set to OFF for both OSSD 1/2 and OSSD 3/4 for a scanner head.
 - In the OSSD output selection, users cannot set OSSD 1/2 or OSSD 3/4 to OFF for all scanner heads.

Bank switching function

| Item | Description |
|----------------------------|--|
| Bank switching method | Select the bank input method. <ul style="list-style-type: none"> Binary input (default) Single input Encoder input |
| Independent bank switching | Enable the independent bank switching function. Place a check mark <input checked="" type="checkbox"/> in the check box to enable the independent bank switching function. Default: OFF To enable independent bank switching, following settings must be set. Interlock: Auto/Auto Multi-OSSD function: Apply Bank switching method: Single Use second warning zone: Apply Laser off input: Not used |
| Number of banks | Set the number of banks to be used. The setting range differs depending on the Display unit, bank input method, and if the independent bank switching function is used. "Bank Switching Function" (page 49) Default: 2 |
| Bank transition time | If bank switching is not completed within the specified transition time, a bank input error will occur. Setting range: 0.02/0.05/0.1/0.25/0.5/1/2.5/5 (seconds) Default: 0.1 (seconds) |
| Bank sequence monitoring | Configurable when using three or more banks. Bank sequence monitoring is enabled by choosing "Apply". Default: Not used The bank sequence is set separately for each bank. Not specified: This permits switching to any bank (default). Specified: Monitor the bank switching sequence. This permits switching only to the banks specified (maximum 3). If switched to an unspecified bank, a bank sequence error will occur. Setting range: Bank 0 to Number of banks Default: Bank 0 ("1" for "From Bank 0") |
| Laser shutdown | The operation check function will operate when the bank specified in the assigned bank number is activated. To enable the operation check function, press the [Change settings] button, place a check mark <input checked="" type="checkbox"/> in the [Enable] check box, and then select [Laser shutdown bank]. Default: Disabled |
| Laser shutdown bank | When the operation check function is enabled, switching to the specified bank number will cause the operation check function to activate. |

- Reference**
- Encoder inputs can be selected for the bank switching method for only the SZ-V32 type and SZ-V32N type.
 - The independent bank switching function is only available on the SZ-V04 type.
 - The same bank number cannot be set for the bank to be switched to in the bank sequence monitor function. Example: "3" cannot be set when you set "To bank" for "From bank3".

Encoder settings

When the bank input method is set to encoder input, the [Encoder settings] button is displayed. Click the [Encoder settings] button and configure the encoder-related settings.

Velocity settings

| Item | Description |
|-------------------------------|---|
| Encoder 1 | Specify the number of pulses per 1mm of AGV travel for Encoder 1. Setting range: 5 to 100 (pulses/mm) Default: 5 |
| Encoder 2 | Specify the number of pulses per 1mm of AGV travel for Encoder 2. Setting range: 5 to 100 (pulses/mm) Default: 5 |
| Allowable variation | Set the maximum value that is allowed as an error for Encoder 1 and Encoder 2. If an error that exceeds the maximum value continues for longer than the time set in "Maximum variation time" the SZ-V goes to an error state. Setting range: 0 to 45% Default: 25% |
| Maximum variation time | Specify the time until an allowable error is detected. 10 s, 30 s (default), and 1 min |
| Switching velocity | Specify the velocity at which the velocity banks switch. The velocity must be set in ascending order. Unit of input: 0.1 (m/s) Invalid input: 0.0 (m/s) The minimum and maximum switching velocities are determined by the formula below. Max velocity (m/s) = 100 (kHz) / No. of pulses per 1mm of AGV travel (pulse/mm) for the encoder |
| [Add velocity bank] button | The threshold of the velocity at which velocity banks switch can be increased. Up to eight velocity banks can be set. |
| [Delete velocity bank] button | Delete the velocity bank added last. |
| [Add wiring bank] button | Add wiring banks depending on the combination of bank input wires. Up to four banks can be set. |
| [Delete wiring bank] button | Delete the wiring bank added last. |

- Reference**
- If the minimum value of switching velocity is 0.1 [m/s] or higher, SZ-V goes to "Bank Velocity Error" when encoder is stopped. To prevent SZ-V from going to error state while encoder is stopped, please set the minimum value of switching velocity to -0.1 [m/s] or smaller.

■ Muting

Muting

Muting configuration

Time period between muting inputs

Sequence of muting inputs

Maximum muting period of time


Muting lamp error


Override configuration

Maximum override period of time

• Muting configuration

| Item | Description |
|-----------------------------------|---|
| Time period between muting inputs | Set the time period between muting inputs that is recognized for the start of muting. Muting is initiated if the SZ-V detects the muting inputs (muting input 1 and 2) within the specified time period according to the "Sequence of muting inputs". <ul style="list-style-type: none"> • 0.04s to 3s (default) • 0.04s to 5s • 0.04s to 10s • Not specified |
| Sequence of muting inputs | Set the sequence of muting input that is needed to initiate the muting condition. <ul style="list-style-type: none"> • 1 → 2 fixed (default) • 2 → 1 fixed • Not specified |
| Maximum muting period of time | Specify how long muting will last. <ul style="list-style-type: none"> • 1 min • 5 min (default) • 10 min • Not specified |
| Muting lamp error | Set how the OSSD performs in the case of muting lamp failure. <ul style="list-style-type: none"> • ERROR • Alert (default) |

| | |
|---|---|
|  | The responsible personnel must perform the risk assessment based on the machine application in order to appropriately determine the risk if "Not specified" is selected for the maximum muting period of time. Moreover, based on this result, enact additional safeguards if necessary. |
|---|---|

| | |
|---|--|
|  | <p>Consider the potential danger due to the muting sensor unexpectedly failing. Also, note the following when "Not specified" is selected for both the maximum muting period and time between muting inputs.</p> <ul style="list-style-type: none"> • If the time between muting inputs exceeds 3 seconds, the muting state will be terminated approximately 5 minutes later. (If the time between muting inputs is within 3 seconds, the muting state continues and is unlimited as per the settings.) |
|---|--|

• Override configuration

| Item | Description |
|---------------------------------|--|
| Maximum override period of time | This specifies how long the override will last. <ul style="list-style-type: none"> • 1 min (default) • 5 min • 10 min |

■ Use second warning zone (warning zone B)

Use second warning zone (warning zone B)

Warning zone B settings

Minimum detectable object size

Configurable area

Response time

| Item | Description | Related items | | | | | | | | | | | | | | | | | | | | |
|-------------------------------------|--|--|-------------------------------------|---------------|-----------------|--------|------|------|--------|------|------|--------|------|------|--------|------|------|--------|------|------|---------|------|
| Minimum detectable object size | Configure the minimum detectable object size. | "Minimum detectable object" (page 45) | | | | | | | | | | | | | | | | | | | | |
| Configurable area | <p>This shows the maximum warning distance. This cannot be set. The maximum configurable distance varies depending on the operation mode and minimum detectable object size setting.</p> <table border="1"> <thead> <tr> <th>Minimum detectable object size (mm)</th><th>Standard Mode</th><th>High-speed Mode</th></tr> </thead> <tbody> <tr> <td>φ20 mm</td><td>21 m</td><td>15 m</td></tr> <tr> <td>φ30 mm</td><td>23 m</td><td>18 m</td></tr> <tr> <td>φ40 mm</td><td>24 m</td><td>20 m</td></tr> <tr> <td>φ50 mm</td><td>25 m</td><td>21 m</td></tr> <tr> <td>φ70 mm</td><td>26 m</td><td>23 m</td></tr> <tr> <td>φ150 mm</td><td>26 m</td><td>23 m</td></tr> </tbody> </table> | | Minimum detectable object size (mm) | Standard Mode | High-speed Mode | φ20 mm | 21 m | 15 m | φ30 mm | 23 m | 18 m | φ40 mm | 24 m | 20 m | φ50 mm | 25 m | 21 m | φ70 mm | 26 m | 23 m | φ150 mm | 26 m |
| Minimum detectable object size (mm) | Standard Mode | High-speed Mode | | | | | | | | | | | | | | | | | | | | |
| φ20 mm | 21 m | 15 m | | | | | | | | | | | | | | | | | | | | |
| φ30 mm | 23 m | 18 m | | | | | | | | | | | | | | | | | | | | |
| φ40 mm | 24 m | 20 m | | | | | | | | | | | | | | | | | | | | |
| φ50 mm | 25 m | 21 m | | | | | | | | | | | | | | | | | | | | |
| φ70 mm | 26 m | 23 m | | | | | | | | | | | | | | | | | | | | |
| φ150 mm | 26 m | 23 m | | | | | | | | | | | | | | | | | | | | |
| Response time | Set the response time. As the scan cycle is the same as the scan cycle for the protection zone, it cannot be set here. | "Response Time and Scan Cycle" (page 45) | | | | | | | | | | | | | | | | | | | | |

■ Laser off input

There are no detailed setting items.


■ MI error detection time

| Item | Description |
|-------------------------|---|
| MI error detection time | <p>This specifies MI error detection time.</p> <ul style="list-style-type: none"> • 5s (Default) • 2h |

For detail, refer to "MI Error" (page 19).

3. Set the zone

Click the [Zone] button on the sub-panel and set the zones.

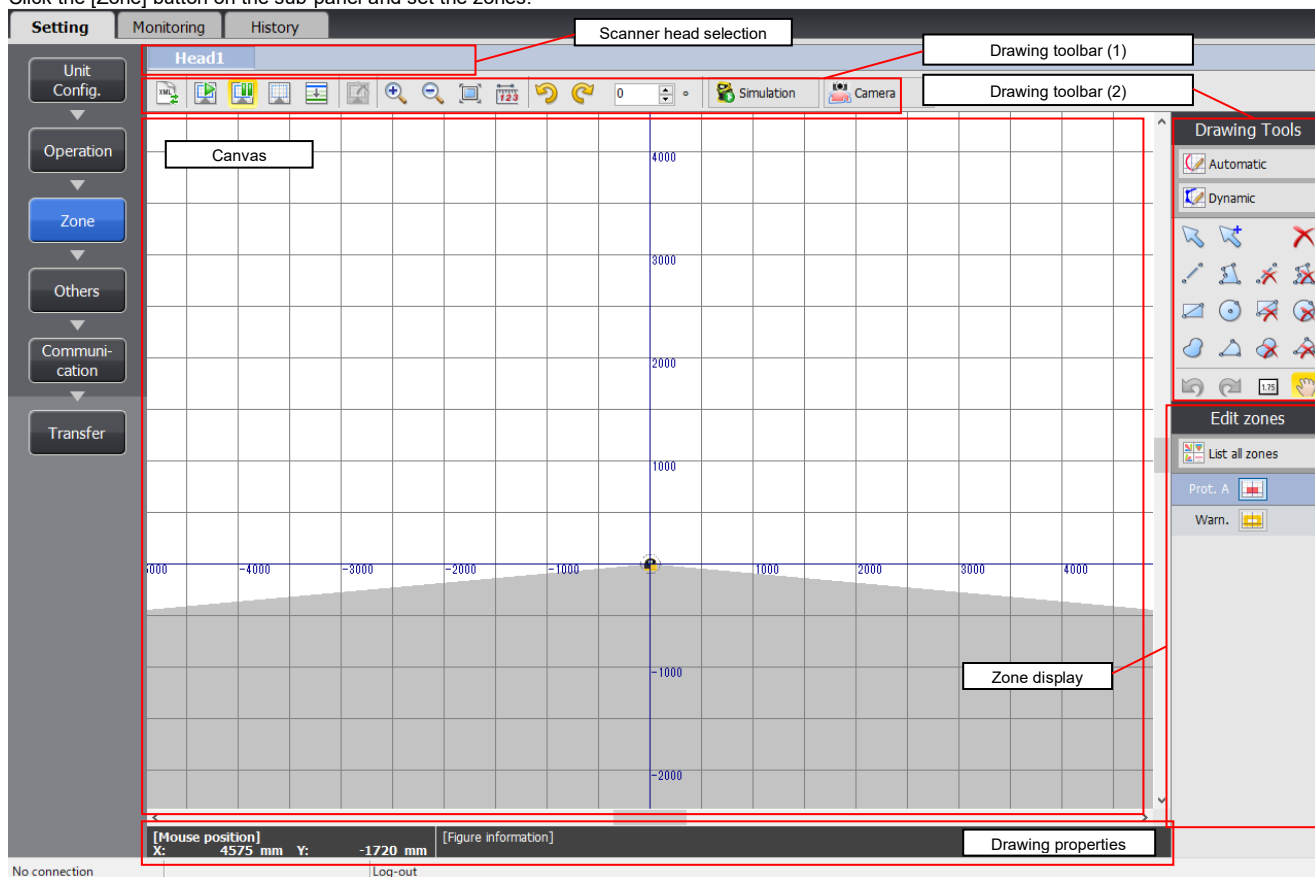


| Item | Description |
|------------------------------|--|
| Scanner head selection panel | Displays the selected scanner head. |
| Canvas | Set the zone that the selected SZ-V scanner head detects. "Canvas" (page 79) The "Drawing toolbar" is used for zone configuration. |
| Zone display panel | Select the zone to be configured with this panel and also switch whether the zone in question is displayed or not. * This button is disabled when the independent bank switching function is used. |
| Drawing toolbar (1) (2) | Draw the zone on the canvas with these drawing tools. "Drawing toolbar (1)" (page 80) "Drawing toolbar (2)" (page 80) |
| Drawing properties | This shows information related to the drawing. • [Mouse position] This shows the current coordinates of the mouse pointer. • [Figure information] This shows information such as the size and angles of figures on the canvas. |

Reference See the following section for detailed information on each function.

- "Protection zone" (page 17)
- "Warning zone" (page 17)
- "Reference Points Monitoring Function" (page 57)
- "Multi-OSSD Function" (page 54)
- "Bank Switching Function" (page 49)
- "Muting function" (page 55)

Canvas


The SZ-V scanner head is represented in the center of the canvas. A grid is shown on the canvas for reference.

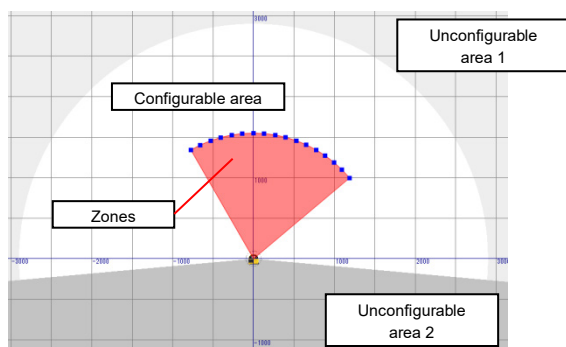

| Item | Description |
|--|---|
| Configurable area | The color of the canvas is white for the configurable area. The configurable area varies depending on the configuration of the safety functions. |
| Unconfigurable area 1 | The canvas background color is light gray for areas that cannot be configured. |
| Unconfigurable area 2 | The canvas background color is dark gray for areas that are not visible to the SZ-V scanner head laser (blind areas). These zones cannot be configured. |
| Zone with the limited detection capability | The zone within the circle with a radius of 93.5mm from the center of the SZ-V scanner head (protection zone origin) is a zone with limited detection capability. "Zone with the limited detection capability" (page 19) |
| Zones | Zones consist of points on the optical axis (user points) and detection zone origin points connected by line segments. The filled in area indicates the zone. |

Zone display panel

The contents vary depending on the model and the selected content.

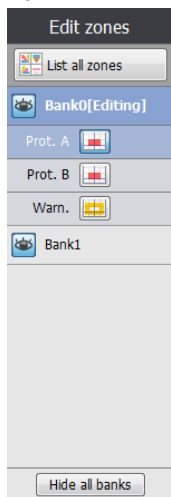

| Item | Description |
|------------------|--|
| [List all zones] | Displays zones in a list. "List all zones" (page 79) |
| Bank | This is shown if banks have been set. [Editing] is displayed on the selected bank. If the button is pressed, that bank's protection zones, warning zones, muting zones, and reference points will be hidden. When pressed again, they will reappear. *1 |
| Zones | The following configurable items will be displayed: <ul style="list-style-type: none"> • Protection zone A • Protection zone B |


| | |
|-------------------------|--|
| | <ul style="list-style-type: none"> • Reference points • Muting zones • Warning zone A*2 • Warning zone B |
| Show all/hide all banks | Switch all banks to be shown or hidden. Even if all banks are hidden, the zones of the bank that is being edited are shown. |

*1 Zone being currently edited cannot be hidden.

*2 Warning Zone A is displayed as the warning zone if Warning Zone B is not set.

List all zones

Shows zone settings per bank.

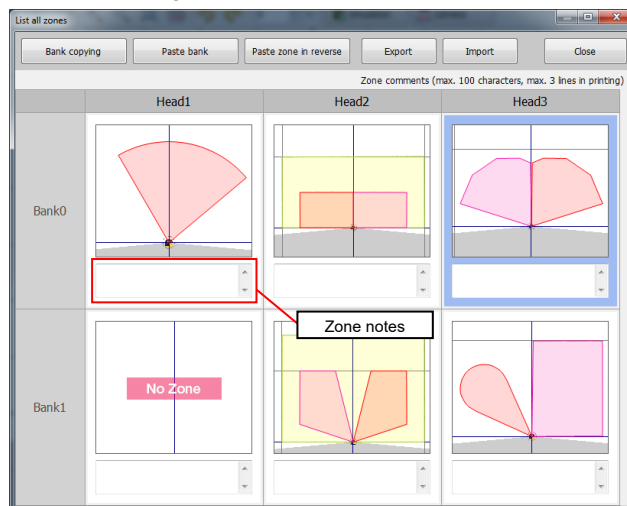



| Item | Description |
|---------------------------------|--|
| (Bank number) | Indicates each bank's zone. |
| [Bank copying] button* | Copy all regions of the selected bank. |
| [Paste bank] button* | Paste the copied zones of the selected bank. |
| [Paste zone in reverse] button* | Paste the copied zones of the selected bank in reverse. |
| [Export] button* | Save all regions of the selected bank in a bank file. |
| [Import] button* | Retrieve and paste the zones saved in the bank file onto the selected bank. |
| [Close] button | Return to the Zone screen. |
| Zone notes | Enter any comments here. Recommended to enter some information about when this zone is selected. Up to 100 characters can be entered. |

* When using the independent bank switching function, this button is disabled.

Drawing toolbar (1)

The following tools can be used when drawing on the canvas.

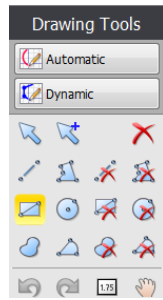

| Item | Description |
|-------------------------|---|
| [Automatic] button | Automatically draws a zone based on the detection state of the SZ-V scanner head. "Automatic drawing function" (page 87) "Automatic trimming function" (page 88) |
| [Dynamic] button | By detecting the specialized sheet, users can automatically draw zones. "Dynamic drawing function" (page 89) |
| [Point selection] | Select a user created point or reference point for the zone currently being edited. Drag to select multiple points. |
| [Add points] | Add user created points or reference points to the border of the zone currently being edited. |
| [Delete all] | Clear everything in the zone. |
| [Set a line segment] | Add a line connecting two points, as well as the triangular area defined by the points on that line and the origin. |
| [Add polygon] | Add a polygon defined by multiple user points, as well as the area defined by these points and the origin. |
| [Delete a line segment] | Delete from the area currently being edited an area defined by the two points on the selected line and the origin. |
| [Delete polygon] | Delete a polygon defined by multiple user points and the area created by these points and the origin. |
| [Set a rectangle] | Add a rectangle with two specified points at opposite vertices, as well as the area defined by these points and the origin. |
| [Set a circle] | Add a circle with a radius defined by specified points, as well as the area defined by these points and the origin. |
| [Delete a rectangle] | Delete a rectangle with the two selected points on opposing vertices and the area created by these points and the origin. |
| [Delete a circle] | Delete a circle with a radius defined by specified points and the area created by these points and the origin. |
| [Freehand drawing] | Add a freehand shape, as well as the area defined by that shape and the origin. |
| [Set a sector] | Add a sector with an edge defined by two specified points and an internal angle specified by a third, as well as the area defined by these points and the origin. |
| [Freehand deletion] | Delete a freehand shape, as well as the area defined by that shape and the origin. |
| [Delete a sector] | Delete a sector with an edge defined by two specified points and an internal angle specified by a third, as well as the area defined by these points and the origin. |
| [Undo] | Undo the previous operation. |
| [Redo] | Redo the last operation that was undone. |
| [Number input] | Add zones by entering coordinates in numbers for line segments, rectangles, polygons, circles, and sector zones. |
| [Palm] | Change the XY direction of the display position. The mouse icon changes into  while dragging. |

Drawing toolbar (2)

The following tools can be used when drawing on the canvas.



| Item | Description |
|----------------------------|--|
| [Zone import/export] | Import or export all of the zone data. The file format is XML. "XML file" (Page 90) |
| [Start real-time ranging] | Displays the ranging state of the current SZ-V scanner head in real time. "Real-time ranging" (page 91) |
| [Pause real-time ranging] | Temporarily stops the real time ranging display. "Real-time ranging" (page 91) |
| [Finish real-time ranging] | Clears the real-time ranging information on the canvas. "Real-time ranging" (page 91) |
| [Bottom hold] | Holds real time ranging display at the bottom. Displays the results of a bottom-hold with a green line. This is available only when the real time ranging display is being executed. "Real-time ranging" (page 91) |
| [Clear bottom hold] | Clears the bottom hold display. |
| [Zoom In] | Zooms in on the canvas. |
| [Zoom Out] | Zooms out of the canvas. |
| [Full display] | Adjust the screen scale in order to show the entire zone of the real-time ranging that is being executed on the canvas. |
| [Ruler] | This indicates the distance between two specified points. |
| [Left rotation] | Rotates the SZ-V scanner head direction 45° to the left on the canvas. "Rotating the canvas" (page 92) |
| [Right rotation] | Rotates the SZ-V scanner head direction 45° to the right on the canvas. "Rotating the canvas" (page 92) |
| [Rotation angle] | Rotates the SZ-V scanner head direction on the canvas. Press the up and down buttons on the input box to track and rotate the SZ-V scanner head on the canvas. "Rotating the canvas" (page 92) |
| [Simulation mode] button | Start Simulation mode. "Simulation mode" (page 92) |
| [Camera] button | Displays the sensor camera image. "Checking the camera" (page 92) |

4. Configure other settings

Click the [Other] button on the sub-panel and configure other settings.

Setting | Monitoring | History

Unit Config.

Operation

Zone

Others

Transfer

State information output
State information output: Not used

Auxiliary outputs
AUX1: Not used
AUX2: Not used
AUX3: Not used
AUX4: Not used

Wire color and assigned function

Display settings
Power saving mode: Not used
Camera blur: Not used

Detection history
Saving mode: Single Frame/Photo

Single Frame/Photo
Saves a single frame of the measurement status from the Monitor View, and when using a camera model, a photo at the moment of detection. Latest 30 photos will be saved. Saved photos are deleted after restarting SZ-V.

Multi-Frame/Video
Saves multiple frames of the measurement status from the Monitor View, and when using a camera model, a video from 2 seconds before to 2 seconds after the moment of detection. 10 videos will be saved. Saving order can be selected. Saved videos are not deleted after restarting SZ-V.

Reference See the following sections for detailed information on each function.

- "State information output" (page 60)
- "Error output" (page 64)
- "Alert output" (page 64)
- "Error or alert output" (page 64)
- "Muted or override condition output" (page 56)
- "Muting lamp output" (page 56)
- "OSSD state output" (page 61)
- "Detection in the protection zone output" (page 65)
- "Detection in the warning zone output" (page 65)
- "Interlock-Reset-Ready Output" (page 66)
- "Encoder error output" (page 64)
- "Transition to Normal Operation Output" (page 66)

| State information output | |
|--------------------------|--|
| Item | Description |
| State information output | Set state information output. <ul style="list-style-type: none"> • Not used (default) • Apply |
| Pulse width | Set the pulse width for the state information output. <ul style="list-style-type: none"> • 20 ms (default) • 40 ms • 60 ms • 80 ms • 100 ms • 200 ms • 300 ms |

Reference When using the state information output, the AUX 1 output and the AUX 2 output will be automatically assigned to state information output.

| Auxiliary outputs | |
|-----------------------------|--|
| Item | Description |
| AUX 1 to AUX6 ^{*1} | Set AUX outputs. <ul style="list-style-type: none"> • Not used (default) • Error output • Alert output • Error or alert output • Muted or override condition output^{*2} • Muting lamp output^{*2 *3} • OSSD state output • Detection in the protection zone output^{*4} • Detection in the warning zone output^{*4} • Interlock-reset-ready output^{*5} • Encoder error output^{*6} • Transition to normal operation output |

^{*1} The number of AUX outputs that can be used differs depending on the Display unit model and the other functions that are used. "AUX Output" (Page 46).

^{*2} Select this item only when specifying "Apply" for the muting function.

^{*3} This output can only be assigned to AUX 6 (AUX 4 for the SZ-V32N type).


^{*4} When adding scanner heads, select all scanner heads or a specific scanner head.

^{*5} Do not select this item when the interlock function is set to "Automatic/Automatic".

^{*6} Select this item only when the bank switching function is set to "Apply" and the bank switching method is set to "Encoder input".

■ Wire color and assigned function

The [Wire color and assigned function] button allows users to check which wire color is assigned to which function with the current settings.

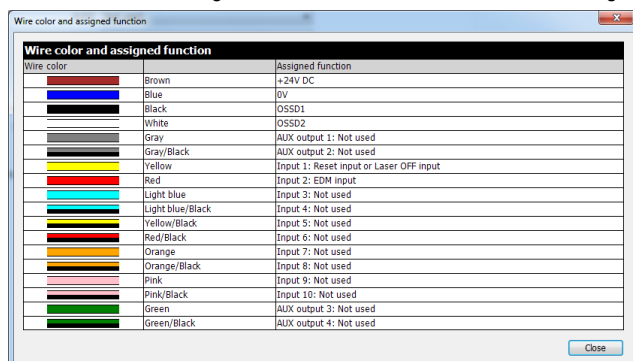

Display settings

| Item | Description |
|-------------------|--|
| Power saving mode | Set power saving mode. "Reducing Power Consumption" (page 58) • Not used (default) • Apply |
| Camera blur | Set the camera blur function. "Camera Blur Function" (page 58) • Not used (default) • Apply |

Detection history

| Item | Description |
|----------------------------------|--|
| Saving mode | Set the format to save images for the detection history. • Single Frame/Photo (default) • Multi-Frame/Video |
| Save First / Last 10 occurrences | Set the format to save the detection history. Select a format only when the image save format is set to [Multi-Frame/Video]. • Save last 10 • Save first 10 (default) |

Reference When the image save format is [Single Frame/Photo], the save format is automatically set as [Save last 30].

5. Communication settings

- Reference**
- The communication settings can only be set for the SZ-V32N type or SZ-V32NC type. For other models, "Communication settings" is not displayed.
 - For details about communication methods, see the separate "SZ-V Communications Manual".

Click the [Communication settings] button on the sub-panel and configure the communication settings.

■ When UDP, EtherNet/IP™ or PROFINET is selected as the communication protocol


The screenshot shows the 'Communication settings' window. On the left is a sidebar with buttons: Unit Config., Operation, Zone, Others, Communication (highlighted), and Transfer. The main area has three tabs: Setting, Monitoring, and History. Under the 'Setting' tab, there are three sections: 'Communication protocol' with radio buttons for 'Measurement distance data output (UDP)', 'EtherNet/IP', and 'PROFINET' (selected); 'Options' with a dropdown for 'Endianness' (set to 'Little-endian'), a dropdown for 'Measured value stabilization filter' (set to 'None'), and a button for 'Diagnostics' (set to 'Advanced settings'); and 'Ethernet Setting' with a checkbox for 'Apply communication settings' (checked), a dropdown for 'IP setting' (set to 'Static IP'), and input fields for 'IP address' (0.0.0.0), 'Subnet mask' (255.255.255.0), and 'Default gateway' (0.0.0.0). There is also a 'Device name' field and an 'Edit...' button. At the bottom, there is a status bar with 'No connection' and 'Log-out'.

Communication protocol

Select a communications protocol.

- Measurement distance data output (UDP) (default)
- EtherNet/IP™
- PROFINET

Options
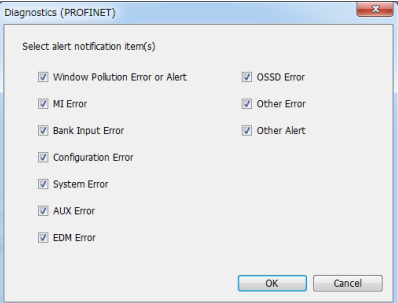
| Item | Description |
|--|---|
| Endianness | Set the data endianness. <ul style="list-style-type: none">• Big-endian• Little-endian (default) |
| Measured value stabilization filter | Set whether to filter the distance data obtained from the communication. When using a filter, the stability of the obtained data increases, but the response time decreases. <ul style="list-style-type: none">• None (default)• Apply |
| Diagnostics (Only when PROFINET is selected) | The notifying error and alarm items can be set using the PROFINET Diagnostics function. <div></div> |

Common Ethernet settings

Checking ☒ the change settings check box allows users to change the Ethernet settings. The modified settings are transferred to the SZ-V.

| Item | Description |
|--------------|---|
| IP setting | Set the method to assign the IP address. <ul style="list-style-type: none">• BOOTP/DHCP• Static IP (default) |
| Device name* | Set the device name. Click the [Edit] button to edit the device name. |

* The device name has the following restrictions.

- Maximum of 240 characters.
- Labels can be up to 63 characters in length.
- Characters "a-z", "0-9", and "-" can be used for labels.
- "-" cannot be used at the beginning or end of labels.
- "-" cannot be used at the beginning or end of the device name.
- "port-x" (x is number) cannot be used.
- "n.n.n.n" (n is number) cannot be used.

If the IP settings are set to "Static IP", configure the settings below.

| Item | Description |
|-----------------|--|
| IP address | Set the IP address. |
| Subnet mask | Set the subnet mask. |
| Default gateway | Set the default gateway. |
| [Copy] button* | Automatically obtain the IP address, subnet mask, and default gateway information from the connected SZ-V. |

* This button cannot be used when a device is not selected.

■ Advanced settings

When the [Advanced settings] dialog box appears, the setting below can be configured

| Item | Description |
|----------------------|--|
| TCP port number | Set the port number to use for TCP communications. <ul style="list-style-type: none">• Setting range: 0 to 65535• Default: 8637 |
| UDP Command Port No. | Set the port number to use for UDP communications. <ul style="list-style-type: none">• Setting range: 0 to 65535• Default: 8800 |
| Keep-alive time | Set the keep-alive time for TCP communications. <ul style="list-style-type: none">• Setting range: 10 to 600 s• Default: 90 s |
| Timeout period | Set the timeout time for communications. <ul style="list-style-type: none">• Setting range: 10 to 60 s• Default: 10 s |

■ When PROFI-safe is selected as the communication protocol

Communication Protocol


The settings of communications protocol are displayed.

- PROFI-safe (default)

PROFI-safe settings

| Item | Description |
|--------------|---|
| F_Source_Add | Set the source address. • Setting range: 1 to 65534 • Default: 1 |
| F_Dest_Add | Set the destination address. • Setting range: 1 to 65534 • Default: 1 |

Detail settings
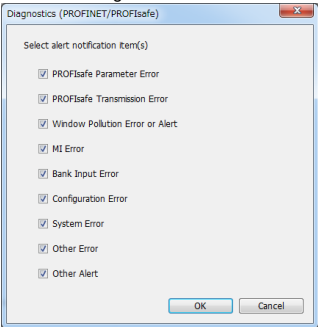
| Item | Description |
|----------------|---|
| Endianness | Set the data endianness. • Big-endian • Little-endian (default) |
| Ranging filter | Set whether to filter the distance data obtained from communications. If you use a filter, the stability of the obtained data increases, but the response time decreases. • Not use (default) • Use |
| Diagnostics | The notifying error and alarm items can be set with the PROFINET Diagnostics function.  |

Common Ethernet settings

If you check ☒ the change settings check box, you can change the Ethernet settings. The modified settings are transferred to the SZ-V.

| Item | Description |
|-------------|--|
| IP settings | Set the method to assign the IP address. • BOOTP/DHCP (default) • Fixed IP |
| Device name | You can set the device name. If you click the [Edit] button, you can edit the device name. |

* The device name has the following restrictions.

- Maximum of 240 characters.
- Labels can be up to 63 characters in length.
- Characters "a-z", "0-9", and "-" can be used for labels.
- "-" cannot be used at the beginning or end of labels.
- "." cannot be used at the beginning of end of the device name.
- "port-x" (x is number) cannot be used.
- "n.n.n.n" (n is number) cannot be used.

If you set the IP settings to "Fixed IP," you can configure the settings below.

| Item | Description |
|--------------------|--|
| IP address | Set the IP address. |
| Subnet mask | Set the subnet mask. |
| Default gateway | Set the default gateway. |
| [Copy bank] button | Automatically obtain the IP address, subnet mask, and default gateway information from the connected SZ-V. |

* This button cannot be used when a device is not selected.

■ Advanced settings

The [Advanced settings] dialog box appears and you can set the items below.


| Item | Description |
|-------------------------|--|
| TCP port number | Set the port number to use for TCP communications. • Setting range: 0 to 65535 • Default: 8637 |
| UDP command port number | Set the port number to use for UDP communications. • Setting range: 0 to 65535 • Default: 8800 |
| Keep-alive time | Set the keep-alive time for TCP communications. • Setting range: 10 to 600 seconds • Default: 90 seconds |
| Timeout time | Set the timeout time for communications. • Setting range: 10 to 60 seconds • Default: 10 seconds |

6. Transfer the settings

Once configuration is completed, the configuration data can be transferred to the SZ-V unit.
Before transferring the configuration data, make sure that the computer and the SZ-V unit are properly connected.


Procedure for transfer

- Click the [Transfer] button on the sub-panel.

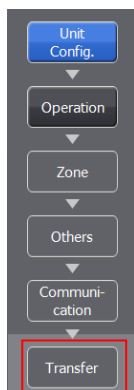

- The [Transfer] button cannot be clicked if the configuration is not complete.

- Click the [OK] button in the transfer settings dialog box.

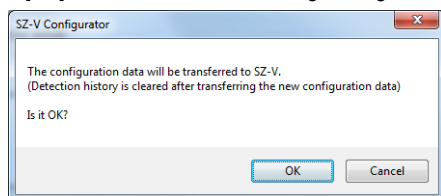

In the following cases, the settings cannot be transferred.


- The input and output polarity is not selected. (Except when using PROFIsafe or CIP Safety™.)
- There is an empty protection zone.
- The zone that was created is configured beyond the specifications.
- The set model and the connected SZ-V do not match.
- The number of set scanner heads and the number of connected SZ-V scanner heads do not match.
- If encoder input was selected for the bank switching method and the encoder settings are not configured.
- The connected SZ-V does not support the version of the SZ-V Configurator which is being used.
- When using PROFINET, PROFIsafe or CIP Safety™, the "Apply Communication Settings" check box is checked, and the device name is "Not configured".
- SZ-V is not connected with the computer.

| | |
|--------|--|
| NOTICE | Pressing [OK] while logged in erases the current SZ-V settings. If cancelled during the following procedure, the SZ-V enters waiting for configuration state and the current settings cannot be restored. |
|--------|--|


Reference When logged in as maintenance personnel, settings other than those pre-approved by the responsible personnel cannot be transferred.

- If not logged into the SZ-V unit, the [Log-in] dialog box will appear. Enter the correct password to log in. "Log-in" (page 109).
- The configuration data will be written to the SZ-V unit. After the configuration data is written, the configuration data is retrieved from the SZ-V unit for confirmation. During this time, do not disconnect the computer from the SZ-V.

- Click [OK] in the confirmation dialog to show the [Confirmation] dialog for the configuration data. Confirm the configuration and then click [Accept] if nothing is different from your intention. If the [Accept] button is grayed out and cannot be clicked, use the scroll bar to display all of the settings.

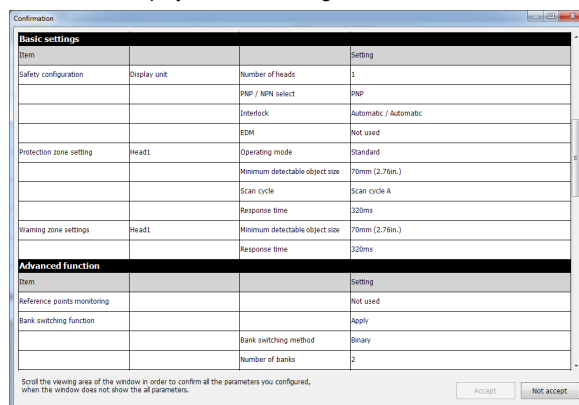


- The [Confirmation] dialog box appears. Confirm the zone and then click [Accept] if you find nothing different from your intention. If you have expanded the scanner heads, or are using the multi-OSSD or bank switching functions, the [Next head] button will appear next to the zone name, and the [Accept] button will be grayed out. The [Accept] button will become available once all the zones have been confirmed.

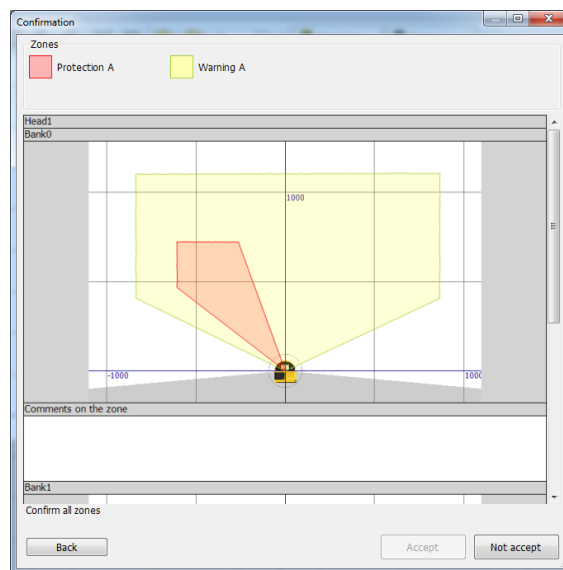

Important

- Clicking the [Not accept] button at step 5 or step 6 will cancel the transfer. If this happens, all configuration data on the SZ-V unit will be erased. The SZ-V enters the waiting for configuration state and "Waiting for Configuration" is displayed.
- However, the common Ethernet settings are transferred, and the SZ-V starts operating with the new settings. (If the "Apply Communication Settings" check box is checked.)

- The [Confirm] dialog box appears. Click the [Yes] button or the [No] button.

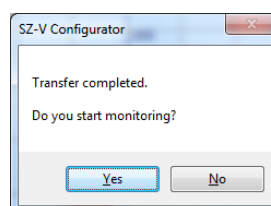


8-6 Useful Functions for Setting Zones


These are functions that can be used on the zone settings screen. By using these functions, it is possible to more quickly and easily set zones.

Automatic drawing function

The purpose of the automatic drawing function is to draw the zone automatically based on the surroundings of the SZ-V, such as a protective guarding.

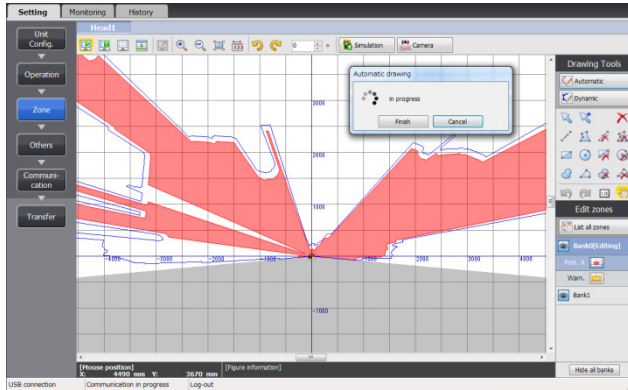

Automatic drawing and automatic trimming settings

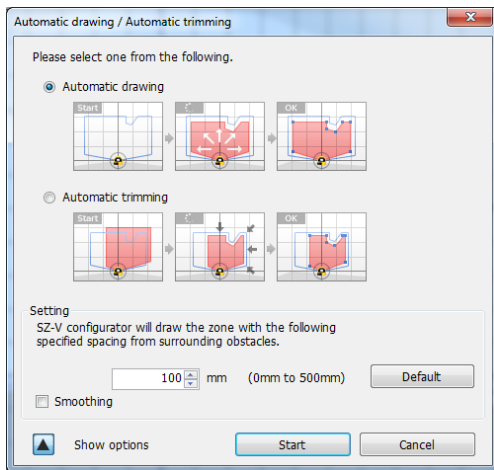

| Item | Description |
|----------------------|---|
| (Function selection) | Select whether to execute automatic drawing or automatic trimming. |
| Setting | Based on the actual ranging information from the SZ-V unit, the SZ-V Configurator automatically draws the zone, taking into account the specified space from the surrounding obstacles. Use the up and down buttons of the input box, or input the value directly. 0 to 500 (mm) Default: 100 mm |
| [Default] button | Reset the [Space] value to its default value. |
| Smoothing | Checking this check box and executing automatic drawing, reduces the number of user points so as to make the drawing easier to see and adjust. Default: OFF |
| [Start] button | Start automatic drawing. |
| [Cancel] button | Cancels automatic drawing and closes the dialog box. |




The zone drawn with automatic drawing or automatic trimming is just an informative zone, which is automatically drawn by the SZ-V Configurator based on the surrounding situation of the SZ-V, such as a protective guarding. Therefore, you must confirm whether the zone drawn with automatic drawing or automatic trimming is just as you intended, if you want to configure the actual protection zone according to the zone drawn with automatic drawing or automatic trimming. Failure to follow this warning may result in a significant harm to the machine operators, including serious injury or death.



- Check that the computer and the SZ-V Series unit are correctly connected first before executing automatic drawing and automatic trimming.
- Automatic drawing and automatic trimming cannot be used in muting zone settings and reference point settings.


Automatic drawing procedure

- Click the [Automatic] button on Drawing toolbar (1).
- The Automatic drawing/automatic trimming window appears. Select [Automatic drawing]. This procedure configures automatic drawing.

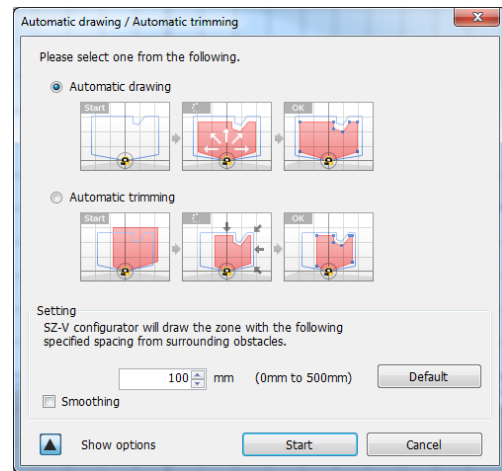

- Click the [Start] button to start automatic drawing.

The [Automatic drawing] dialog box appears.

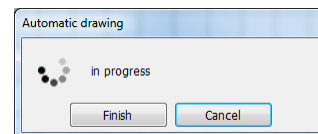


- Click the [Finish] button to fix the zone.
- Click the [OK] button to complete automatic drawing.



During automatic drawing, zone is drawn as a bottom hold of the detected distance. Unnecessary zone can be eliminated by actually moving objects or equipment.

Automatic trimming function

The purpose of the automatic trimming function is to draw the zone automatically based on the surrounding situation of the SZ-V in the same manner as automatic drawing. Unlike automatic drawing, it does this by trimming a zone that has already been set by the user. This function only affects zones that have already been drawn.

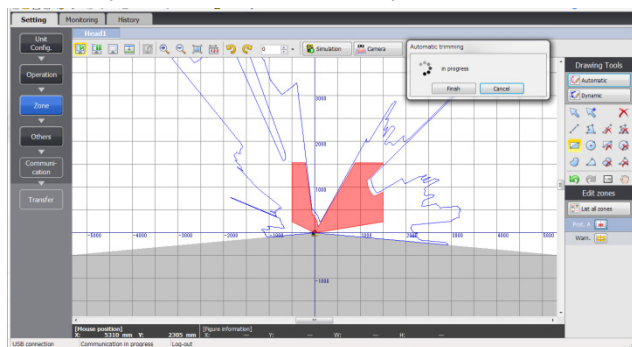


Automatic trimming settings


See “Automatic drawing function” page 87.

Automatic trimming procedure


1. Click the [Automatic drawing] button on Drawing toolbar (1).



2. The Automatic drawing/automatic trimming window appears. Select [Automatic trimming]. This procedure configures automatic trimming.

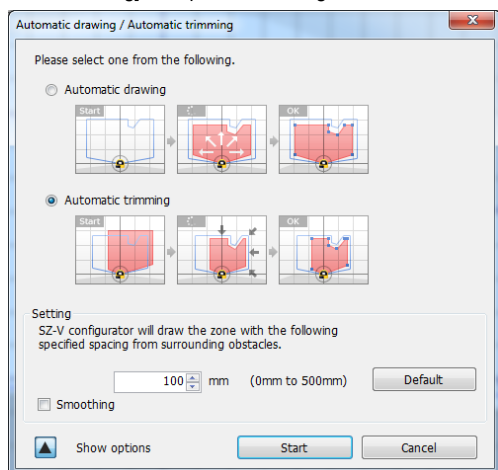

3. Click the [Start] button to start automatic trimming.
The [Executing automatic trimming] dialog box appears.

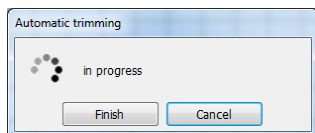


4. Click the [Finish] button to fix the zone.
5. Click the [OK] button to complete automatic trimming.

Reference The automatic trimming function cannot be executed if a zone was not set in advance.


Dynamic drawing function

The dynamic drawing function detects a particular workpiece (bundled dynamic drawing sheet(s)) on the SZ-V, and sets zones based on these detected positions.

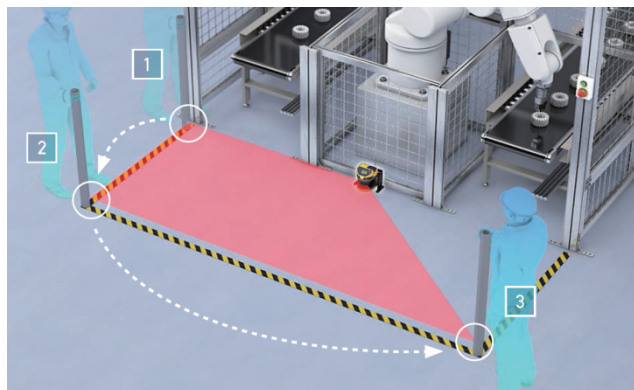


Dynamic drawing procedure

1. Click the [Dynamic] button on Drawing toolbar (1).




2. The dynamic drawing window appears. Select the execution option.

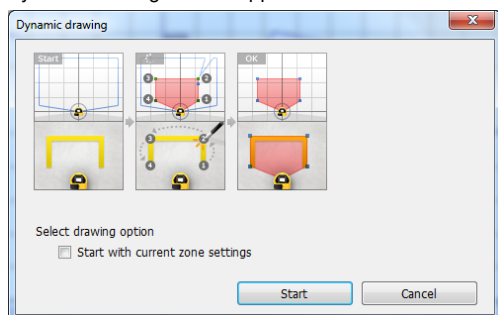

3. Click the [Start] button to start dynamic drawing.

The [Dynamic drawing] dialog box appears.

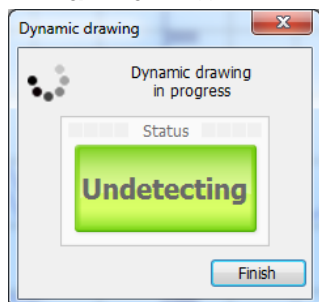

4. The dynamic drawing sheet is detected in the SZ-V detectable zone.


The detected points are added to the zone as dynamic drawing points. The added dynamic drawing points are connected and the zone is set.

During dynamic drawing, scanner head indicator flashes as follows.

| Light color | Status | Details |
|-------------|-----------------|---|
| Green | Flashing slowly | The zone being edited is in an object non-detection state |
| Orange | Flashing slowly | The dynamic drawing sheet is in a detection state |
| Red | Flashing slowly | The zone being edited is in an object detection state |

Point

When dynamic drawing points are added, zones can be efficiently drawn by adding points to the corner of the zone being set.

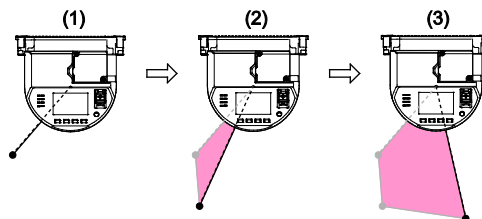

5. Click the [Finish] button to fix the zone.

6. Click the [OK] button to complete dynamic drawing.

DANGER

You must confirm whether the zone drawn with the dynamic drawing is just as you intended, if you want to configure the actual protection zone according to the zone drawn with dynamic drawing. Failure to follow this warning may result in a significant harm to the machine operators, including serious injury or death.

Reference

- You cannot execute dynamic drawing from a position 500 mm from the SZ-V.
- Check that the computer and the SZ-V Series unit are correctly connected first before executing dynamic drawing.
- Dynamic drawing cannot be used in muting zone settings and reference point settings.
- When detecting the dynamic drawing sheet, place it so that it faces the front of the SZ-V.
- When starting dynamic drawing, if there is a highly-reflective object or background, that optical axis cannot be used to detect the dynamic drawing sheet.

XML File

All of the zone data can be imported and exported. The file format is "XML".

Import from XML file

1. Click the [Zone Import/Export] button on the Drawing toolbar (1).



Or click the [File] button on the Menu bar, then click the [Zone Import/Export] button.

2. Select [Import from XML file] and click the [Select file] button.
3. Select the XML file and click the [Open] button.

Export to XML file

1. Click the [Zone Import/Export] button on the Drawing toolbar (1).



Or click the [File] button on the Menu bar, then click the [Zone Import/Export] button.

2. Select [Cartesian] and [Output data] on the Export setting.
When selecting the "Polar coordinates", "Only vertex" or "All points" can be selected.
Only vertex: Only the vertices represented by the blue squares are exported.
All points: All of the points that make up the zones are exported.
3. Click the [Execute] button.

Construction of XML

| No. | Element | Attribute | Range | Description |
|-----|-------------------------------------|----------------|---|--|
| (1) | configuration | unit | mm, inch, feet/in | Display unit "View" (page 104) |
| | | coordinate | Cartesian, Polar | Grid coordinates "View" (page 104) |
| | | version | 1.0 | - |
| (2) | head | number | 1 to 3 | Number of heads "1. Determine the configuration" (Page 73) |
| (3) | bank | number | 0 to 31 (Depending on the model) | Number of banks "Bank switching function" (Page 76) |
| (4) | zone | type | ProtectionA, ProtectionB, WarningA, WarningB, Muting, ReferenceA, ReferenceB (Depending on the model and setting) | Editable zones "Zone display panel" (Page 79) |
| (5) | userPoint | x,y | -60000 to 60000 | The points of cartesian coordinate to draw the zone. |
| | | r | 0 to 60000 | The points of polar coordinate to draw the zone. |
| | | a | -90 to 270 | |
| (6) | userPoint (For Reference A or B) | x,y | -60000 to 60000 | The parameters to set the reference point. "Reference Points Monitoring Function" (page 57) |
| | | r | 0 to 60000 | |
| | | a | -90 to 270 | |
| | | plusTolerance | 100 to 8300 | |
| | | minusTolerance | | |

Example of XML

The first line is the XML declaration that is fixed phrase.
The numbers such as (1) correspond to the above table.

■ Example

```


(1) <?xml version="1.0" encoding="utf-8"?>
    (2) <configuration unit="mm" coordinate="Cartesian" version="1.0">
        (3) <head number="1">
            (4) <bank number="0">
                (5) <zone type="ProtectionA">
                    <userPoint x="0" y="0" />
                    <userPoint x="500" y="500" />
                    <userPoint x="-500" y="500" />
                </zone>
                (4) <zone type="ReferenceA">
                    (6) <userPoint x="500" y="700" plusTolerance="100" minusTolerance="100" />
                    <userPoint x="-500" y="700" plusTolerance="100" minusTolerance="100" />
                </zone>
                <zone type="WarningA">
                </zone>
            </bank>
            <bank number="1">
                <zone type="ProtectionA">
                </zone>
            </bank>
        </head>
        (2) <head number="2">
            <bank number="0">
                <zone type="ProtectionA">
                </zone>
                <zone type="WarningA">
                </zone>
            </bank>
            <bank number="1">
                <zone type="ProtectionA">
                </zone>
            </bank>
        </head>
    </configuration>

```


■ (5) userPoint

The "userPoint" is imported from the top as the vertices, and the zone will be drawn with the vertices in that order. The origin is always specified as the first vertex.

- In the case of the above example

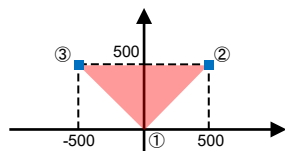

When selecting polar coordinates, the specified angles are as follows.

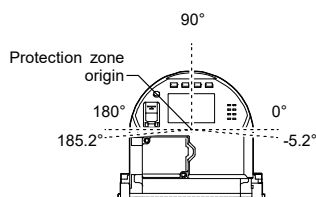

Real-time ranging


Displays the detected environmental boundaries of the SZ-V Series laser in real time on the canvas.

Real-time ranging procedure

1. Click the [Start real-time ranging] button on Drawing toolbar (2).



2. Real-time ranging starts.

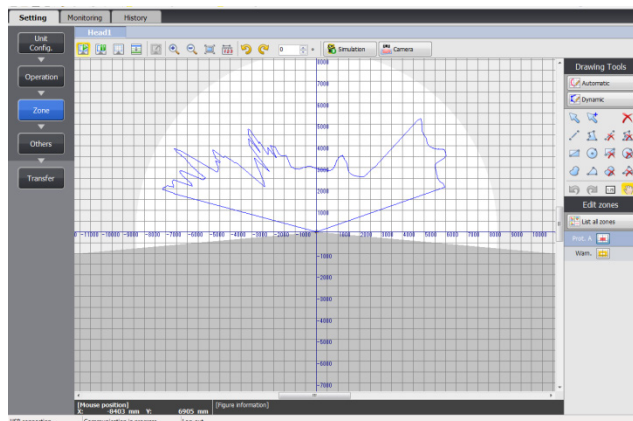

3. Click the [Pause real-time ranging] button to stop real-time ranging.

Reference Check that the computer and the SZ-V Series unit are correctly connected first before executing real-time ranging.


Rotating the canvas

Rotate the canvas to change the direction the SZ-V is facing on the SZ-V Configurator. By aligning with the direction the SZ-V scanner head is facing, zone settings and monitoring become easier to perform.

Procedure to rotate the canvas



By clicking the [Rotate left] button or [Rotate right] button, the canvas rotates in increments of 45°. It is also possible to align with a desired angle by entering a [Rotation angle] directly. Press the up and down buttons on the [Rotation angle] input box to track and rotate the SZ-V scanner head on the canvas.

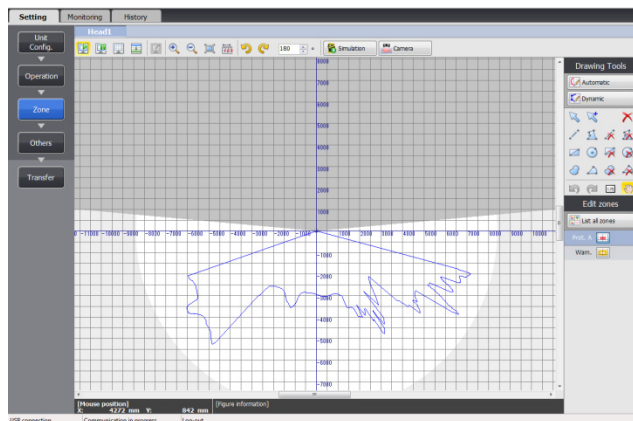


Simulation mode

Simulation mode is a function that can check operation in a new zone without transferring settings to the SZ-V unit. This function is useful when minor adjustments to the zone may be necessary.


Simulation mode procedure

1. Click the [Simulation] button on Drawing toolbar (2).
2. Simulation mode starts.

The [Simulation] dialog box appears.

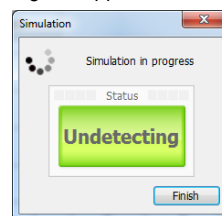

3. If an object is detected in the newly configured zone, the [Detection state] of the [Simulation] dialog box becomes [Detecting].

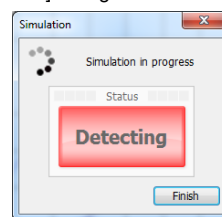

During simulation mode, scanner head indicator flashes as follows.

| Light color | Status | Details |
|-------------|-----------------|---|
| Green | Flashing slowly | The simulation zone is in a non-detection state |
| Red | Flashing slowly | The simulation zone is in a detection state |


- Reference**
- Check that the computer and the SZ-V Series unit are correctly connected first before executing simulation mode.
 - While in simulation mode, the SZ-V unit indicator alternately flashes red and green.
 - The SZ-V continues normal operation with the settings last transferred even in simulation mode. The new settings are not applied until the settings are actually transferred.
 - Simulation mode cannot be used in the muting zone settings and reference point settings.
 - Simulation mode can be performed to one scanner head at once. If multiple scanner heads are cascaded, only the selected scanner head goes into simulation mode.

Checking the camera

Check the zone and detection plane on camera images without transferring the settings.

Procedure to check the camera

1. Click the [Camera] button on Drawing toolbar (2).
2. The currently selected scanner head* camera image is displayed.

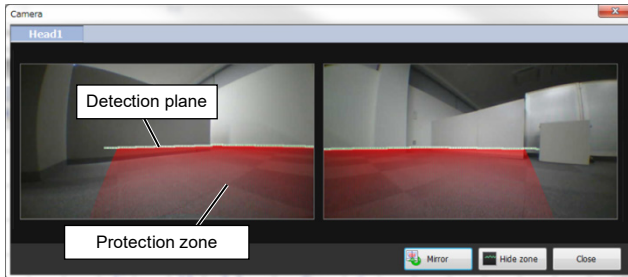

| Item | Description |
|-------------------------|---|
| Detection plane | Shows the detection point where detection laser is detecting an object. If detection is done in the protection zone, point is shown in red color. If detection is done out of the protection zone, point is shown in green color. |
| [Mirror] button | Displays the camera image in reverse. |
| [Show/Hide zone] button | Overlays the zone onto the screen. Press this button again to hide it. |
| [Close] button | Close the camera confirmation screen. |

*If a scanner head that does not have a camera is selected, a message appears stating "Cannot display image as there is no camera" and the camera image is not displayed.

Reference


- Check that the computer and the SZ-V Series unit are correctly connected first before checking the camera.
- Only the camera images for protection zones and warning zones can be view. It is not possible to check the muting zone.

8-7 Monitoring Operations


How to read the monitoring tab

Select the Monitoring tab to monitor the detection state of the SZ-V unit in real time.


Full screen display (initial screen*)

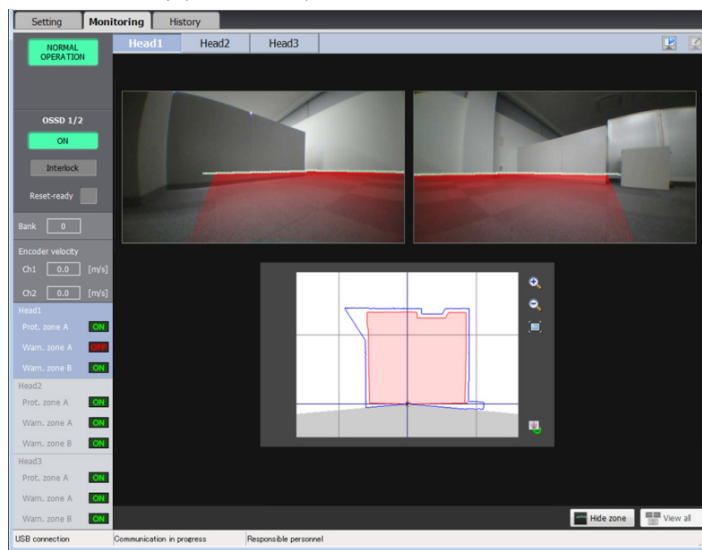

Camera view (left/right)

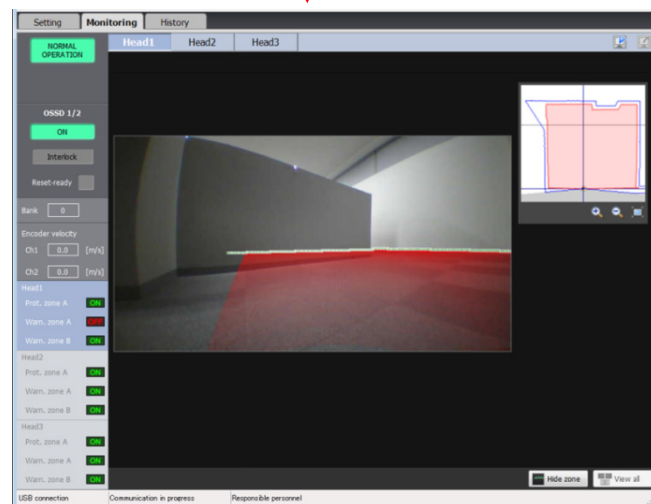

Monitor view *

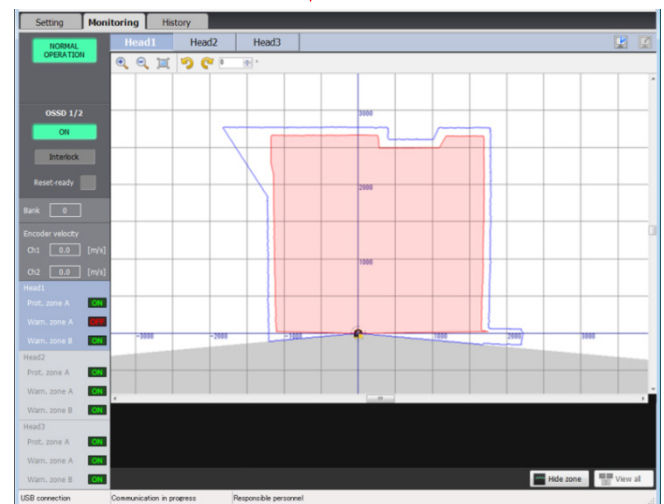

*If all the connected scanner heads do not have a camera, the monitor view is displayed. The monitor view will be the only available display.

Reference

- Before selecting the Monitoring tab, make sure that the computer and the SZ-V Series are properly connected.
- Monitoring is not possible if the configuration data on the SZ-V Configurator is different from the configuration data on the SZ-V Series. Read the configuration data from the SZ-V unit or transfer the configuration data from the SZ-V Configurator, and then start monitoring.
- Monitoring is not possible when the SZ-V enters the waiting for configuration state and Waiting for Configuration is displayed. Transfer the configuration data from the SZ-V Configurator and start monitoring.

Scanner head selection panel

| | | |
|-------|-------|-------|
| Head1 | Head2 | Head3 |
|-------|-------|-------|

Select which scanner head to use for monitoring.



- Item: Head 1 to 3

Background hold button

This button is for the background hold function.

This function holds the minimum distance measured by the SZ-V on the SZ-V Configurator for each bank. Since the AGV surroundings change throughout its path, this function will assist in zone setting.

The minimum measured distance (background) is displayed on the monitoring panel and the canvas.

| | |
|---|---|
|  | <p>If this icon is clicked, the minimum distance detected by the SZ-V will be displayed on the gray line. With this gray line as a border, the hold will be displayed with the far distance side as gray, and the close distance side as white. If changing the bank, the hold display will be reset, and the shortest distance hold will display.</p> <p>Each hold display screen can be stored in each bank.</p> <p>If the icon is clicked once again, the hold display will no longer be renewed. The held area will be displayed as is.</p> |
|  | <p>Reset the hold display conditions. The area set as gray will return to white.</p> |

Reference

Background hold also can be executed after using a timer. "Background hold setting" (page 105).


Subpanel

Displays the operating state of the SZ-V.


SZ-V04 type



SZ-V32 type or SZ-V32N type

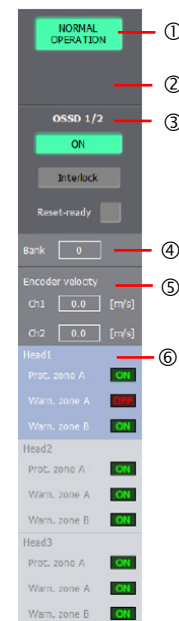

SZ-V32NC type

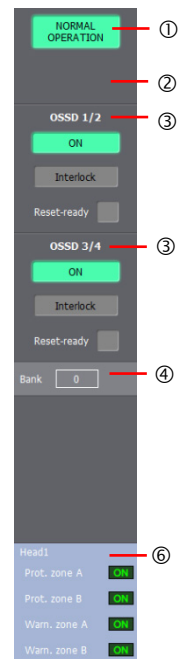

| Item | Description |
|---------------------------------------|---|
| ①SZ-V operation display | <p>Displays the operating state of the SZ-V.</p> <ul style="list-style-type: none"> • Normal operation • AUX output test • Laser shutdown • Laser off input state • Error State • Waiting for bank input • Override • Muting • Reference point not detected • History saving |
| ②Error or alert information display | <p>Displays the content of errors and alerts. Nothing is displayed when there is no error or alert.</p> |
| ③OSSD 1/2 display OSSD 3/4 display | <p>This shows the state of the OSSD.</p> <div data-bbox="1043 1429 1177 1563"> </div> <p>This indicates the state of the OSSD output.</p> <p>Lights yellow during interlock.</p> <p>Lights yellow-green during interlock-reset-ready.</p> <p>When using PROFIsafe or CIP Safety™, "Protection Zone A State" data is equivalent to the OSSD 1/2. "Protection Zone B State" data is equivalent to the OSSD 3/4.</p> |
| ④Bank display | <p>Displays the selected bank number when using banks.</p> |
| ⑤Encoder velocity display | <p>Displays velocity detected by each encoder when using the bank switching function</p> <ul style="list-style-type: none"> • Ch1: Detected velocity of Encoder Input 1 • Ch2: Detected velocity for Encoder Input 2 |
| ⑥Display by scanner head | <p>Indicates the detection state of each scanner head.</p> <ul style="list-style-type: none"> • Protection zone • Warning zone |

I/O monitoring panel

This shows the state of inputs and outputs.

■ When PROFIsafe is not used

The screenshot shows the I/O monitoring panel with two sections: Input and Output. The Input section lists 10 inputs with their respective wire colors and states. The Output section lists 4 AUX outputs with their states. The panel includes a 'Close' button and an 'AUX output test' button.

| Input | |
|---|-----|
| Input 1: Reset input or Laser OFF input | ON |
| Input 2: EDM input | ON |
| Input 3: Not used | OFF |
| Input 4: Not used | OFF |
| Input 5: Not used | OFF |
| Input 6: Not used | OFF |
| Input 7: Not used | OFF |
| Input 8: Not used | OFF |
| Input 9: Not used | OFF |
| Input 10: Not used | OFF |

| Output | |
|------------------------------|-----|
| AUX output 1: OSSD state | OFF |
| AUX output 2: Error or alert | OFF |
| AUX output 3: Not used | OFF |
| AUX output 4: Not used | OFF |

| Item | Description |
|--------------------------|--|
| Input | This shows the wire color, function, and ON/OFF state of the input. The contents of this varies depending on the function, configuration, and input state. |
| Output | This shows the wire color, function, and ON/OFF state of the output. The contents on this varies depending on the function, configuration, and input state. |
| [Close] button | Hides the I/O monitoring panel. |
| [AUX output test] button | Turns OSSD OFF and tests the AUX outputs. |

■ AUX output test

This function turns the desired AUX outputs ON or OFF. Operate this function from the [AUX output test] dialog box.

► Important OSSD turns OFF during the AUX output test.

The screenshot shows the AUX output test dialog box. It contains four rows of controls for AUX outputs 1 through 4. Each row has an 'ON' button and an 'OFF' button. At the bottom, there are 'Output for' and 'Finish test' buttons.

| Item | Description |
|------------------------------|---|
| State information output 1/2 | Output the pulse to indicate the specified state. Set this item only when using [State information output]. "State information output" (page 60) |
| [ON] button [OFF] button | Turn a specified AUX output [ON] or [OFF]. The outputs will not be generated until the [Test output] button is clicked. |
| [Test output] button | Outputs in accordance with the output state and each AUX outputs setting. |
| [Finish test] button | Finishes the AUX output test. Click the [Finish test] button to restore the state of all AUX outputs. The OSSD also goes back to normal operation. |

Reference OSSD keeps OFF state during AUX output test.

■ When PROFIsafe or CIP Safety™ is used

| Input data (from SZ-V) | | |
|------------------------|------|-----------|
| Byte Offset | HEX | BIN |
| Input 0 | 0x00 | 0000 0000 |
| Input 1 | 0x00 | 0000 0000 |
| Input 2 | 0x00 | 0000 0000 |
| Input 3 | 0x00 | 0000 0000 |
| Input 4 | 0x00 | 0000 0000 |
| Input 5 | 0x00 | 0000 0000 |
| Input 6 | 0x00 | 0000 0000 |
| Input 7 | 0x00 | 0000 0000 |
| Input 8 | 0x00 | 0000 0000 |
| Input 9 | 0x00 | 0000 0000 |
| Input 10 | 0x00 | 0000 0000 |
| Input 11 | 0x00 | 0000 0000 |

| Output data (to SZ-V) | | |
|-----------------------|------|-----------|
| Byte Offset | HEX | BIN |
| Output 0 | 0x00 | 0000 0000 |
| Output 1 | 0x00 | 0000 0000 |
| Output 2 | 0x00 | 0000 0000 |
| Output 3 | 0x00 | 0000 0000 |
| Output 4 | 0x00 | 0000 0000 |
| Output 5 | 0x00 | 0000 0000 |
| Output 6 | 0x00 | 0000 0000 |
| Output 7 | 0x00 | 0000 0000 |
| Output 8 | 0x00 | 0000 0000 |
| Output 9 | 0x00 | 0000 0000 |
| Output 10 | 0x00 | 0000 0000 |
| Output 11 | 0x00 | 0000 0000 |

The screenshot shows the bottom part of the I/O monitoring panel with two buttons: 'Close' and 'Details'.

| Item | Description |
|------------------------|---|
| Input data (from SZ-V) | The state of the data sent from the SZ-V to the Safety PLC. |
| Output data (to SZ-V) | The state of the data received from the SZ-V to the Safety PLC. |
| [Close] button | Hides the I/O monitoring panel. |
| [Detail] button | Details of the Input data and the Output data are displayed. |

Bank monitoring panel

When using PROFI-safe or CIP Safety™, the ON/OFF state of each bank will be displayed.


To display the bank monitoring panel, select [Monitoring tools]→[Bank monitoring panel] from the menu bar.

| | Prot. zone A | Prot. zone B |
|--------|--------------|--------------|
| Bank0 | OFF | ON |
| Bank1 | ON | OFF |
| Bank2 | ON | OFF |
| Bank3 | OFF | ON |
| Bank4 | OFF | ON |
| Bank5 | OFF | OFF |
| Bank6 | ON | ON |
| Bank7 | ON | OFF |
| Bank8 | ON | OFF |
| Bank9 | ON | ON |
| Bank10 | OFF | OFF |
| Bank11 | OFF | ON |
| Bank12 | ON | OFF |
| Bank13 | ON | ON |
| Bank14 | ON | OFF |
| Bank15 | ON | ON |

Close

How to read and operate the full screen display


Full screen display

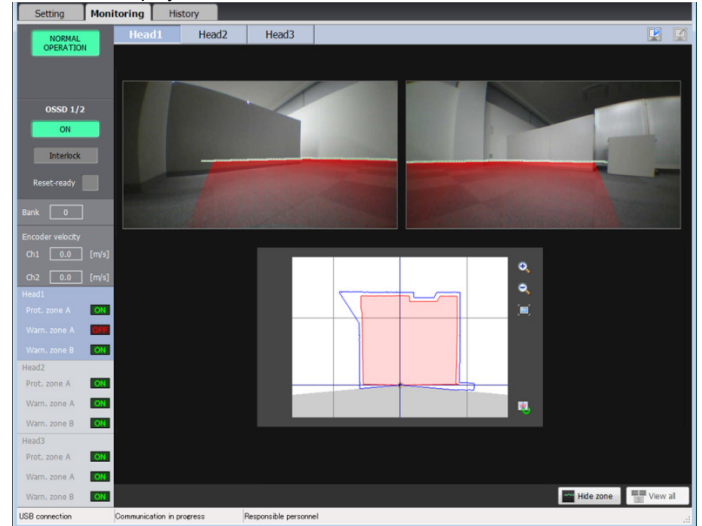

| Item | Description |
|-----------------------------------|---|
| Left camera display panel | Displays the left camera image of the selected scanner head. If clicked, the camera image from the left camera is displayed. |
| Right camera display panel | Displays the right camera image of the selected scanner head. If clicked, the camera image from the left camera is displayed. |
| Monitor view panel | Displays the detection status of the selected scanner head. If clicked, the monitor view is displayed. |
| (Zoom In) button | Zoom in on the monitor view. |
| (Zoom Out) button | Zoom out of the monitor view. |
| (Full Display) button | Adjusts the screen scale in order to show the entire zone that is drawn on the canvas. |
| (Reverse) button | Displays the camera images and the monitor view in reverse. |
| Hide zone (Show/hide zone) button | Overlays the protection zone onto the camera view. Press the button again to hide it. |

How to read and operate the camera view

Camera view

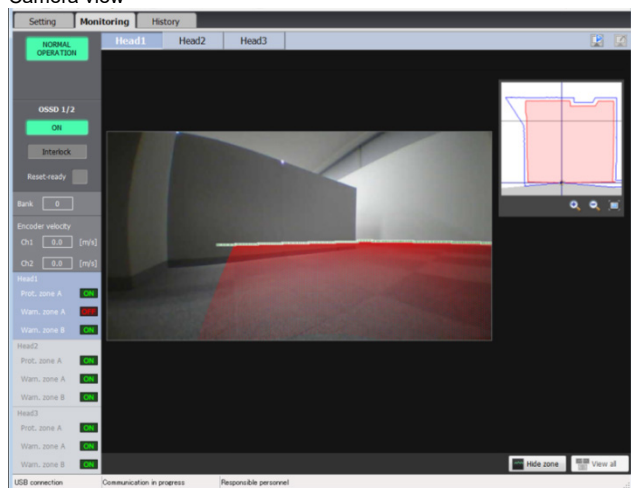


| Item | Description |
|-----------------------------------|--|
| Monitor view panel | Displays the detection status of the selected scanner head. |
| (Zoom In) button | Zoom in on the monitor view. |
| (Zoom Out) button | Zoom out of the monitor view. |
| (Full Display) button | Adjusts the screen scale in order to show the entire zone that is drawn on the canvas. |
| Camera display panel | Displays the camera image of the selected camera. |
| Hide zone (Show/hide zone) button | Overlays the protection zone onto the camera view. Press the button again to hide it. |
| View all (View all) button | Displays the full screen. |

*How to read and operate both the left and right camera screens is the same.

How to read and operate the monitor view

Monitor view

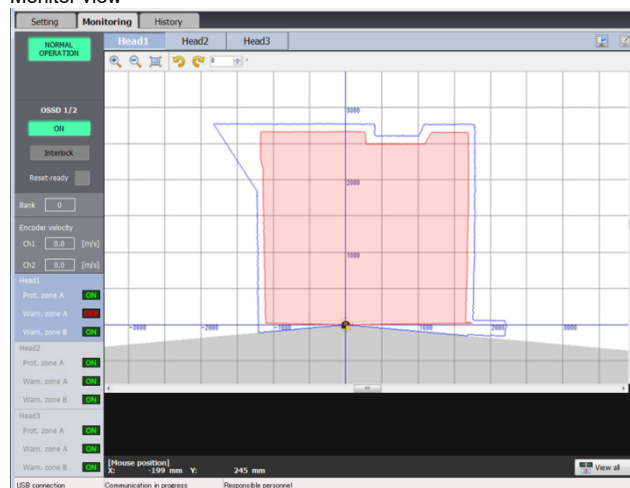


| Item | Description |
|--------------------------------|--|
| Monitor view panel | Displays the detection status and zone of current bank of the selected scanner head. |
| Display panel | Operates the display. |
| (Zoom In) button | Zoom in on the monitor view. |
| (Zoom Out) button | Zoom out of the monitor view. |
| (Full Display) button | Adjusts the screen scale in order to show the entire zone that is drawn on the canvas. |
| (Left rotation) button | Rotates the SZ-V scanner head direction 45° to the left on the canvas. "Rotating the canvas" (page 92) |
| (Right rotation) button | Rotates the SZ-V scanner head direction 45° to the right on the canvas. "Rotating the canvas" (page 92) |
| [Rotation angle] | Rotates the SZ-V scanner head direction on the monitor view panel. Press the up and down buttons on the input box to track and rotate the SZ-V scanner head on the canvas. "Rotating the canvas" (page 92) |
| Drawing properties display | This shows information related to drawing. |
| Mouse position | This shows the current coordinates for the mouse pointer. |
| View all (Full Display) button | Displays the full screen. |

Reference If all the connected scanner heads do not have a camera, the [Full display] button is not displayed.

8-8 Checking the Detection History

On this screen, it is possible to check the history of detections of people and objects in the protection zone, and occurrences of alerts and errors.

How to read the History tab

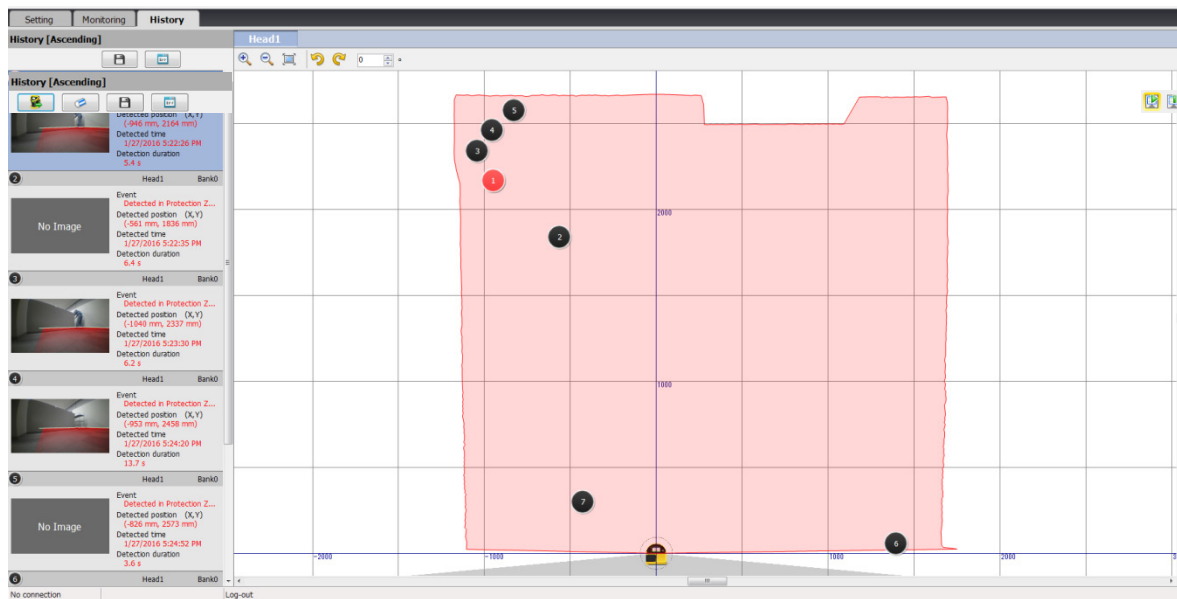

Reference Before selecting the History tab, make sure that the computer and the SZ-V Series are properly connected.

Monitor view

| Item | Description |
|-------------------|--|
| Detected position | Displays the detected position on the monitor view. Displays up to 20 items in display order on the subpanel. The selected history is displayed highlighted in red on the subpanel. |

Reference If the selected history is the 21st point or later, only the selected point is displayed in red on the monitor view panel.


Display panel

| Item | Description |
|-------------------------|---|
| (Zoom In) button | Zoom in on the monitor view. |
| (Zoom Out) button | Zoom out of the monitor view. |
| (Full Display) button | Adjusts the screen scale in order to show the entire zone that is drawn on the monitor view. |
| (Left rotation) button | Rotates the SZ-V scanner head direction 45° to the left on the canvas. "Rotating the canvas" (page 92) |
| (Right rotation) button | Rotates the SZ-V scanner head direction 45° to the right on the canvas. "Rotating the canvas" (page 92) |
| [Rotation angle] | Rotates the SZ-V scanner head direction on the monitor view panel. Press the up and down buttons on the input box to track and rotate the SZ-V scanner head on the canvas. "Rotating the canvas" (page 92) |

Subpanel

Displays the detection history in order from the newest item.

However, if [First 10] is selected for the [Save format] in the detection history settings, the oldest item is displayed first. "Detection history" (page 82)

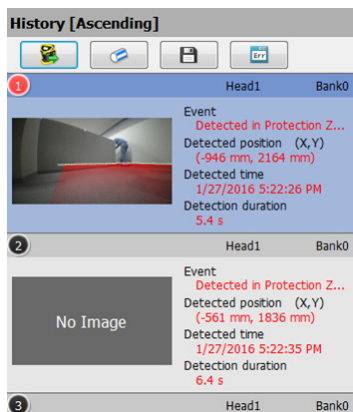


| Item | Description |
|--------------------|--|
| [Selected display] | Displays the selected history in blue. If a history item is selected, the detected position corresponding to the selected history item is displayed on the main panel highlighted in red. |
| [Thumbnail image] | Displays the image when the OSSD went OFF. If the thumbnail image is double clicked, the [Image/video dialog box] is displayed. "Checking detection images and video in the protection zone" (page 101) <ul style="list-style-type: none"> If the scanner head does not have a camera, monitor view when the OSSD went OFF is displayed. If the history item does not have a thumbnail image, "No image" is displayed. |
| Event | The reason for the event (OSSD OFF) is displayed. |
| Detection position | The coordinates of the position that the event (OSSD OFF) occurred are displayed. |
| Detected time | The time that the OSSD went from ON to OFF is displayed. (Time of occurrence) |
| Detected duration | Period of time that the OSSD was OFF is displayed. |

| Item | Description |
|---|--|
| (Refresh) button | The detection history is retrieved from the SZ-V and displayed. |
| (Clear detection history) button | Deletes the detection history. If [Video] for [Save format] is selected, history can only be deleted when logged in as the responsible personnel. |
| (Save detection history to a file) button | The [Save detection history] dialog box appears and the history can be saved to a file. "Saving detection history" (page 100) |
| (Error history) button | The [Error history] dialog box appears and displays the error history in a list. "Error history" (page 100) |
| Change page button | Select to display the detection history per 100 items. |

Reference Check that the computer and the SZ-V Series unit are correctly connected first before clearing or refreshing the detection history.

■ Saving detection history

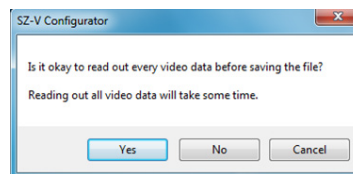


Saving format of history

- Detection history file (.szvh): OFF information and the image when it went to OFF are saved for all detection history items.
- CSV file (.csv): For all detection history items, OFF information is saved as text data.

■ Error history

Displays the error history in order. The history is displayed in order from the newest items.

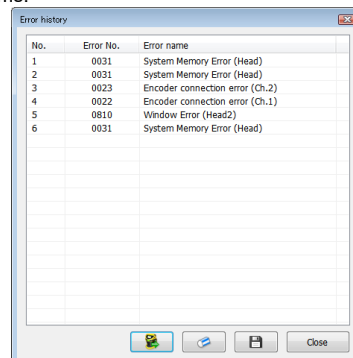

Up to 100 error history items are saved; items after the 101st item are not saved. Even if the SZ-V power is turned OFF, the error history is not cleared.



| Item | Description |
|---------------------------------------|---|
| (Refresh) button | Error history is retrieved from the SZ-V unit. |
| (Clear error history) button | Clear the error history recorded on the SZ-V unit. Clearing the error history is only possible when logged in as the responsible personnel. |
| (Save error history to a file) button | Saves the error history to a CSV file. |
| [Close] button | Close the [Error history] dialog box. |

Checking detection images and video in the protection zone


When an object is detected in the protection zone, record the monitor view and camera images and play them back later as photos or videos. Whether the images are saved as photos or videos depends on the settings. "Detection history" (page 82)

Subpanel


Checking images/videos Full screen display

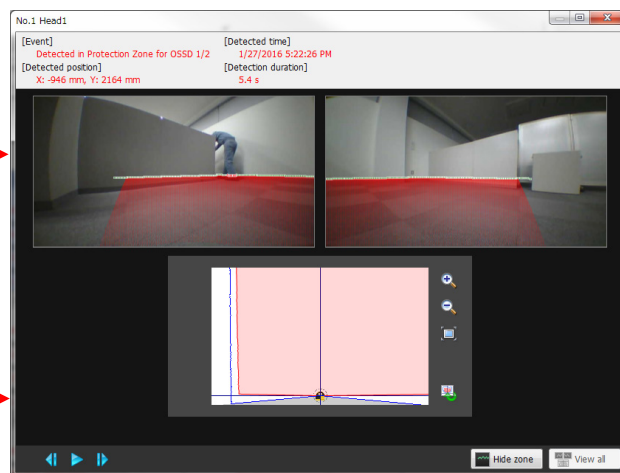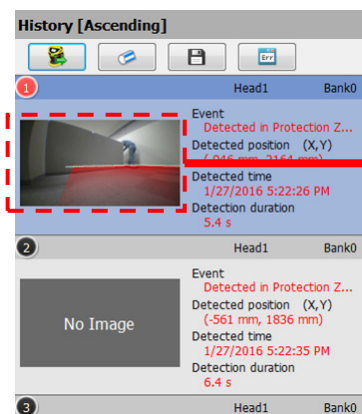

Checking images/videos Camera view

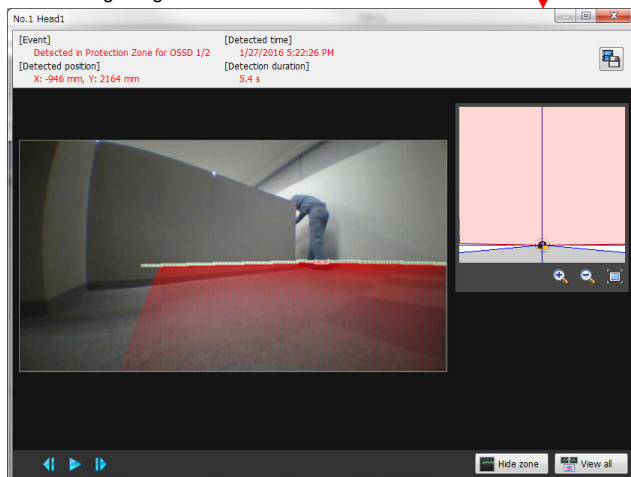

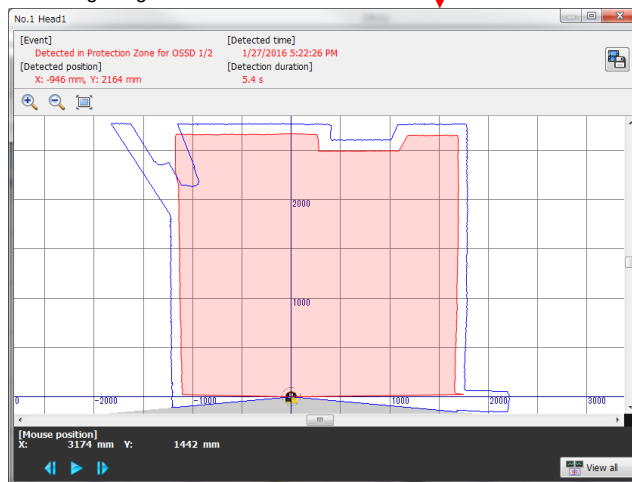

Checking images/videos Monitor view



- Camera images can only be saved when using a scanner head that has a camera.
- Photos or videos cannot be played back when the image is being saved on the SZ-V unit. The message "Cannot read out video data since history saving is ongoing. " appears.
- If all the connected scanner heads do not have a camera, a monitor view is displayed. This is the only screen that can be displayed.

History display panel


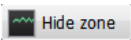
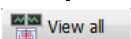
| Item | Description |
|-----------------------|---|
| [Event] | Depending on the type, the details that are displayed differs. When using the SZ-V04 or when PROFI-safe communication is used with the SZ-V32N <ul style="list-style-type: none"> • OSSD 1/2 OFF • OSSD 3/4 OFF When using the SZ-V32 type or when PROFI-safe communication is not used with the SZ-V32N type. <ul style="list-style-type: none"> • OSSD OFF |
| [Detection position] | The coordinates of the position that the event (OSSD OFF) occurred are displayed. |
| [Detected time] | The time that the event occurred is displayed. (Time of occurrence*) |
| [Detected duration] | Period of time that the event persisted is displayed. If the detected duration is not fixed yet, "----" is shown. |
| [Save history] button | Save the history information The icon changes depending on whether the [Save format] is set to multi-frame mode or single frame mode. <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;">  <p>Save as video</p> </div> <div style="text-align: center;">  <p>Save as photo</p> </div> </div> In the case of multi-frame mode, videos can be saved only after playing them. When videos cannot be saved, the icon above is grayed out. |


*History items that occurred before the power was turned ON cannot be displayed. Instead, the running time will be displayed.

History main panel

Shows the state when an object or person was detected in the protection zone as a camera image or on a monitor view.
Click the camera image to display the camera screen.
Click the monitor view image to display the monitor view.

History operation panel

| Item | Description |
|--|---|
| [Play]/[Pause] buttons  | [Play] button Play the video. This button functions as the pause button when videos are playing. [Pause] button Pauses the video. This button functions as the play button when videos are paused. |
| [Frame advance] button | Plays the video frame-by-frame. |
| [Frame rewind] button | Rewinds the video frame-by-frame. |
| [Show / Hide zone] button  | Shows or hides the zone on the camera view. |
| [View all] button  | Displays in full screen. |


 Due to camera blind areas, it may not be possible to check images of all detected objects.

8-9 Monitoring Using Communications

On the SZ-V32N, information such as error status and measuring distance data can be obtained using Ethernet communications.
The SZ-V32N supports the following protocols:

- UDP
- EtherNet/IP™
- PROFINET
- PROFI-safe

For details about monitoring using communications, see "SZ-V32N Type Communications Manual."

| | |
|---|---|
|  | All the data received from the communication of UDP, EtherNet/IP™ or PROFINET cannot be used from the safety control system. When used in error, there is a possibility that the operator of the device may be threatened with major injury or even death. |
|---|---|

8-10 Operation Menu


File

| Item | Description |
|--------------------|---|
| New | Create new settings. This operates in the same manner as when selecting [Create a new configuration file] when the SZ-V Configurator starts. "b) Create a new configuration file" (page 68) |
| Open | Open a configuration file saved on the computer. This operates in the same manner as when selecting [Open a configuration file] when the SZ-V Configurator starts. "c) Open a configuration file" (page 68) |
| Close | This closes the configuration file currently being edited. If editing a configuration file, a save confirmation dialog appears. |
| Save | This saves the configuration file currently being edited. |
| Save as | Save the file currently being set with a different name. The [Save As] dialog box appears. Enter a name for the file and then save the file. |
| Zone Import/Export | Import or export all of the zone data. The file format is XML. "XML File" (Page 90) |
| Print | The [Print] dialog box appears. Configure print settings. When clicked, information related to settings are printed. When "Image on Canvas" (Page105) has been set, the printing method can be selected based on the background image. <ul style="list-style-type: none"> • Full display aligned with background image • Full display aligned with region • Hide background image <p>Following information is included in the printed document.</p> <ul style="list-style-type: none"> • File Name • Information on "Configuration", such as Title/Department, Name of the person responsible and comment, date of configuration, software version, Model and serial number. • Configuration parameters • For the image of a printed document, please see "Image of a printed document" (Page 111). |
| Recent files | This shows the five files most recently opened in the SZ-V Configurator. |
| Exit | This exits the SZ-V Configurator. If currently editing a file, a save confirmation dialog box appears. |



*Detection or error history cannot be printed.



Edit

| Item | Description |
|-----------------------|---|
| Undo | Undo the previous operation. |
| Redo | Redo the last operation that was undone. |
| Copy zone | This copies the zone currently being edited to the clipboard. |
| Paste zone | This pastes a zone copied with [Copy zone] to the selected location. |
| Paste zone in reverse | This pastes a zone copied with [Copy zone] to the selected location in reverse. |

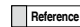 [Edit] can only be used while configuring [Zone Settings].
"Set the zone" (page 78)

View
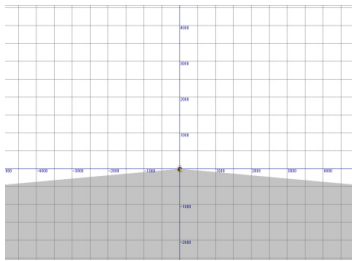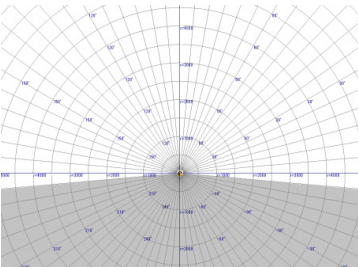
| Item | Description | | | | |
|------------------------------|--|---------|--|----------|--|
| Configuration tab | The [Setting] tab will become active. | | | | |
| Monitoring tab | The [Monitoring] tab will become active. | | | | |
| Detection history tab | The [History] tab will become active. | | | | |
| Zoom | <p>This is a setting for the display of the monitoring panel and of the canvas.</p> <table border="1"> <tr> <td>Zoom in</td><td>Magnifies the currently displayed content.</td></tr> <tr> <td>Zoom out</td><td>Reduces the currently displayed content.</td></tr> </table> | Zoom in | Magnifies the currently displayed content. | Zoom out | Reduces the currently displayed content. |
| Zoom in | Magnifies the currently displayed content. | | | | |
| Zoom out | Reduces the currently displayed content. | | | | |
| Grid | <p>Sets the display of the grid.</p> <p>Visible</p> <ul style="list-style-type: none"> Check box checked <input checked="" type="checkbox"/> The grid is displayed. Unchecked The grid is not displayed. <p>Grid interval</p> <p>The "Grid interval" dialog box appears allowing for adjustment of the grid interval.*1</p> <ul style="list-style-type: none"> Setting range: 100 to 2000 (mm) *2 Default: 500 (mm) <p>Cartesian coordinates</p> <ul style="list-style-type: none"> Check box checked <input checked="" type="checkbox"/> The grid is displayed as Cartesian coordinates.  <p>Polar coordinates</p> <ul style="list-style-type: none"> Check box checked <input checked="" type="checkbox"/> The grid is displayed as polar coordinates.  | | | | |
| Display unit | <p>Set the display units.</p> <ul style="list-style-type: none"> mm (default) in. feet/in. | | | | |
| Real-time ranging | <p>Displays the ranging state of the current SZ-V scanner head in real time on the canvas. "Real-time ranging" (page 91)</p> <p>Start Starts real-time ranging.</p> <p>Pause Temporarily stops the real time ranging display.</p> <p>Clear Clears the real-time ranging information.</p> <p>Bottom-hold Holds the displayed real-time ranging display at the bottom. Displays the result of bottom-hold with a green line.</p> | | | | |
| Highly reflective background | Switch whether a highly-reflective background is shown or hidden. | | | | |
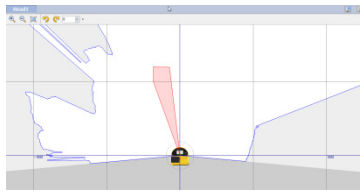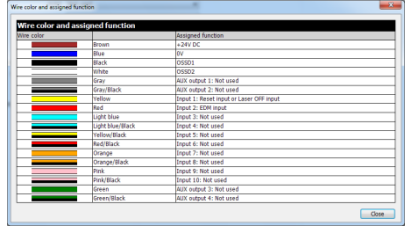
| | |
|----------------------------------|---|
| All points | Displays user points and setting points for the remaining beams. |
| Shade detected area | <p>The SZ-V displays the outside of the detected zone filled.</p>  |
| Camera blur | <p>Set the camera blur function.</p> <p>"Camera Blur Function" (page 58)</p> <p>This setting is used when the check box is checked <input checked="" type="checkbox"/>.</p> |
| Wire color and assigned function | <p>The [Wire color and assigned function] dialog box appears.</p>  |


*1 The "Undo" function cannot be used to restore the grid interval.


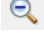


*2 For inches, 3.94 to 78.74 (inch)

Image on Canvas


| Item | Description |
|----------|--|
| Visible | Switch the display/hide the configured background image. |
| Settings | The [Image on Canvas] dialog appears and the settings can be configured. The configured background image is displayed on the canvas. |

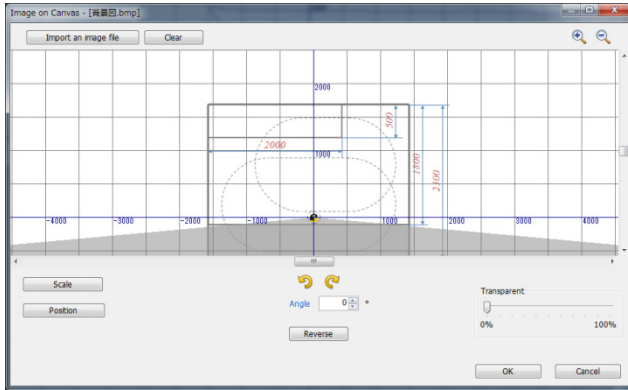■ Background drawing dialog



| Item | Description |
|---|---|
| [Import drawing file] button* | Specifies the drawing file displayed on the background. The file types that can be displayed are BMP file (*.bmp), JPEG file (*.jpg, *.jpeg), TIFF file (*.tif, *.tiff) and PNG file (*.png). |
| [Clear] button | [Import drawing file] button* |
|  (Zoom In) button | Zoom in and display. |
|  (Zoom Out) button | Zoom out and display. |
| [Scale] button | Change the magnification of the background image. Select two points which form the reference within the image, and input the distance between the two points. The magnification of the background image is changed. |
| [Location] button | Move the background image. |
|  (Left rotation) button | Rotate the background image 45° counterclockwise. |
|  (Right rotation) button | Rotate the background image 45° clockwise. |
| [Rotation angle] | The background image can be rotated at any angle. Press the up and down buttons on the input box to track and rotate the background image. |
| [Reverse] button | Reverse the background image. |
| [Transparent] slide bar | The opacity of the background image can be set. |


Monitoring tools
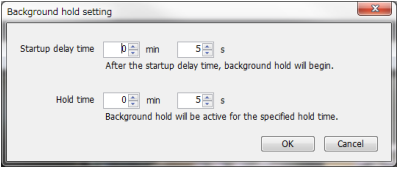
| Item | Description |
|-------------------------|---|
| I/O monitoring | Displays the I/O monitoring panel. "I/O monitoring panel" (page 96) |
| Bank monitor | Displays the bank monitoring panel. "Bank monitoring panel" (page 97) |
| Background hold setting |  <p>It is possible to perform background hold function after designated period of time.</p> <p>Startup delay time: After the startup delay time, background hold will begin.</p> <p>Hold time: Background hold will be active for the specified hold time.</p> <p>To start background hold, press start background hold button. "Background hold button" (Page 95)</p> |

Reference Use the [Monitoring tools] only during monitoring (when the [Monitor] tab is selected in the function selection panel).

Detection history tools

| Item | Description |
|------------------------------------|---|
| Read detection history from SZ-V | The detection history is retrieved from the SZ-V and displayed. |
| Clear detection history | Deletes the detection history. If [Multi-Frame/Video] is set for [Save format], deleting the history can only occur when logged in. |
| Open from file | Open a detection history file saved on the computer. |
| Save detection history to file | Opens the [Save detection history] dialog box. Save the detection history on the computer. "Saving detection history" (page 100) |
| Save detection history to CSV file | Opens the [Save detection history] dialog box. Save the detection history on the computer in CSV format. "Saving detection history" (page 100) |
| Show error history | Displays the [Error history] dialog box. "Error history" (page 100) |

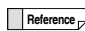 Use the [Save detection history to file], [Save detection history to CSV file], and [Show error history] only when checking detection history (when the [Detection History] tab is selected on the function selection panel).

Communications


| Item | Description |
|--|--|
| Read configuration from SZ-V | Retrieve configuration data from the connected SZ-V unit. |
| Transfer configuration to SZ-V | The SZ-V Configurator transfers configuration data from the computer to the SZ-V unit. |
| Verification | Check the configuration currently being edited against the configuration data on the SZ-V unit. The results are shown in the [Verification] window when matching is completed. |
| Window calibration | Execute calibration when changing the window. "Window calibration" (page 107) |
| Initialization | Return the SZ-V to its default settings. "Initialization" (page 107) |
| Restart the SZ-V | Restart the SZ-V. |
| Clear system configuration | Delete the system memory connection history. "Clear system configuration" (page 108) |
| Identification & Maintenance (Only when PROFINET or PROFIsafe is selected with the SZ-V32N type) | The [Identification & Maintenance] dialog box appears. The identification information for the device can be read and written. "Identification & Maintenance" (page 108) |
| Connect to different SZ-V (For the SZ-V32N type only) | Displays the [Model selection] dialog box. Select the destination device. "Connecting to different SZ-V" (page 109) |

Reference Check that the computer and the SZ-V Series unit are correctly connected first before using the Communications menu.

Window calibration


When replacing the window, it is necessary to calibrate the unit afterwards.

1. The dialog box to check execution of window calibration appears. Click the [OK] button.

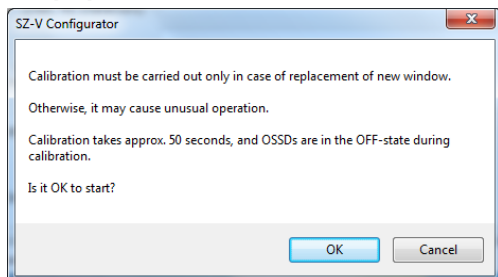


Reference When multiple scanner heads are cascaded, head selection dialog is shown.

2. If not logged into the SZ-V unit, the [Log-in] dialog box will appear. Select [Responsible Personnel] or [Maintenance Personnel] and enter the password to log in. "Log-in" (page 109)
3. The confirmation dialog box appears and window calibration is executed.

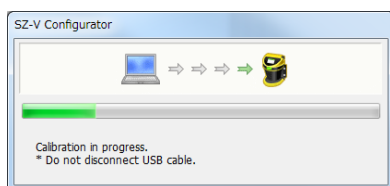

4. If window calibration completes normally, a confirmation dialog box appears. Click the [OK] button.

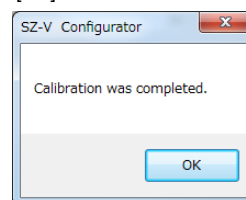


Reference Only the responsible personnel and maintenance personnel can execute window calibration.


Initialization

Restore the unit's settings to their factory default settings.


1. The initialization confirmation dialog box appears. Click the [OK] button.

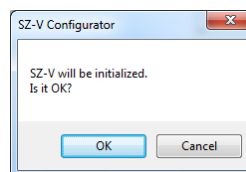

2. If not logged into the SZ-V unit, the [Log-in] dialog box will appear. Select [Responsible Personnel] and enter the password to log in. "Log-in" (page 109)
3. The following dialog box appears and initialization starts.

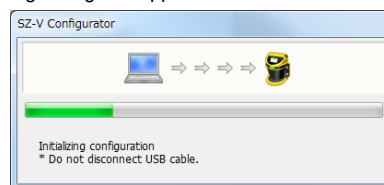

4. If initialization completes normally, a confirmation dialog box appears. Click the [OK] button.

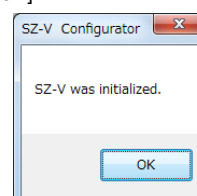


Reference Only the responsible personnel can reset the SZ-V.


Clear system configuration

This procedure deletes the system memory and system configuration information for the Display unit and scanner head(s).


1. A dialog box to confirm that you want to clear system configuration information appears.
Click the [OK] button.

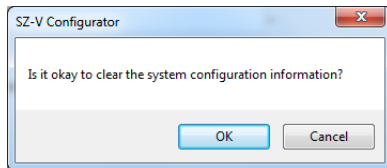

2. If not logged into the SZ-V unit, the [Log-in] dialog box will appear. Select [Responsible Personnel] or [Maintenance Personnel] and enter the password to log in. "Log-in" (page 109)
3. The following dialog box appears and deletion of system configuration information starts.

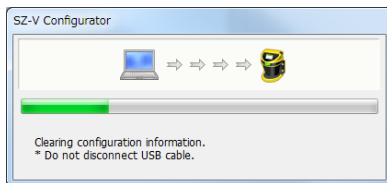

4. If the system configuration information is deleted normally, a confirmation dialog box appears. Click the [OK] button.

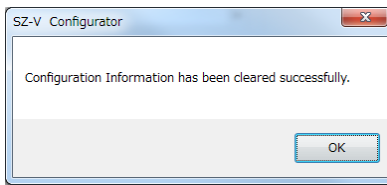

Reference Only the responsible personnel and maintenance personnel can clear system configuration information.

Identification & Maintenance

Identification & Maintenance displays the device information stored in SZ-V. When the SZ-V32N type is used, the device information can be read and written when PROFINET or PROFIsafe has been selected in Communication Protocol. The device information can be read and written from the [Identification & Maintenance] dialog shown below.

| Item | Property | Description |
|-------------------|----------|--|
| IM0 | R | Displays the hardware and firmware. |
| IM1 | R/W | Enter the tag information. |
| IM2 | R/W | The installation date information is written. Press the [Enter current date and time] button to input the current time. |
| IM3 | R/W | Enter a comment. |
| IM4 | R | Displays the signature information for the settings. |
| [Transfer] button | - | Transfers the device configuration information to SZ-V. |
| [Read out] button | - | Reads the device configuration information from the SZ-V. |
| [Cancel] button | - | The dialogs closes. |

Reference Even if the configuration data such as zone setting is transferred to the SZ-V, the device information will not be transferred automatically. To transfer the device information from SZ-V Configurator, press the above [Transfer] button.

Connecting to different SZ-V

Select unit

☒ Connect by USB
☐ Connect by Ethernet

☒ Direct input

IP Address: 192 . 168 . 1 . 10
 Port number: 8637

☐ Select from list

Network adaptor: Intel(R) 82579V Gigabit Network Connection

| IP Address | MAC Address | Device name | Static IP |
|------------|-------------|-------------|-----------|
| | | | |

| Item | Description |
|---------------------------------|--|
| (Selecting a connection method) | Select the method to connect the SZ-V to the computer. <ul style="list-style-type: none"> • Connect by USB • Connect by Ethernet |

When selecting Ethernet connection, it is necessary to set the Ethernet connection device.

For the setting method, see "Selecting an Ethernet connection device" (page 68).

Log-in authentication

| Item | Description |
|--|---|
| Log-in | The [Log in] dialog box appears. Log in to the SZ-V. This cannot be selected if already logged in to the SZ-V. |
| Log-out | This will log out of the SZ-V. This cannot be selected if already logged out of the SZ-V. |
| Password change | The [Password change] dialog box appears. This allows changing of the password for the SZ-V*1. This is only available when logged in to the SZ-V. |
| Lost Password | The [When you forget the password] dialog box appears. This can be used to reset the password for the SZ-V*1. |
| Enable/Disable maintenance personnel authorization level | Maintenance personnel authorization level can be enabled or disabled, or its password can be changed. Only responsible personnel can use this function. |

*1 The default "Responsible Personnel" password is "1111".

There is no set default maintenance personnel password.

Log in as the responsible personnel to reset the password of maintenance personnel.

For the details about authorization level, see "Authorization Level and Settings" (page 71).

Before selecting log in authentication, make sure that the computer and the SZ-V Series are properly connected.

Log-in

Log-in

Password is required

Authorization level

☒ Responsible personnel
☐ Maintenance personnel

Password:

Please log out after setting is completed.

| Item | Description |
|---------------------|--|
| Authorization level | Displays what authorization level to log in with. <ul style="list-style-type: none"> • Responsible personnel • Maintenance personnel |
| Password | Enter the password. |

Lost password

Lost password

Reset password to factory default

Reference code: 88511302

Input password:


| Item | Description |
|----------------|--|
| Reference code | The code is necessary to reset the password. Contact your nearest KEYENCE office with this code to receive a password initialization code. |
| Input password | Enter the password initialization code. |

When the correct password initialization code is entered, the password is reset to the default setting.


Language

The language used in the SZ-V Configurator can be changed.

| Item | Description |
|------------|------------------------------------|
| Japanese | Change the language to Japanese. |
| English | Change the language to English. |
| Chinese | Change the language to Chinese. |
| Italian | Change the language to Italian. |
| German | Change the language to German. |
| French | Change the language to French. |
| Portuguese | Change the language to Portuguese. |
| Spanish | Change the language to Spanish. |

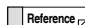 The SZ-V Configurator starts in the language selected here at the next restart.

Help
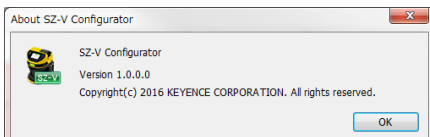
| Item | Description |
|-------------------------|---|
| User's Manual | View the SZ-V User's Manual (this manual) as a PDF file. |
| Communication Manual | View the Communication Manual. This menu is shown only when SZ-V32N type or SZ-V32NC type is selected. |
| About SZ-V Configurator | This displays the version information for the SZ-V Configurator.  |

8-11 Image of a printed document

| Property | | | |
|----------------------------------|--------------|--------------------------------|-----------------------|
| Item | | | Setting |
| File name | | | Untitled_0219.svd |
| Title / Department | | | |
| Responsible personnel | | | |
| Comments | | | |
| Information | | | |
| Item | | | Setting |
| Configuration transfer date/time | | | |
| Configuration Code (CRC) | | | |
| Software version | | | |
| Type | | | SZ-V32 |
| Serial number | Display unit | | |
| | Head1 | | |
| | Head2 | | |
| | Head3 | | |
| Basic settings | | | |
| Item | | | Setting |
| Safety configuration | Display unit | Number of heads | 3 |
| | | PNP / NPN select | - select - |
| | | Interlock | Automatic / Automatic |
| | | EDM | Not used |
| Protection zone setting | Head1 | Operating mode | Standard |
| | | Minimum detectable object size | 70mm (2.76in.) |
| | | Scan cycle | Scan cycle A |
| | | Response time | 320ms |
| | Head2 | Operating mode | Standard |
| | | Minimum detectable object size | 70mm (2.76in.) |
| | | Scan cycle | Scan cycle B |
| | | Response time | 336ms |
| | Head3 | Operating mode | Standard |
| | | Minimum detectable object size | 70mm (2.76in.) |
| | | Scan cycle | Scan cycle C |
| | | Response time | 352ms |
| Warning zone settings | Head1 | Minimum detectable object size | 70mm (2.76in.) |
| | | Response time | 320ms |
| | Head2 | Minimum detectable object size | 70mm (2.76in.) |
| | | Response time | 336ms |
| | Head3 | Minimum detectable object size | 70mm (2.76in.) |
| | | Response time | 352ms |
| Advanced function | | | |
| Item | | | Setting |
| Reference points monitoring | | | Not used |
| Bank switching function | | | Not used |
| Warning zone B settings | | | Not used |
| Laser OFF input | | | Not used |
| MI Error Detecting Time | | | 5 s |



| Wire color and assigned function | | |
|----------------------------------|------------------|---|
| Wire color | | Assigned function |
| | Brown | +24V DC |
| | Blue | 0V |
| | Black | OSSD1 |
| | White | OSSD2 |
| | Gray | AUX output 1: Not used |
| | Gray/Black | AUX output 2: Not used |
| | Yellow | Input 1: Reset input or Laser OFF input |
| | Red | Input 2: EDM input |
| | Light blue | Input 3: Not used |
| | Light blue/Black | Input 4: Not used |
| | Yellow/Black | Input 5: Not used |
| | Red/Black | Input 6: Not used |
| | Orange | Input 7: Not used |
| | Orange/Black | Input 8: Not used |
| | Pink | Input 9: Not used |
| | Pink/Black | Input 10: Not used |
| | Green | AUX output 3: Not used |
| | Green/Black | AUX output 4: Not used |
| Others | | |
| Item | | Setting |
| AUX | Display unit | State information output |
| | | AUX1 |
| | | AUX2 |
| | | AUX3 |
| | | AUX4 |
| Others | Display unit | Power saving mode |
| | | Camera blur |
| Detection history setting | Display unit | Saving mode |
| | | Single Frame/Photo |
| Communication setting | | |
| Item | | Setting |
| Communication setting | | Communication protocol |
| | | PROFINET |
| | | Endianness |
| | | Little-endian |
| | | Measured value stabilization filter |
| | | None |
| | Diagnostics | Window Pollution Error or alert |
| | | ON |
| | | MI Error |
| | | ON |
| | | Configuration Error |
| | | ON |
| | | System Error |
| | | ON |
| | | AUX Error |
| | | ON |
| | | EDM Error |
| | | ON |
| | | OSSD Error |
| | | ON |
| | | Other Error |
| | | ON |
| | | Other Alert |
| | | ON |
| Ethernet common setting | | IP setting |
| | | Static IP |
| | | IP address |
| | | 192.168.0.1 |
| | | Subnetmask |
| | | 255.255.255.0 |
| | | Default gateway |
| | | 0.0.0.0 |
| | | Device name |
| | | test |
| | Advanced setting | TCP port number |
| | | 8637 |
| | | UDP command port number |
| | | 8800 |
| | | Keep-alive time |
| | | 90 s |
| | | Time-out period |
| | | 10 s |

Explanatory note

Protection A Warning A

Head1
Bank0


Comments on the zone

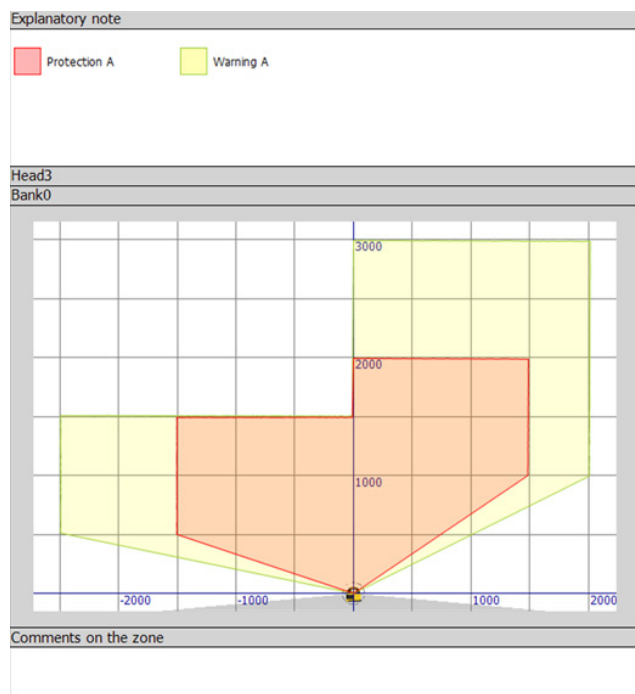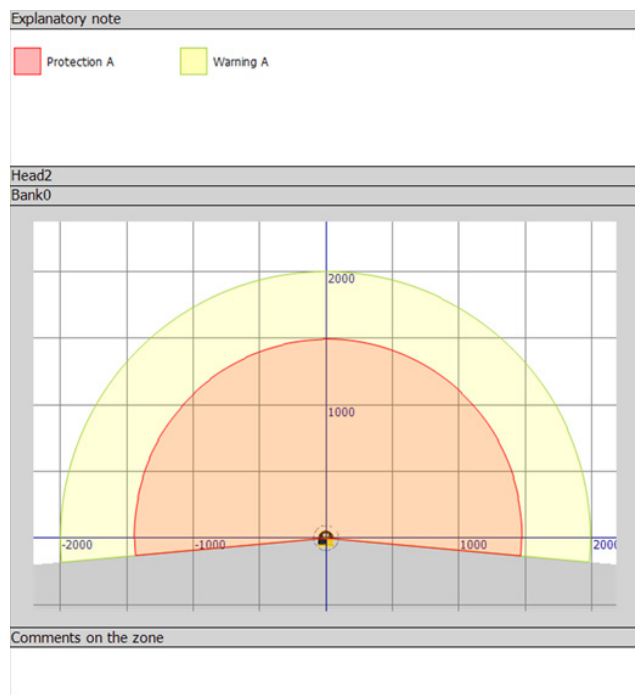

9. Operating the SZ-V

9-1 Turning On Power for the First Time

When the SZ-V starts for the first time, the following screens are displayed:

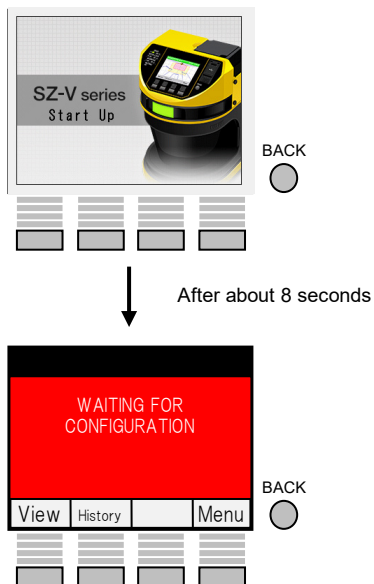

When "Waiting for configuration" appears, configure the settings from the SZ-V Configurator. "Setting Procedure" (page 73)

► Important


- The SZ-V cannot perform normal operations with the factory default settings. Password input and configuration are required to start normal operation. To set the SZ-V functions, use the SZ-V configuration software. Function cannot be set directly on the SZ-V.
- Until the settings have been configured, OSSD will remain in the OFF State.

9-2 How to Read the SZ-V Display

How to Read the Display


The display can be switched between three types of displays.
For details on how to switch the display, see "Switching the Display (View)" (page 116).

How to read the state on the display

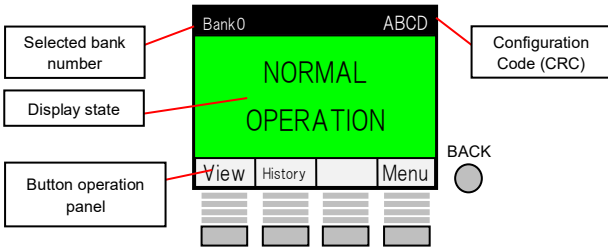


| Name | Description |
|--------------------------|---|
| Selected bank number | Displays the selected bank number when using the bank switching function. • When using independent bank switching, the bank number is displayed as two digits (for example, Bank0-0). |
| Configuration Code (CRC) | Displays the Configuration Code (CRC) of the current settings. "Configuration Code (CRC)" (page 66) |
| Display state | Displays the status of the SZ-V. For details on the display, see "Information on the Display" (page 140). Background color is green: OSSD is ON Background color is red: OSSD is OFF |
| Button operation panel | Indicates the behavior when buttons 1 to 4 are pressed. For the meaning of each button operation, see the following: • "Switching the Display (View)" (page 116) • "Operating the Menu (Menu)" (page 117) • "Displaying the Detection History" (page 97) • "Display When an Error Occurs (Error/Alert)" (page 123) |

■ When using PROFINET/PROFIsafe

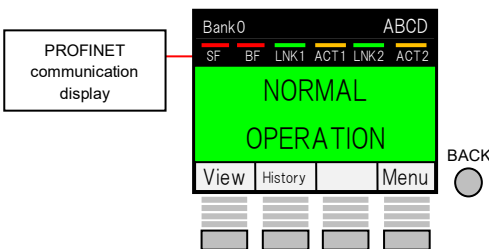


| Name | Color/Status | Description |
|----------|-------------------|--|
| SF | Red (ON) | An error has occurred in the SZ-V. |
| | OFF | Normal operation. |
| BF | Red (ON) | An error has occurred with the Ethernet communication. |
| | Red (Flashing) | Receiving a FLASH signal. |
| | OFF | Normal operation. |
| LNK1 (2) | Green (ON) | Ethernet cable is connected to port 1 (2). |
| | OFF | Ethernet cable is not connected to port 1 (2). |
| ACT1 (2) | Orange (Flashing) | Communicating on port 1 (2). |
| | Off | Not communicating on port 1 (2). |

How to read the monitor view on the display

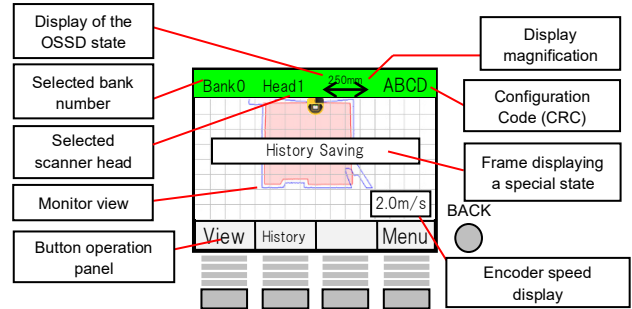

| Name | Description |
|----------------------------------|--|
| Selected bank number | Displays the selected bank number when using the bank switching function. • When using independent bank switching, the bank number is displayed as two digits (for example, Bank01). |
| Selected scanner head number | Displays the number of the currently selected scanner head. |
| Display magnification | Displays the current magnification of the display. There are five levels of display magnification. |
| Configuration Code (CRC) | Displays the Configuration Code (CRC) of the current settings. "Configuration Code (CRC)" (page 66) |
| Display of the OSSD state | Background color is green: OSSD is ON Background color is red: OSSD is OFF |
| Frame displaying a special state | Message for a special state, such as interlock-reset-ready, flashes on the display. The frame is only displayed for a special state. "Information on the Display" (page 140) |
| Monitor view | Draws the detection zone of the selected scanner head. When using the bank switching function, the selected bank zone is drawn. |
| Encoder velocity display | When the bank switching method is switching through encoder input, this is displayed as the encoder velocity (unit: m/s). |
| Button operation panel | Indicates the behavior when buttons 1 to 4 are pressed. For the meaning of each button operation, see the following: • "Switching the Display (View)" (page 116) • "Operating the Menu (Menu)" (page 117) • "Displaying the Detection History" (page 97) • "Displaying the Detection History" (page 122) • "Display When an Error Occurs (Error/Alert)" (page 123) |

■ Monitor view

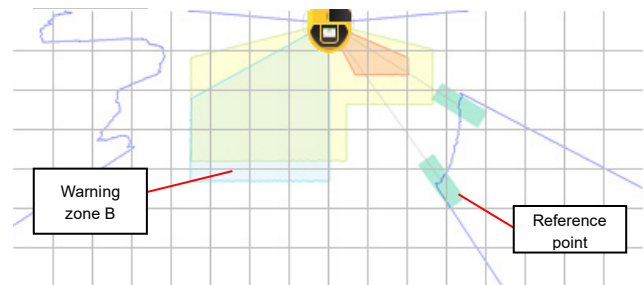


| Name | Description |
|---------------------|--|
| Protection zone A/B | Displays the set protection zone*. |
| Warning zone A | This is shown if Warning Zone A is set. |
| Warning zone B | This is shown if Warning Zone B is set. |
| Ranging information | This shows the ranging result of the SZ-V Series in real time. (Displayed in blue) |
| Reference point | Displays a set reference point. |

*In the muting state, the protection zone excluding the muting zone is displayed.

Reference Even if it looks like an object is not detected on the monitor view, a person or an object may actually be detected.

How to read the camera view

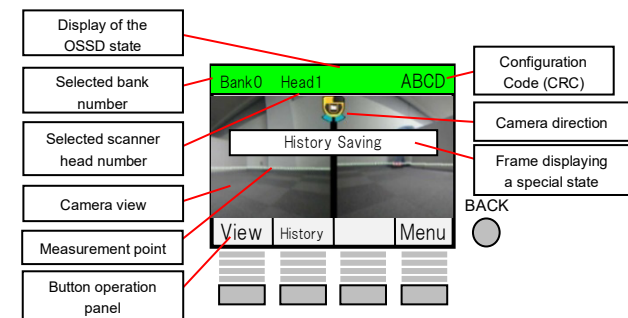

| Name | Description |
|----------------------------------|--|
| Selected bank number | Displays the selected bank number when using the bank switching function. • When using independent bank switching, the bank number is displayed as two digits (for example, Bank01). |
| Selected scanner head number | Displays the number of the currently selected scanner head. |
| Configuration Code (CRC) | Displays the Configuration Code (CRC) of the current settings. "Configuration Code (CRC)" (page 66) |
| Display of the OSSD state | Background color is green: OSSD is ON Background color is red: OSSD is OFF |
| Frame displaying a special state | Message for a special state, such as interlock-reset-ready, flashes on the display. The frame is only displayed for a special state. "Information on the Display" (page 140) |
| Camera view | Displays the camera image of the selected scanner head. |
| Measurement point | Overlays the position of the measurement laser on the camera image. Measurement point is red: An object is detected in the protection zone. Measurement point is green: An object is detected outside of the protection zone. |
| Camera direction | Displays the direction of the camera with an icon. Default setting: Center display camera, mirror display ON |
| Button operation panel | Indicates the behavior when buttons 1 to 4 are pressed. • "Switching the Display (View)" (page 116) • "Operating the Menu (Menu)" (page 117) • "Displaying the Detection History" (page 122) • "Display When an Error Occurs (Error/Alert)" (page 123) |

Reference The color of the measurement point changes based on whether an object is detected in the protection zone, regardless of the muting or override states.

■ Camera direction


Indicates whether the displayed camera and mirror display are on or off.

| Icon | Display Camera | Mirror display | Description |
|------|----------------|----------------|--|
| | Left camera | Off | Displays the left camera image. |
| | Right camera | Off | Displays the right camera image. |
| | Center | Off | Displays both the left and right camera images. |
| | Left camera | On | Displays the left camera image in reverse. |
| | Right camera | On | Displays the right camera image in reverse. |
| | Center | On | Displays both the left and right camera images in reverse. |

Mirror display

| Mirror display OFF | Mirror display ON |
|--|--|
| <p>Does not display the camera image in reverse. This is best suited for when the Display unit and scanner head are facing the same direction.</p> | <p>Displays the camera image in reverse. This is best suited for when the Display unit and scanner head are facing the opposite direction.</p> |

9-3 Switching the Display (View)

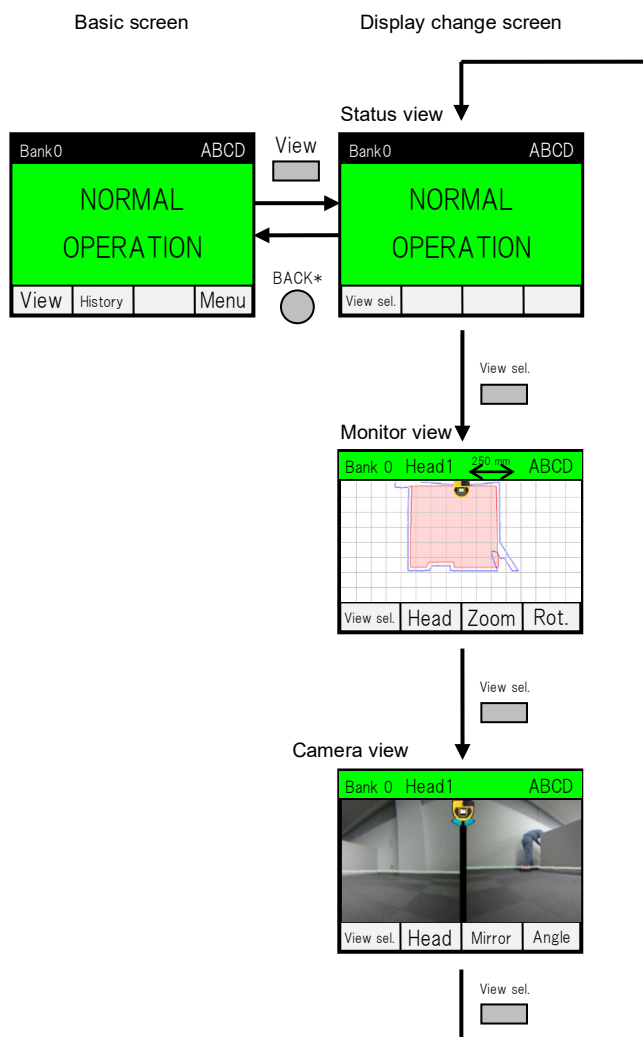

* Also goes back to basic screen when there was no operation for more than 10 seconds.


| Item | Operation details |
|--------------------|---|
| [View.] button | Transition from the basic screen to the display change screen. |
| [View sel.] button | Switch between display state, monitor view, and camera view. |
| [Head] button | Switch the displayed scanner head. Displayed only when scanner heads have been expanded. Scanner head 1 → 2 → 3 → 1 |
| [Zoom] button | Zoom in on the display. There are 5 levels of zoom. |
| [Rot.] button | Switches the display direction in increments of 90°. |
| [Mirror] button | Switch the mirror display on and off. Default setting: Off |
| [Angle] button | Switch the camera view direction. Center → left camera → right camera → center Default setting: Center |

"How to read the monitor view on the display" (page 114)

"How to read the camera view" (page 115)

- Reference**
- The display state is displayed as the default setting. After starting the SZ-V for the second time, the last item displayed during the last start-up is displayed.
 - The camera view can only be selected when using a scanner head type with a camera.


9-4 Operating the Menu (Menu)

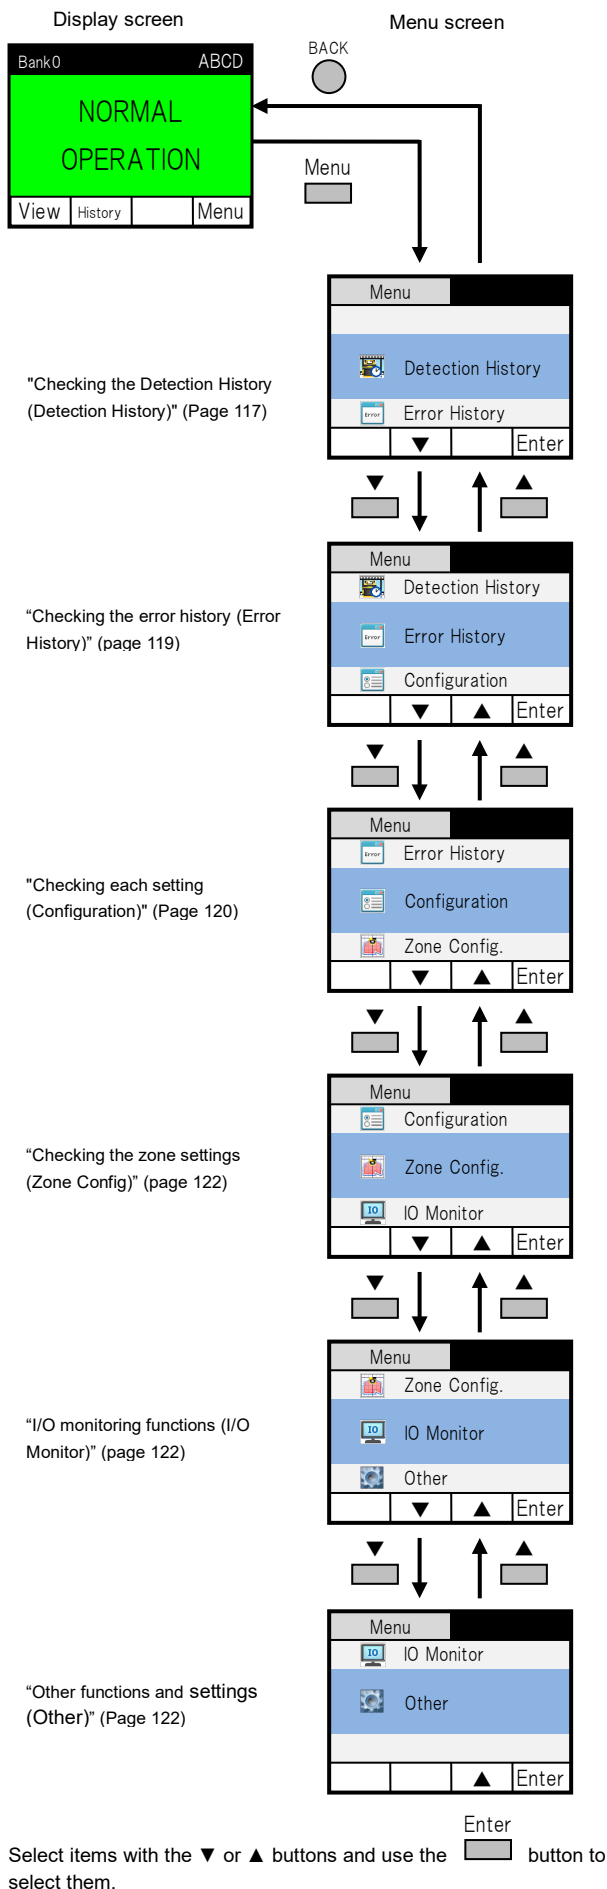

Checking the Detection History (Detection History)

Displays the detection history in order. The history is displayed in order from the newest item.

However, if [First 10] is selected for the [Save format] in the detection history settings, the oldest item is displayed first. "Detection history" (page 82)

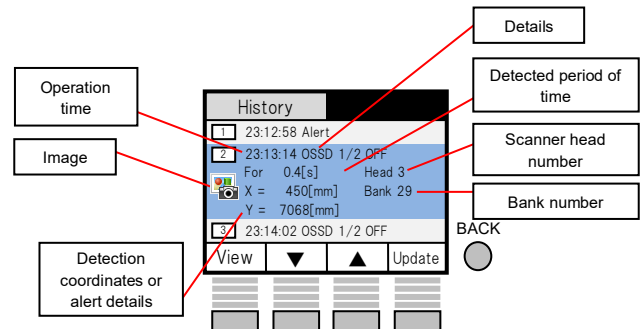

| Item | Description | | | | | | | | | | | | | | | | | | | | |
|----------------------------------|--|----------------------------------|--|--------------|-----------------|--------------|-----------------|------------------|--|------------------|--|-------------------------------|--|--------------|------------------------------|--------------|------------------------------|-------|--|-------|------------------------|
| Operation time | Indicates the time an event occurred. The displayed time is the time from when the SZ-V power was turned on until the event occurred. | | | | | | | | | | | | | | | | | | | | |
| Details | Displays the details of the detected event. <table><tr><td colspan="2">Detection in the protection zone</td></tr><tr><td>OSSD 1/2 OFF</td><td>OSSD 1/2 is OFF</td></tr><tr><td>OSSD 3/4 OFF</td><td>OSSD 3/4 is OFF</td></tr><tr><td>Ref. Point (1/2)</td><td>The reference points are not detected in Protection Zone A</td></tr><tr><td>Ref. Point (3/4)</td><td>The reference points are not detected in Protection Zone B</td></tr><tr><td colspan="2">Detection in the warning zone</td></tr><tr><td>Warn. Zone A</td><td>Detection in Warning Zone A.</td></tr><tr><td>Warn. Zone B</td><td>Detection in Warning Zone B.</td></tr><tr><td>Alert</td><td></td></tr><tr><td>Alert</td><td>An alert is occurring.</td></tr></table> | Detection in the protection zone | | OSSD 1/2 OFF | OSSD 1/2 is OFF | OSSD 3/4 OFF | OSSD 3/4 is OFF | Ref. Point (1/2) | The reference points are not detected in Protection Zone A | Ref. Point (3/4) | The reference points are not detected in Protection Zone B | Detection in the warning zone | | Warn. Zone A | Detection in Warning Zone A. | Warn. Zone B | Detection in Warning Zone B. | Alert | | Alert | An alert is occurring. |
| Detection in the protection zone | | | | | | | | | | | | | | | | | | | | | |
| OSSD 1/2 OFF | OSSD 1/2 is OFF | | | | | | | | | | | | | | | | | | | | |
| OSSD 3/4 OFF | OSSD 3/4 is OFF | | | | | | | | | | | | | | | | | | | | |
| Ref. Point (1/2) | The reference points are not detected in Protection Zone A | | | | | | | | | | | | | | | | | | | | |
| Ref. Point (3/4) | The reference points are not detected in Protection Zone B | | | | | | | | | | | | | | | | | | | | |
| Detection in the warning zone | | | | | | | | | | | | | | | | | | | | | |
| Warn. Zone A | Detection in Warning Zone A. | | | | | | | | | | | | | | | | | | | | |
| Warn. Zone B | Detection in Warning Zone B. | | | | | | | | | | | | | | | | | | | | |
| Alert | | | | | | | | | | | | | | | | | | | | | |
| Alert | An alert is occurring. | | | | | | | | | | | | | | | | | | | | |
| Detected time | Displays the duration (seconds) of the event. | | | | | | | | | | | | | | | | | | | | |
| Scanner head number | Displays the scanner head that detected the event. Nothing is displayed if an event is not related to the scanner head. | | | | | | | | | | | | | | | | | | | | |
| Detection coordinates | Displays the position coordinates if a person or object is detected in the protection zone or warning zone. | | | | | | | | | | | | | | | | | | | | |
| Alert details | Displays the details of the alert. "Alert State" (page 139) | | | | | | | | | | | | | | | | | | | | |
| Bank number | Displays the selected bank when an event occurs when using the bank switching function. | | | | | | | | | | | | | | | | | | | | |
| Image | Displays an icon when a video or photo is being saved. <div> A video of two seconds before and after the moment the event occurred</div> <div> A photo of the moment the event occurred is being saved.</div> <p>"Checking detection images and video in the protection zone on the SZ-V" (page 118)</p> | | | | | | | | | | | | | | | | | | | | |
| [View] button | Check the details of a saved video or photo. "Checking detection images and video in the protection zone on the SZ-V" (page 118) | | | | | | | | | | | | | | | | | | | | |
| [▼] button | Displays the next detection history item down. | | | | | | | | | | | | | | | | | | | | |
| [▲] button | Displays the next detection history item up. | | | | | | | | | | | | | | | | | | | | |
| [Update] button | Refreshes the detection history. Refresh and display events that occurred while the detection history is displayed. | | | | | | | | | | | | | | | | | | | | |


Reference Check up to 100 detection history items on the SZ-V. To see a detection history item older than the 100th item, you can check it on the SZ-V Configurator. "Checking the Detection History" (page 99)

Checking detection images and video in the protection zone on the SZ-V

Easily check detection images or videos of when a detection occurs in the protection zone.

Only photos and videos of events when detection occurs in the protection zone are saved. Photos and videos when detections or alerts occur in the warning zone are not saved.


■ For Single frame mode/Photos

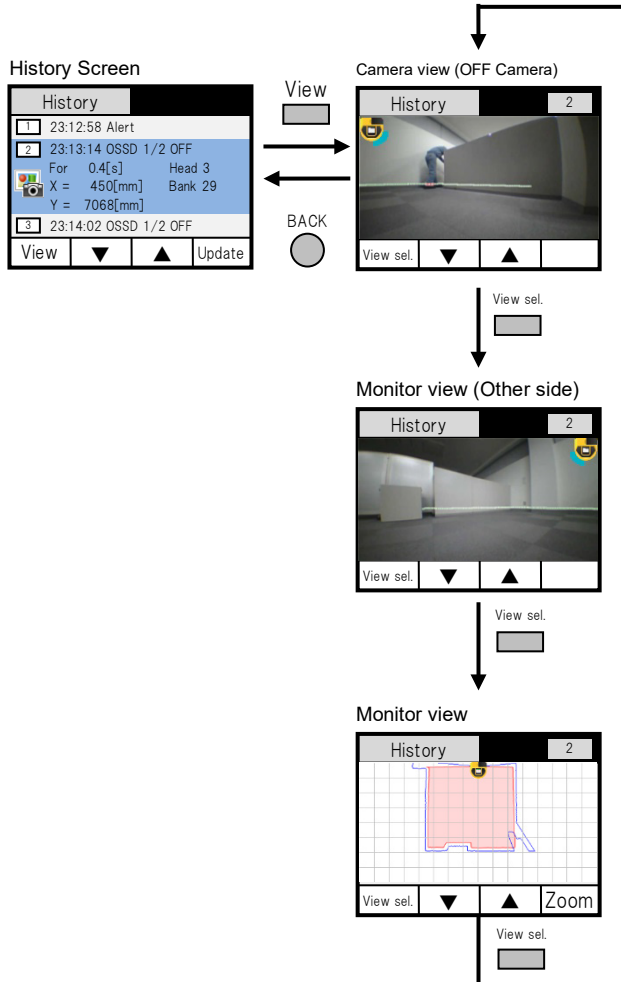

| Item | Description |
|---------------|--|
| [▼] button | Display previous image. |
| [▲] button | Display next image. |
| [Zoom] button | Zoom (enlarge) the screen. (The zoom are 5 steps) |

Reference Display camera images can only be displayed when using a scanner head that has a camera.

■ For Multi-frame mode/Videos

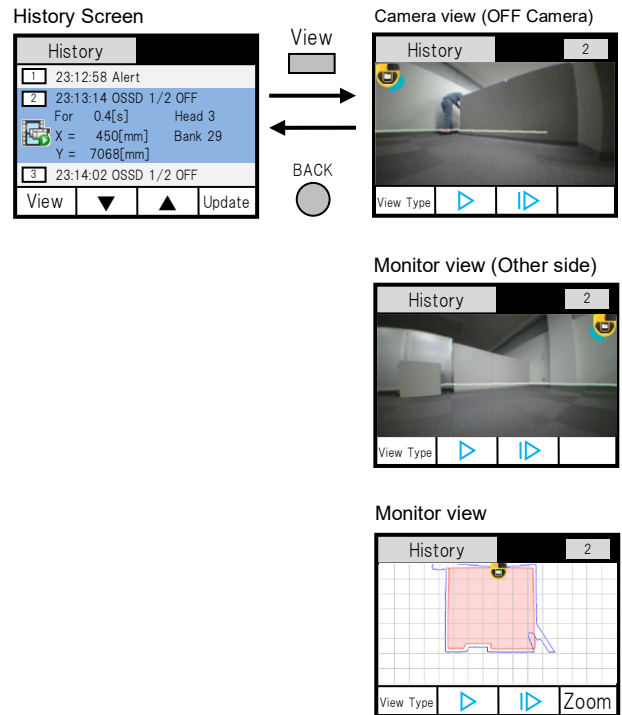

| Item | Description |
|--------------------|---|
| [View Type] button | Change the display. If the [View Type] button is pressed, the menu changes as follows and a display can be selected. <div> <div></div> <div></div> <div></div> <div>Line</div> </div> |
| [] button | Switch to the right camera view. |
| [] button | Switch to the left camera view. |
| [Line] button | Switch to the monitor view. |
| [▶] button | Play the video. |
| [▶▶] button | Play the video frame-by-frame. |
| [Zoom] button | Zoom in on the display. There are 5 levels of zoom. |

Reference • Camera images can only be displayed when using a scanner head that has a camera. If the bank is switched during the video, the protection zones, warning zones, and reference points are also switched and displayed.

Checking the error history (Error History)

Displays the error history. The history is displayed in order from the newest item.

Operation time

ErrorHistory

Error code

Error details

BACK

0: 1:38 [Err code] 0410
Window Error

0: 3:15 [Err code] 0410
Window Error
(Head 1)

2:34:55 [Err Code] 0028
Unused Wire

▼

▲


| Item | Description |
|----------------|--|
| Operation time | Indicates the time an event occurred. The displayed time is the time from when the SZ-V power was turned on until the event occurred. |
| Error code | Displays the code that indicates the error. |
| Error details | Displays the details of the error. |

Checking each setting (Configuration)

Check each setting from the display.
Settings cannot be checked when SZ-V is under waiting for configuration status. In that case, the display will show “Waiting for Configuration”.

Reference

- With the exception of some items, such as the display brightness, settings cannot be changed on the SZ-V. To change the settings, use the SZ-V Configurator. “Configuring the settings” (page 74)
- The bank sequence monitoring settings cannot be viewed from the SZ-V. Check them in the SZ-V Configurator.

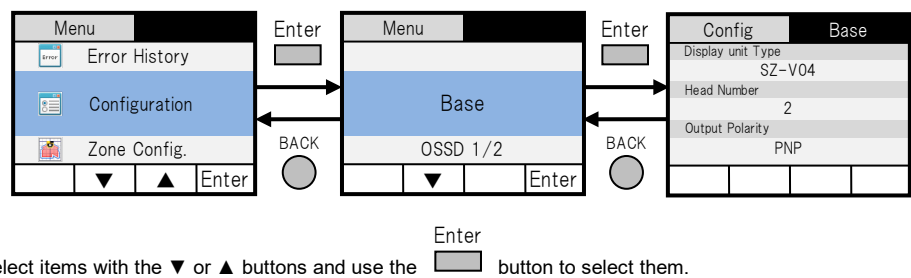

Base

Check the basic settings.

Display unit Type

Displays the selected Display unit model.

Head Number

Displays the number of scanner heads that are connected. (1 to 3).

PNP/NPN Select

Displays the Selection of PNP or NPN settings. (PNP, NPN)

OSSD 1/2

Check the OSSD 1/2 settings.

Start Interlock

Displays the interlock settings when OSSD 1/2 starts.

Restart Interlock

Displays the interlock settings when OSSD 1/2 restarts.

ON-delay [s]

Displays the OSSD 1/2 interlock on-delay setting time.

EDM

Displays the OSSD 1/2 EDM settings.

EDM Delay Time [s]

Displays the OSSD 1/2 EDM time settings.

OSSD 3/4

*** When using the SZ-V04, SZ-V32NC or when PROFIsafe communication is used with the SZ-V32N**

Check the OSSD 3/4 settings.

Start Interlock

Displays the interlock settings when OSSD 3/4 starts.

Restart Interlock

Displays the interlock settings when OSSD 3/4 restarts.

ON-delay [s]

Displays the OSSD 3/4 interlock on-delay setting time.

EDM

Displays the OSSD 3/4 EDM settings.

EDM Delay Time [s]

Displays the OSSD 3/4 EDM time settings.

Reference When using PROFIsafe or CIP Safety™, OSSD 1 and 2 are equivalent to “Protection Zone A State” and OSSD 3 and 4 are equivalent to “Protection Zone B State”.

Protection Zone A Head 1

Check the Protection Zone A settings for the first scanner head.

Detectable Object Size

Displays the minimum detectable object settings.

Response Time [ms]

Displays the response time settings.

Operating Mode

Displays the mode selection settings.

Scan Cycle

Displays the scan cycle settings.

Protection Zone B Head 1

Check the Protection Zone B settings for the first scanner head.

Warning Zone A Head 1

Check the Warning Zone A settings for the first scanner head.

Detectable Object Size

Displays the minimum detectable object settings.

Response Time [ms]

Displays the response time settings.

Warning Zone B Head 1

Check the Warning Zone B settings for the first scanner head.

Protection Zone A Head 2

Check the Protection Zone A settings for the second scanner head.

Protection Zone B Head 2

Check the Protection Zone B settings for the second scanner head.

Warning Zone A Head 2

Check the Warning Zone A settings for the second scanner head.

Warning Zone B Head 2

Check the Warning Zone B settings for the second scanner head.

Protection Zone A Head 3

Check the Protection Zone A settings for the third scanner head.

Protection Zone B Head 3

Check the Protection Zone B settings for the third scanner head.

Warning Zone A Head 3

Check the Warning Zone A settings for the third scanner head.

Warning Zone B Head 3

Check the Warning Zone B settings for the third scanner head.

Multi-OSSD

*** When using the SZ-V04 or when PROFI-safe communication is used with the SZ-V32N**

Check the settings for the multi-OSSD function.

Multi-OSSD

Displays whether the multi-OSSD function is used or not.

OSSD 1/2 Head Assign

Displays the scanner head(s) for ON/OFF of OSSD 1/2.

OSSD 3/4 Head Assign

Displays the scanner head(s) for ON/OFF of OSSD 3/4.

Bank

Check the bank switching settings.

Bank Input Type

Displays the settings for the bank switching method.

Number of Banks

Displays the number of banks that are being used.

Bank Transition Time

Displays the settings for the bank transition time.

Bank Sequence Monitor

Displays the settings for the bank sequence monitoring function.

Laser Shutdown Bank No.

Displays the laser shutdown bank settings for the operation check function.

Independent Bank Switching

Displays whether the independent bank switching function is used or not.

Encoder

Check the encoder settings.

Number of Input Banks

Displays the number of banks that can be switched through the input for the single input method.

Number of Velocity Banks

Displays the number of banks that can be switched through the encoder input (velocity).

Allowed Difference [%]

Displays the allowable error settings.

Allowed Difference Time [s]

Displays the detection time tolerance settings.

Ch1 [pulses/mm]

Displays the settings for the number of pulses per millimeter for Encoder 1.

Ch2 [pulses/mm]

Displays the settings for the number of pulses per millimeter for Encoder 2.

Encoder Velocity

Check the encoder velocity settings.

Muting

Check the muting settings.

Period of Time between Inputs

Displays the settings for the time between muting inputs.

Input Sequence

Displays the settings for the muting input sequence.

Max. Muting Period

Displays the settings for the Maximum muting period of time.

Muting Lamp Failure

Displays operation settings when a muting lamp failure occurs.

Max. Override Period

Displays the maximum override time settings.

Function

Check the settings for other functions.

Reference Point Monitoring

Displays whether the reference point monitoring function is used or not.

Laser Off Input

Displays whether laser off input is used or not.

MI Error

Displays the MI error detection time settings.

AUX

Check the AUX output (non-safety output) settings.

*Depending on the model and functions used, the number of AUX outputs that can be used differs.

"AUX Output" (page 46)

AUX 1

Displays the function assigned to the AUX 1 output.

AUX 2

Displays the function assigned to the AUX 2 output.

AUX 3

Displays the function assigned to the AUX 3 output.

AUX 4

Displays the function assigned to the AUX 4 output.

AUX 5

Displays the function assigned to the AUX 5 output.

AUX 6

Displays the function assigned to the AUX 6 output.

State Information

Check the state information output settings.

State Information

Displays whether the state information output is used or not.

Pulse width

Displays the output pulse width when the state information output is used.

Display setting

Check display related settings.

Power saving mode

Displays the power saving mode settings.

Camera blur *Displayed only when a scanner head with camera is used.

Displays the blur settings for saved images.

Detection History

Check the detection history settings.

Saving Mode

Displays the settings for whether to save as a single frame mode or as a multi-frame mode.

First/Last Select

Displays the settings for the save sequence when save mode is multi-frame mode..

Ethernet Function (SZ-V32N type and SZ-V32NC type only)

Check the Ethernet connection settings.

Protocol

Displays the protocol settings in use.

Endianness

Displays the endianness settings in use.

Measured Value Filter

Displays the filter settings for measured distance data.

IP setting (SZ-V32N type and SZ-V32NC type only)

Check the IP address settings.

IP setting

Displays the settings for the method to assign IP addresses.

IP Address

Displays the IP address.

MAC Address

Displays the MAC address.

Subnet mask

Displays the subnet mask settings.

Default Gateway


Displays the default gateway settings.

Device Name (SZ-V32N type and SZ-V32NC type only)

Check the device name settings on the network.


Device Name

Displays the device name.

 When using PROFI-safe, "PROFI-safe" is added.
When using CIP Safety™, "CIP Safety" is added.

Checking the zone settings (Zone Config)

Check the settings for the currently set zones.

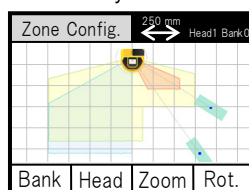

| Item | Operation details |
|---------------|--|
| [Bank] button | Switch the displayed bank. Displayed only when the bank switching function is used. Bank 0 → Bank 1 → ... → Bank 31 → Bank 0 |
| [Head] button | Switch the displayed scanner head. Displayed only when the scanner heads have been expanded. Scanner head 1 → 2 → 3 → 1 |
| [Zoom] button | Zoom in on the display. There are 5 levels of zoom. |
| [Rot.] button | Switches the display direction in increments of 90°. |

I/O monitoring functions (I/O Monitor)

This shows the state of input and output wires.


Input

| IO Monitor | | | |
|------------|-----|----------|-----|
| Input 1 | OFF | Input 2 | OFF |
| Input 3 | OFF | Input 4 | OFF |
| Input 5 | OFF | Input 6 | OFF |
| Input 7 | OFF | Input 8 | OFF |
| Input 9 | OFF | Input 10 | OFF |
| | | | |
| | | Output | |

Output

| IO Monitor | | | |
|------------|-----|----------|-----|
| OSSD 1/2 | OFF | OSSD 3/4 | OFF |
| AUX1 | OFF | AUX2 | OFF |
| AUX3 | OFF | AUX4 | OFF |
| AUX5 | OFF | AUX6 | OFF |
| | | | |
| Input | | | |

| Display | State |
|---------|------------------------|
| ON | Input (output) is ON. |
| OFF | Input (output) is OFF. |

-  When using the state information output, "AUX1&2: State Information" is displayed in the AUX1/AUX2 field. ON/OFF information is not displayed.
- When using PROFI-safe or CIP Safety™, the status of Input data and Output data are displayed in hexadecimal notation. And also the detection status of all protection zones and warning zones are displayed.

Other functions and settings (Other)

Display Brightness

Set 5 levels of screen brightness.

Restart Request

Restart the SZ-V. This operation is the same as when you turn on the SZ-V power again.

9-5 Displaying the Detection History (History)

Displays the detection history. The content displayed is the same as when selecting detection history in the menu.

"Checking the Detection History (Detection History)" (page 117)


9-6 Display When an Error Occurs (Error/Alert)

When an error or alert occurs, find out the details on the display.


Display on the SZ-V when an error or alert occurs

Display on the SZ-V when an error occurs

Status view

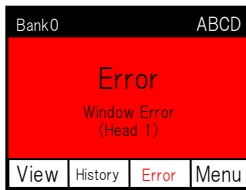


Monitor view or Camera view

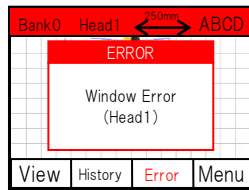


Display on the SZ-V when an alert occurs

Status view

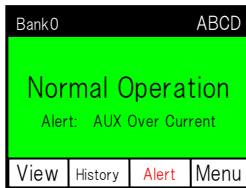


Monitor view or Camera view

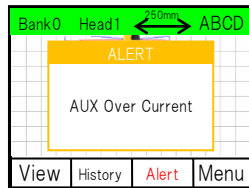


Reference If multiple errors occur at the same time, the detail on the error with the highest level of priority is displayed.

Screen transition when an error occurs

From display state

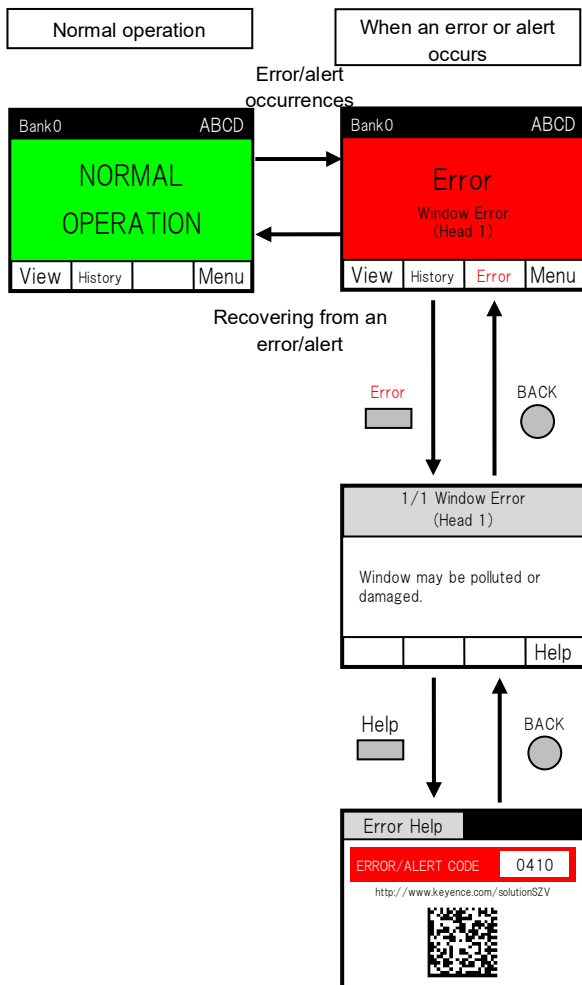

From monitor view or camera view

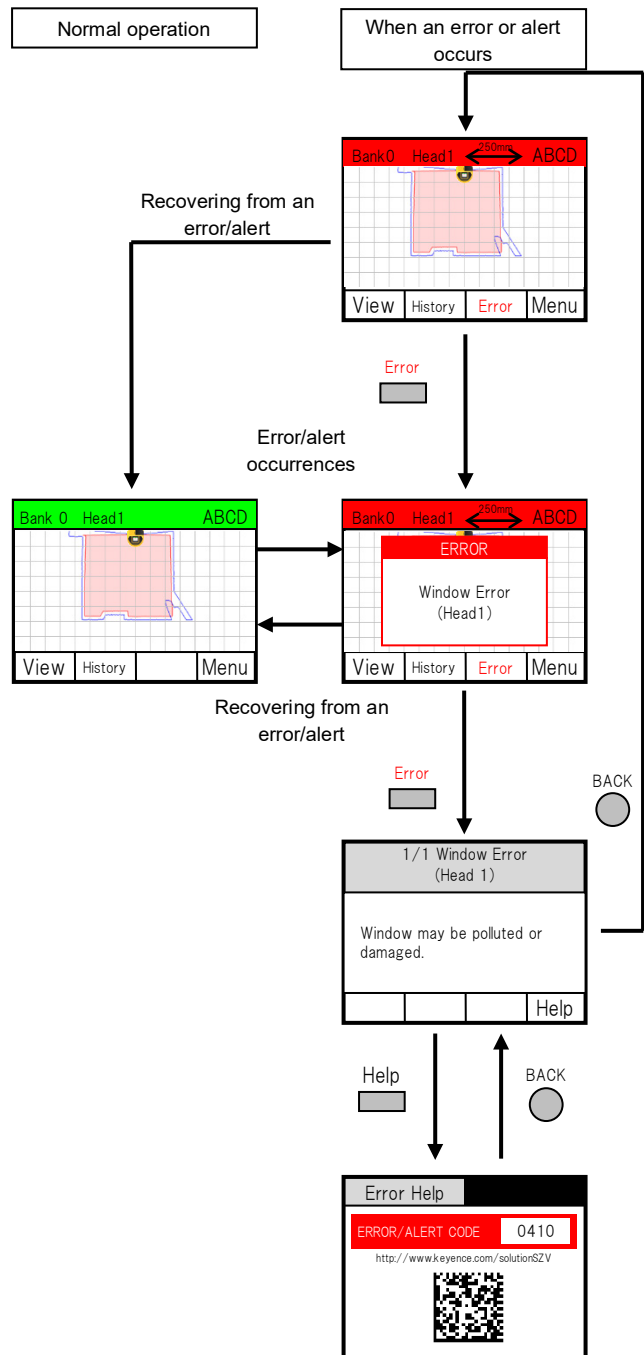

- Reference** The SZ-V recovers automatically from an alert when the cause of the alert disappears. For details, see "Alert State" (page 139).
- Depending on the type of error, it may be necessary to turn the power OFF and ON to recover from the error. For details, see "Error State" (page 139).
- If an alert occurs, [ALERT] is displayed instead of [ERROR]. If 30 seconds pass and the SZ-V has not recovered from the error or alert, the display will automatically return to the details of the error or alert.



9-7 Other Functions and Operations

Key lock


This function locks the SZ-V buttons to prevent incorrect operation.

Enabling key lock


Holding down the furthest left button on the Display unit (button 1) and the furthest right button (button 4) simultaneously for more than 3 seconds, enables the key lock function.

Using the following screen as an example, hold down  and  simultaneously for more than 3 seconds.

Normal state

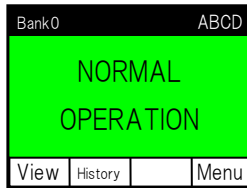

Key lock state

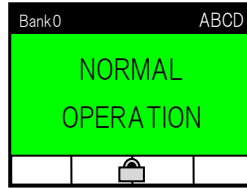


Disabling key lock

In the same manner as enabling key lock, holding down the furthest left button on the Display unit (button 1) and the furthest right button (button 4) simultaneously for more than 3 seconds, disables the key lock function.

9-8 How to Read the indicators

Display unit indicators

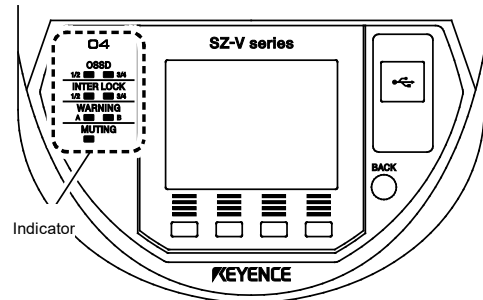

| | SZ-V04 type | SZ-V32 type | SZ-V32N type |
|---|---|---|--|
| | O4 OSSD 1/2 3/4 INTER LOCK 1/2 3/4 WARNING A B MUTING | 32 OSSD INTER LOCK WARNING A B | 32N OSSD S-COM INTER LOCK COM WARNING A B MUTING LINK |
| 1 | OSSD 1/2 indicator | OSSD indicator | OSSD indicator *1 |
| 2 | OSSD 3/4 indicator | None | S-COM indicator *2 |
| 3 | Interlock 1/2 indicator | Interlock indicator | Interlock indicator |
| 4 | Interlock 3/4 indicator | None | COM indicator |
| 5 | Warning zone indicator A | Warning zone indicator A | Warning zone indicator A |
| 6 | Warning zone indicator B | Warning zone indicator B | Warning zone indicator B |
| 7 | Muting indicator | None | Muting indicator |
| 8 | None | None | Link indicator |

*1 Always off when PROFIsafe is used.

*2 Always off when PROFIsafe is not used.

■ OSSD indicator

| Light color | Status | Details |
|-------------|----------|------------------------------------|
| Green | ON | OSSD 1/2 (3/4) is in the ON-state |
| Red | ON | OSSD 1/2 (3/4) is in the OFF-state |
| | Flashing | Error State |
| -- | OFF | Power OFF state |

For details on OSSD, see "OSSD" (page 44).

■ Interlock indicator

| Light color | Status | Details |
|-------------|----------|--|
| Yellow | ON | OSSD 1/2 (3/4) is in the interlock state |
| | Flashing | OSSD 1/2 (3/4) is in the interlock-reset-ready state |
| -- | OFF | Other states |

For details, see "Interlock function" (page 47).

■ Warning zone indicator A (B)

| Light color | Status | Details |
|-------------|--------|---|
| Orange | ON | Object or person detected in Warning Zone A (B) |
| -- | OFF | Other states |

■ Muting indicator

| Light color | Status | Details |
|-------------|----------|--|
| Orange | Flashing | The SZ-V is currently in a muted or override state |
| -- | OFF | Other states |

■ S-COM indicator

| Light color | Status | Details |
|-------------|----------|--|
| Green | ON | PROFIsafe communications are established |
| | Flashing | PROFIsafe user acknowledge |
| Red | ON | F-Parameter error |
| | Flashing | PROFIsafe passivation |
| -- | OFF | Other states |

■ COM indicator


| Light color | Status | Details |
|-------------|--------|---|
| Yellow | ON | PROFINET, EtherNet/IP™ or UDP data communication is established |
| -- | OFF | Other states |

For details on Ethernet communications, see "Monitoring Using Communications" (page 102).

■ Link indicator

| Light color | Status | Details |
|-------------|-----------------|---------------------------------------|
| Orange | ON | Ethernet communication is established |
| | Flashing | Transmitting data |
| | Flashing slowly | Connected to the SZ-V Configurator |
| -- | OFF | Other states |

For details on connecting by Ethernet, see "Selecting an Ethernet connection device" (page 68).
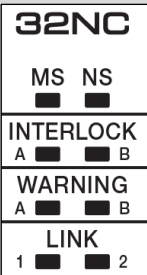
| SZ-V32NC type | |
|--|--------------------------|
|  | |
| 1 | MS indicator |
| 2 | NS indicator |
| 3 | Interlock indicator A |
| 4 | Interlock indicator B |
| 5 | Warning zone indicator A |
| 6 | Warning zone indicator B |
| 7 | Link indicator 1 |
| 8 | Link indicator 2 |


■ MS (Module Status) indicator

| Light color | Status | Details |
|-------------|----------|--|
| Green | ON | CIP Safety™ communication is established |
| | Flashing | CIP Safety™ communication is not established |
| Red/ Green | Flashing | SNN or IP address is not configured |
| Red | Flashing | The IP address is duplicated |
| -- | OFF | Power OFF state |

■ NS (Network Status) indicator

| Light color | Status | Details |
|-------------|----------|--|
| Green | ON | EtherNet/IP™ or CIP Safety™ communication is established |
| | Flashing | Other than above |
| Red | ON | The IP address is duplicated |
| | Flashing | CIP Safety™ communication has timed out |
| -- | OFF | Power OFF state or IP address is not configured |

Scanner head indicators

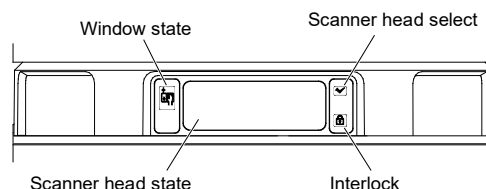

■ Window state indicator

| Light color | Status | Details |
|-------------|--------|--|
| Orange | ON | This scanner head is in a window alert state or a window error state |
| -- | OFF | Other states |

■ Scanner head state indicator

| Light color | Status | Details |
|-------------|-----------------|--|
| Green | ON | The protection zone or warning zone for this scanner head is in a non-detection state |
| | Flashing slowly | In Simulation mode, the simulation zone is in a non-detection state "Simulation mode" (page 92) While dynamic drawing, the zone being edited is in an object non-detection state "Dynamic drawing function" (page 89) |
| Orange | ON | The protection zone for this scanner head is in a non-detection state but the warning zone is in a detection state |
| | Flashing | Muted or override condition |
| | Flashing slowly | While dynamic drawing, the dynamic drawing sheet is in a detection state "Dynamic drawing function" (page 89) |
| Red | ON | The protection zone for this scanner head is in a detection state |
| | Flashing | Error State |
| | Flashing slowly | In Simulation mode, the simulation zone is in a detection state "Simulation mode" (page 92) While dynamic drawing, the zone being edited is in an object detection state "Dynamic drawing function" (page 89) |
| -- | OFF | <ul style="list-style-type: none"> Power is OFF During start-up Setting from SZ-V Configurator No operation for more than 30 seconds in Power Saving Mode. |

■ Scanner head selection indicator

| Light color | Status | Details |
|-------------|--------|--|
| Orange | ON | <ul style="list-style-type: none"> When checking the operation of this scanner head from the SZ-V Configurator or when checking the settings When monitor view or camera view of this scanner head is displayed on the display unit. |
| -- | OFF | Other states |

■ Interlock indicator

| Light color | Status | Details |
|-------------|----------|-----------------------|
| Yellow | ON | Interlock condition |
| | Flashing | Interlock-reset-ready |
| -- | OFF | Other states |


10. Specifications

10-1 Models

SZ-V

Standard models


SZ-V32NX



- (1) Basic designation
- (2) Number of banks or zones
 - 04: 4 Banks
 - 32: 32 Banks or 16 Banks × 2 Protection zones
- (3) Network
 - blank: Without network connection capability
 - N: With PROFINET (PROFINET, UDP, EtherNet/IP™)
 - NC: With CIP Safety™ (EtherNet/IP™, UDP)
- (4) Camera
 - blank: Without camera
 - X: With Camera

Display unit model


SZ-VU32N



- (1) Basic designation
- (2) Number of banks or zones
 - 04: 4 Banks
 - 32: 32 Banks or 16 Banks × 2 Protection zones
- (3) Network
 - blank: Without network connection capability
 - N: With PROFINET (PROFINET, UDP, EtherNet/IP™)

Scanner head model

SZ-VH1X




- (1) Basic designation
- (2) Scanner head model number
- (3) Camera
 - blank: Without camera
 - X: With Camera

Cable

Connector free type

SZ-VP5



- (1) Cable type
 - P: Power cable
 - S: Connection cable
- (2) Cable length
 - Example) 005: 0.05 m

Others

System memory

SZ-VSM

Window for replacement

SZ-VHW

10-2 Specifications

Specifications

| Model Name | | | SZ-V04(X) | SZ-V32(X) | SZ-V32N(X) | SZ-V32NC(X) | |
|--|--|---|---|---|---|------------------|---|
| Type | | | Multi-function Type | Multi-bank Type | PROFIsafe Type | CIP Safety™ Type | |
| Detection capability | Minimum detectable object size ^{*1} | | Diameter 20, 30, 40, 50, 70, 150 mm (depends on the setting) Reflectance 1.8 % min., Speed 1.6 m/s max. | | | | |
| | Detectable angle | | 190° (-5° to 185°) | | | | |
| | Response time ^{*2} (ON to OFF) | Scan Cycle A | Standard Mode: 160ms (2scans) to 1280ms (16scans) High Speed Mode: 80ms (2scans) to 640ms (16scans) | | | | |
| | | Scan Cycle B | Standard Mode: 168ms (2scans) to 1344ms (16scans) High Speed Mode: 84ms (2scans) to 672ms (16scans) | | | | |
| | | Scan Cycle C | Standard Mode: 176ms (2scans) to 1408ms (16scans) High Speed Mode: 88ms (2scans) to 704ms (16scans) | | | | |
| | Response time (OFF to ON) | | Response time (ON to OFF) + 150 ms | | | | |
| | Protection zone | Minimum detectable object size: 70 / 150 mm | 8.4m (Standard Mode) 5.7m (High Speed Mode) | | | | |
| | | Minimum detectable object size: 50 mm | 5.6m (Standard Mode) 3.8m (High Speed Mode) | | | | |
| | | Minimum detectable object size: 40 mm | 4.3m (Standard Mode) 2.9m (High Speed Mode) | | | | |
| | | Minimum detectable object size: 30 mm | 2.9m (Standard Mode) 2.0m (High Speed Mode) | | | | |
| | | Minimum detectable object size: 20 mm | 1.6m (Standard Mode) 1.1m (High Speed Mode) | | | | |
| | Warning zone ^{*4} | Minimum detectable object size: 70 / 150 mm | 26m (Standard Mode) 23m (High Speed Mode) | | | | |
| | | Minimum detectable object size: 50 mm | 25m (Standard Mode) 21m (High Speed Mode) | | | | |
| Minimum detectable object size: 40 mm | | 24m (Standard Mode) 20m (High Speed Mode) | | | | | |
| Minimum detectable object size: 30 mm | | 23m (Standard Mode) 18m (High Speed Mode) | | | | | |
| Minimum detectable object size: 20 mm | | 21m (Standard Mode) 15m (High Speed Mode) | | | | | |
| Additional safety distance ^{*4} | | 100mm | | | | | |
| Maximum measurement distance ^{*5} | | 60m | | | | | |
| Maximum number of banks | | | 4 banks | 32 banks | 32 banks | 16 banks | |
| Multiple scanner heads | | | Up to 3 | | | | |
| Monitor camera ^{*6} | | | Monitor area: over 190° (-5° to 185°) | | | | |
| Display | | | QVGA 2.2inch color LCD | | | | |
| Light source | Type, wavelength | | Infrared laser diode, 905 nm | | | | |
| | Laser Class | IEC/EN | Class1 IEC/EN60825-1 | | | | |
| | | FDA ^{*7} | Class1 FDA 21CFR 1040.10, 1040.11 (Laser Notice No. 50) | | | | |
| | | JIS | Class1 JIS C6802 | | | | |
| Rating | Power voltage | | 24 V DC ±10 % (Ripple P-P 10 % or less): When using a converter power supply 24 V DC +20 %/-30 %: When using a battery | | | | |
| | Power consumption ^{*8} | | 11.8W (without load), 55.0W (with load) | 13.4W (without load), 50.8W (with load) | 13.4W | | |
| Control Output (OSSD) | Output | | Transistor outputs (NPN or PNP is selected by the dedicated PC software) | | | - | |
| | Number of outputs | | 4 outputs | 2 outputs | 2 outputs | - | |
| | Max. load current ^{*9} | | 500mA | | | | - |
| | Residual voltage (during ON) | | Max. 2.5 V (with a cable length of 5 m) | | | | - |
| | OFF-state voltage | | Max. 2.0 V (with a cable length of 5 m) | | | | - |
| | Leakage current ^{*10} | | Max. 1 mA | | | | - |
| | Max. capacitive load | | 2.2μF (with a load resistance of 100Ω) | | | | - |
| | Load wiring resistance | | Max. 2.5Ω | | | | - |
| Input | PNP | | ON-voltage: 10 to 30 V, OFF-voltage: Open or 0 to 3 V Short-circuit current: Approx. 2.5 mA (Approx. 10 mA for EDM) | | | - | |
| | NPN | | ON-voltage: 0 to 3 V, OFF-voltage: Open or 10 V to Power voltage Short-circuit current: Approx. 2.5 mA (Approx. 10 mA for EDM) | | | - | |
| Non safety related output (AUX output) | Output type | | Transistor outputs (NPN or PNP is selected by the dedicated PC software) | | | - | |
| | Number of outputs | | 6 outputs | 4 outputs | 4 outputs | - | |
| | Max. load current | | 50 mA | | | | - |
| | Residual voltage (during ON) | | Max. 2.5 V (with a cable length of 5 m) | | | | - |
| | Connectable Muting lamp | | Incandescent lamp (24 VDC, 1 to 5.5 W) or LED lamp (load current :10 to 230 mA) | - | Incandescent lamp (24 VDC, 1 to 5.5 W) or LED lamp (load current :10 to 230 mA) | - | |
| Interface | USB | | USB2.0 | | | | |
| | Ethernet | Standard / Transmission rate | - | - | IEEE802.3u (100BASE-TX) / 100Mbps | | |
| | | Cable | - | - | STP cable or UTP cable. Category 5 or higher. | | |
| | | Connector | - | - | RJ45 (IP67) 2ports | | |

| | | | | | | |
|--------------------------|---|-----|---|---|--|--------------------------------|
| Network function | | | - | - | PROFIsafe, PROFINET, EtherNet/IP™, UDP | CIP Safety™, EtherNet/IP™, UDP |
| Environmental resistance | Enclosure protection | | IP65 (IEC60529) | | | |
| | Operating ambient temperature | | -10 to +50 °C (No freezing) | | | |
| | Storage ambient temperature | | -25 to +60 °C (No freezing) | | | |
| | Operating relative humidity | | 35% to 85 %RH (No condensation) | | | |
| | Storage relative humidity | | 35 % to 95 % RH | | | |
| | Surrounding light ^{**11} | | incandescent lamp: 1500 lx or less | | | |
| | Vibration | | 10 to 55 Hz, 0.7 mm compound amplitude, 20 sweeps each in X, Y, and Z directions | | | |
| Material | Shock | | 100 m/s2 (Approx. 10 G) 16 ms pulse, in X, Y, Z directions 1,000 times each axis | | | |
| | Scanner head | | Main unit case: Magnesium Window: Polycarbonate, PEI Indicator part: Aluminum, PES | | | |
| | Display unit (case) | | Magnesium, PPS, Polycarbonate | | | |
| Cable length | System memory (case) | | Aluminum, PPE | | | |
| | Power and I/O cable ^{**12} | | 30m or less | | | |
| | Between scanner head and display unit ^{**13} | | 20m or less | | | |
| | Ethernet cable ^{**14} | | - | - | 100m or less | |
| Approved standards | EMC | EMS | IEC61496-1, EN61496-1, UL61496-1 (Type3 ESPE) | | | |
| | | EMI | EN55011 ClassA, FCC Part15B ClassA, ICES-003 ClassA | | | |
| | Safety | | IEC61496-1, EN61496-1, UL61496-1(Type 3 ESPE),IEC61496-3, EN61496-3(Type 3 AOPDDR), IEC61508, EN61508, IEC62061, EN62061(SIL2 / SILCL2), EN ISO13849-1:2015(PLd, Category3), UL508, UL1998, CSA C22.2 No.14, CSA C22.2 No.0.8 | | | |

- *1 If the object to be detected moves parallel to the detection plane, the SZ-V cannot detect the object moving at speed over 1.6m/s, regardless of the encoder setting.
- *2 The response time, protection zone, and warning zone is determined by the operation mode. When using PROFIsafe, 6 ms is added to the response time. When using CIP Safety™, 10ms is added to the response time.
- *3 20% or more reflectance is necessary for the minimum detectable object in the warning zone.
- *4 If there is a highly reflective background within 1.5 m from the boundary of the protection zone, 200 mm must be added as supplementary necessary distance to the protection zone when calculating the safety distance.
- *5 Even when using the network data output, the maximum measured output distance is 60 m.
- *6 Only applicable for a type with a camera.
- *7 The laser classification for FDA (CDRH) is implemented based on IEC60825-1 in accordance with the requirements of Laser Notice No.50.
- *8 When using the SZ-V with series connected scanner heads, it is necessary to add 9.4W per scanner head. Also, power consumption may temporarily be higher (maximum 3.6W). Power consumption will be within the specification after SZ-V moves to normal operation.
- *9 For the SZ-V04 type and the SZ-V32 type, the load current calculation of the OSSD output and AUX output is 1.5 A or less when using one scanner head, 1.0 A or less when using two scanner heads, and 0.5 A or less when using three scanner heads. For the SZ-V32N type, the load current calculation of the OSSD output and AUX output is 1.2 A or less when using one scanner head, 0.8 A or less when using two scanner heads, and 0.3 A or less when using three scanner heads.
- *10 Includes when the power is OFF.
- *11 An ambient light source should not be located within ±5° of the detection plane.
- *12 10 m or less when supplying power from a battery.
- *13 When supplying power from a battery, the length of each connection cable should be 10 m or less when using two scanner heads, and 5 m or less when using three scanner heads.
- *14 Distance between SZ-V and Ethernet switch

IEC61508-related parameters

| | |
|---------------------------|--------------------------|
| T1 (proof test interval) | 20 years |
| Hardware fault tolerance | 1 |
| Type of element | B |
| Malfunction response time | Within the response time |
| Safe state | OSSD OFF state |

PFH_D (dangerous failure rate per hour)

■ No. of scanner heads: When there is 1 scanner head

| Type | OSSD1/2 | OSSD3/4 |
|---------------|---|-----------------------|
| SZ-V04 Type | 7.98×10^{-9} | 7.98×10^{-9} |
| SZ-V32 Type | 8.02×10^{-9} | |
| SZ-V32N Type | 8.02×10^{-9} | |
| SZ-V32NC type | 8.02×10^{-9} (OSSD Unavailable.) | |

■ No. of scanner heads: When there are 2 scanner heads

| Type | OSSD1/2 | OSSD3/4 |
|---------------|---|-----------------------|
| SZ-V04 Type | 8.47×10^{-9} | 8.47×10^{-9} |
| SZ-V32 Type | 8.50×10^{-9} | |
| SZ-V32N Type | 8.50×10^{-9} | |
| SZ-V32NC type | 8.50×10^{-9} (OSSD Unavailable.) | |

■ No. of scanner heads: When there are 3 scanner heads

| Type | OSSD1/2 | OSSD3/4 |
|---------------|---|-----------------------|
| SZ-V04 Type | 8.95×10^{-9} | 8.95×10^{-9} |
| SZ-V32 Type | 8.98×10^{-9} | |
| SZ-V32N Type | 8.98×10^{-9} | |
| SZ-V32NC type | 8.98×10^{-9} (OSSD Unavailable.) | |

EtherNet/IP™ Specifications*1

| | |
|--|---|
| Compatible functions | Cyclic communication Compatible with UCMM and Class 3 messaging (Explicit messaging) |
| Number of connections | 16 |
| RPI (Transmission cycle) | 5 to 10,000ms (0.5ms unit)*2 |
| Tolerable communication bandwidth for cyclic communication | 3,000pps |
| Conformance Test | Conform to CT12*3 |

*1 The SZ-V32NC type supports DLR, QoS and ACD.

*2 When using CIP Safety™: 9 to 999ms (9ms unit)

*3 The SZ-V32NC type conforms to CT17-ES.

PROFINET/PROFIsafe Specifications

| | | |
|-------------------------------------|--------------------------|---|
| Approved network | | PROFINET IO communication |
| Basic specifications | Compatible functions | Cyclic communication (Data I/O communication) |
| | | Acyclic communication (Record data communication) |
| | Conformance class | Conforms to conformance class B. |
| | GSDML version | Version 2.32 |
| | Conformance test version | Conforms to Version 2.33 |
| | MRP | Approved as client |
| | Approved Protocol | LLDP, SNMP, MRP, DCP |
| Net load | Class 3 | |
| Cyclic communication Specifications | Update time | 1 to 512 ms |
| PROFIsafe version | | V2 |

The SZ-V32N type can support PROFIsafe version 2.4 or 2.6.1.

■ Input data (from SZ-V to Safety PLC)

| Byte offset | Item | Bit | Description | Value |
|-------------|---|-----|---|--|
| 0 | Zone Detection State /SZ-V Status | 0 | Protection Zone A state | 0: OFF (e.g. A person or object is detected) |
| | | 1 | Protection Zone B state | 1: ON |
| | | 2 | Warning Zone A state ^{*1} | 0: OFF (e.g. A person or object is detected) |
| | | 3 | Warning Zone B state ^{*1} | 1: ON |
| | | 4 | Interlock-Reset-Ready A ^{*1} | 0: Interlock-reset not possible |
| | | 5 | Interlock-Reset-Ready B ^{*1} | 1: Interlock-Reset-Ready |
| | | 6 | Normal Operation State ^{*1} | 0: Start-up, Error state, and other states ^{*2} which is not Normal Operation |
| | | 7 | Error State ^{*1} | 1: Normal operation |
| 1 | SZ-V Status | 0 | Bank Number ^{*1} | 0 to 15 |
| | | 1 | | |
| | | 2 | | |
| | | 3 | | |
| | | 4 | Bank Number valid ^{*1} | 0: Bank number selection is not valid, or not using multiple banks |
| | | 5 | Laser off state ^{*1} | 1: Selected bank number is valid |
| | | 6 | Reserved | 0: Normal operation |
| | | 7 | Reserved | 1: Laser OFF |
| 2 | Window Pollution information / Head1 State | 0 | Head1 Window pollution State ^{*1} | 0: Normal operation |
| | | 1 | Head2 Window pollution State ^{*1} | |
| | | 2 | Head3 Window pollution State ^{*1} | |
| | | 3 | Reserved | |
| | | 4 | Head1 Protection Zone A State | 0: Detecting or detection not possible/scanner head not connected |
| | | 5 | Head1 Protection Zone B State | |
| | | 6 | Head1 Warning Zone A State ^{*1} | |
| | | 7 | Head1 Warning Zone B State ^{*1} | |
| 3 | Head2 State / Head3 State | 0 | Head2 Protection Zone A State | 0: Detecting or detection not possible/scanner head not connected |
| | | 1 | Head2 Protection Zone B State | |
| | | 2 | Head2 Warning Zone A State ^{*1} | |
| | | 3 | Head2 Warning Zone B State ^{*1} | |
| | | 4 | Head3 Protection Zone A State | 0: Detecting or detection not possible/scanner head not connected |
| | | 5 | Head3 Protection Zone B State | |
| | | 6 | Head3 Warning Zone A State ^{*1} | |
| | | 7 | Head3 Warning Zone B State ^{*1} | |
| 4 | Protection Zone A state for each Bank ^{*3} | 0 | Protection Zone A State for Bank0 | 0: OFF (e.g. A person or object is detected) |
| | | ... | ... | |
| | | 15 | Protection Zone A State for Bank15 | |
| 6 | Protection Zone B state for each Bank ^{*3,4} | 0 | Protection Zone B State for Bank0 | 0: OFF (e.g. A person or object is detected) |
| | | ... | ... | |
| | | 15 | Protection Zone B State for Bank15 | |
| 8 | Warning Zone A State for each Bank ^{*3,4} | 0 | Warning Zone A State for Bank0 ^{*1} | 0: OFF (e.g. A person or object is detected) |
| | | ... | ... | |
| | | 15 | Warning Zone A State for Bank15 ^{*1} | |
| 10 | Warning Zone B State for each Bank ^{*3,4} | 0 | Warning Zone B State for Bank0 ^{*1} | 0: OFF (e.g. A person or object is detected) |
| | | ... | ... | |
| | | 15 | Warning Zone B State for Bank15 ^{*1} | |

*1 This data cannot be used as a safety output for the safety-related part of a machine control system.

*2 For example, transferring settings, during window calibration. For details, see 5-1 OSSD/ "Protection Zone State" Data" (Page 44).

*3 These states may be easily affected by mutual interference or other environmental factors, compared to states in Zone Detection Status (Byte offset 0).

*4 The values will always remain 0 for the bank which corresponds to the number selected in "Bank Number" in the SZ-V status (Byte offset 1) bit 0-3.

■ Output data (from Safety PLC to SZ-V)

| Byte offset | Item | Bit | Description | Value |
|-------------|-------------|-----|--|---|
| 0 | Output | 0 | Reset A | 0: OFF |
| | | 1 | Reset B | 1: ON |
| | | 2 | Reserved | |
| | | 3 | | |
| | | 4 | | |
| | | 5 | Laser OFF ^{*1} | 0: During normal operation 1: Laser off state |
| | | 6 | Reserved | |
| 1 | Bank number | 7 | Return to Normal Operation ^{*1} | 0: Unaffected 1: Return to Normal Operation via Rising Edge |
| | | 0 | Bank Number | 0 to 15 |
| | | 1 | | |
| | | 2 | | |
| | | 3 | | |
| | | 4 | Bank Number (reverse) | For each bit, specify opposite value of bit 0-3 (e.g. If bit0 is 1, bit4 is 0) |
| | | 5 | | |
| | | 6 | | |
| 2 | Reserved | 7 | | |
| ... | | ... | Reserved | |
| 10 | | 15 | | |

^{*1} This data cannot be used for the safety-related part of a machine control system.

CIP Safety™ communication data

■ Input data (from SZ-V to Safety PLC)

| Byte offset | Details | bit | Description | Value |
|-------------|--|-----|---|---|
| 0 | Zone Detection Status / SZ-V Status | 0 | Protection zone A state | 0: OFF (e.g. A person or object is detected) |
| | | 1 | Protection zone B state | 1: ON |
| | | 2 | Warning zone A state ^{*1} | 0: OFF (e.g. A person or object is detected) |
| | | 3 | Warning zone B state ^{*1} | 1: ON |
| | | 4 | Interlock-Reset-Ready (Protection zone A) ^{*1} | 0: Interlock-reset not possible |
| | | 5 | Interlock-Reset-Ready (Protection zone B) ^{*1} | 1: Interlock-reset-ready |
| | | 6 | Normal operation state ^{*1} | 0: Start-up, Error state, and other states ^{*2} which is not Normal Operation 1: Normal Operation |
| 1 | SZ-V Status | 7 | Error state ^{*1} | 0: No error 1: Error |
| | | 0 | Bank number selected ^{*1} | 0 to 15 |
| | | 1 | | |
| | | 2 | | |
| | | 3 | | |
| | | 4 | Bank number valid ^{*1} | 0: Bank number selection is not valid, or not using multiple banks 1: Selected bank number is valid |
| | | 5 | Laser off input status ^{*1} | 0: Normal Operation 1: Laser OFF |
| 2 | Window Pollution information / Head1 state | 6 | Reserved | |
| | | 7 | Reserved | |
| | | 0 | Head1 Window Pollution ^{*1} | 0: Normal Operation |
| | | 1 | Head2 Window Pollution ^{*1} | 1: Window error or alert |
| | | 2 | Head3 Window Pollution ^{*1} | |
| | | 3 | Reserved | |
| | | 4 | Head1 Protection Zone A State | 0: Detecting or detection not possible/scanner head not connected 1: Not detecting |
| 3 | Head2 state / Head3 state | 5 | Head1 Protection Zone B State | |
| | | 6 | Head1 Warning Zone A State ^{*1} | |
| | | 7 | Head1 Warning Zone B State ^{*1} | |
| | | 0 | Head2 Protection Zone A State | 0: Detecting or detection not possible/scanner head not connected 1: Not detecting |
| | | 1 | Head2 Protection Zone B State | |
| | | 2 | Head2 Warning Zone A State ^{*1} | |
| | | 3 | Head2 Warning Zone B State ^{*1} | |
| 4 | Protection Zone A State for each Bank ^{*3 *4} | 4 | Head3 Protection Zone A State | 0: Detecting or detection not possible/scanner head not connected 1: Not detecting |
| | | 5 | Head3 Protection Zone B State | |
| | | 6 | Head3 Warning Zone A State ^{*1} | |
| | | 7 | Head3 Warning Zone B State ^{*1} | |
| | | 0 | Protection Zone A State for Bank0 | 0: OFF (e.g. A person or object is detected) 1: ON |
| | | ... | ... | |
| | | 15 | Protection Zone A State for Bank15 | |
| 6 | Protection Zone B State for each Bank ^{*3 *4} | 0 | Protection Zone B State for Bank0 | 0: OFF (e.g. A person or object is detected) 1: ON |
| | | ... | ... | |
| | | 15 | Protection Zone B State for Bank15 | |
| 8 | Warning Zone A State for each Bank ^{*3 *4} | 0 | Warning Zone A State for Bank0 ^{*1} | 0: OFF (e.g. A person or object is detected) 1: ON |
| | | ... | ... | |
| | | 15 | Warning Zone A State for Bank15 ^{*1} | |
| 10 | Warning Zone B State for each Bank ^{*3 *4} | 0 | Warning Zone B State for Bank0 ^{*1} | 0: OFF (e.g. A person or object is detected) 1: ON |
| | | ... | ... | |
| | | 15 | Warning Zone B State for Bank15 ^{*1} | |

^{*1} This data cannot be used as a safety output for the safety-related part of a machine control system.

^{*2} For example, transferring settings, during window calibration. For details, see "SZ-V Series User's Manual".

^{*3} These states may be easily affected by mutual interference or other environmental factors, compared to states in Zone Detection Status (Byte offset 0).

^{*4} The values will always remain 0 for the bank which corresponds to the number selected in "Bank Number" in the SZ-V status (Byte offset 1) bit 0-3.

■ Output data (from Safety PLC to SZ-V)

| Byte offset | Details | bit | Description | Value |
|-------------|----------------------|-----|-------------------------------|---|
| 0 | Output / SZ-V Status | 0 | Reset A | 0: OFF |
| | | 1 | Reset B | 1: ON |
| | | 2 | Reserved | |
| | | 3 | Reserved | |
| | | 4 | Reserved | |
| | | 5 | Laser OFF *1 | 0: Normal Operation 1: Laser OFF |
| | | 6 | Reserved | |
| | | 7 | Return to Normal Operation *1 | 0: No effect 1: Return to Normal Operation on rising edge |
| 1 | Bank Number | 0 | Bank number | 0 to 15 |
| | | 1 | | |
| | | 2 | | |
| | | 3 | | |
| | | 4 | Bank number (reverse) | For each bit, specify opposite value of bit 0 to 3 (e.g. If bit0 is 1, bit4 is 0) |
| | | 5 | | |
| | | 6 | | |
| | | 7 | | |
| 2 | Reserved | 0 | Reserved | |
| | | ... | ... | |
| | | 7 | Reserved | |
| ... | | ... | ... | |
| 11 | | 0 | Reserved | |
| | | ... | ... | |
| | | 7 | Reserved | |

*1 This data cannot be used for the safety-related part of a machine control system.


CIP Safety™ Requirements

- The safety network configuration tool (SNCT) cannot be used.
- The replacement of SZ-V requires that the SZ-V is configured properly and operation of the SZ-V shall be verified.
- If you choose to configure safety connections with a safety configuration ID (SCID) =0, you are responsible for ensuring that originators and targets have the correct configurations.
- You should assign SNN numbers for each safety network or safety sub-net that are unique system-wide.
- The user testing (inspection) is the means by which all downloads(transferring settings) to the SZ-V are validated.
- The signature should only be considered "verified" (and configuration locked) after user testing (inspection).
- Configuring an originator with connection data and/or target (SZ-V) configuration data must be downloaded (transferred) to the target so it can be tested and verified. Only then can SCIDs from the target be confirmed.
- You should clear any pre-existing configuration from the SZ-V before installing it onto a safety network.
- You should commission all safety devices with MacId (and Baud Rate if necessary) prior to installing it onto a safety network.
- You should carefully consider whether your system will meet the required SIL levels, when there is implications of mixing different SIL level devices on the network.
- You should test safety connection configurations after they are applied in an originator to confirm the target connection is operating as intended.
- LEDs are NOT reliable indicators and cannot be guaranteed to provide accurate information. They should ONLY be used for general diagnostics during commissioning or troubleshooting. Do not attempt to use LEDs as operational indicators.
- The originators that have an "automatic" SNN setting feature should only use that feature when the safety system is not being relied upon.
- You should visually verify that all configuration data was downloaded (transferred) correctly.


10-3 Dimensions

SZ-V


SZ-V04 type / SZ-V32 type

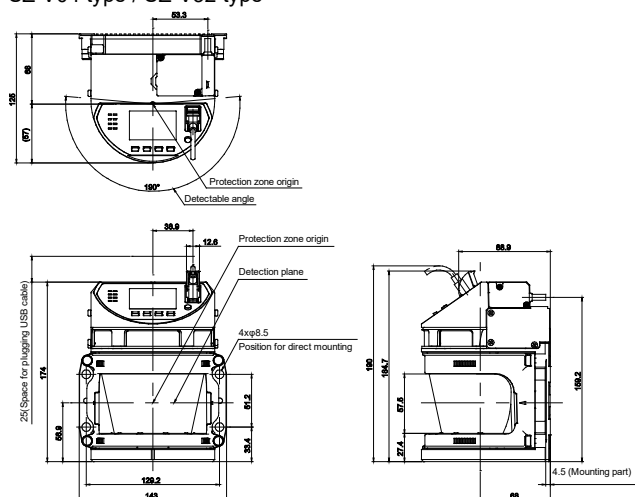


With Protection cover model: SZ-VB21

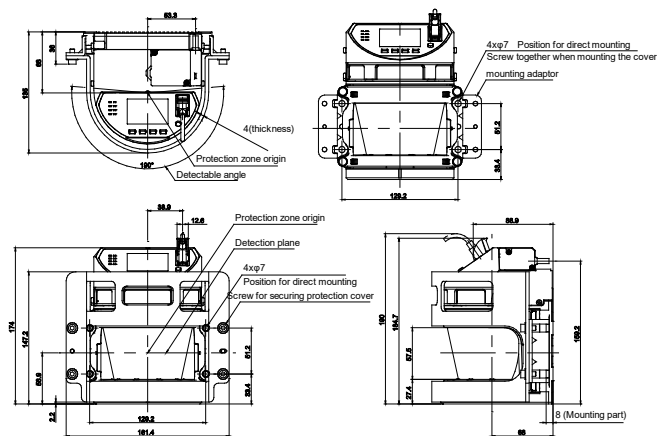


SZ-V32N type/SZ-V32NC type

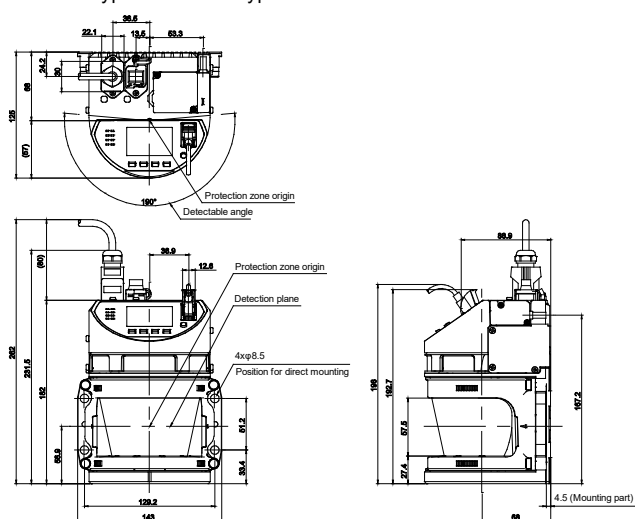


With Protection cover model: SZ-VB21

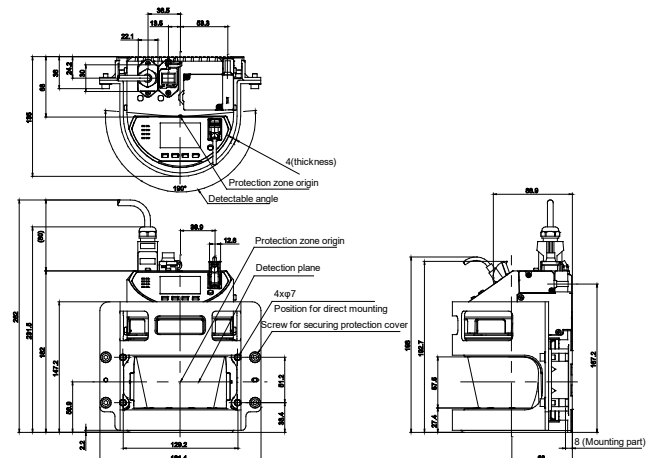

Head only : SZ-VH1(X)

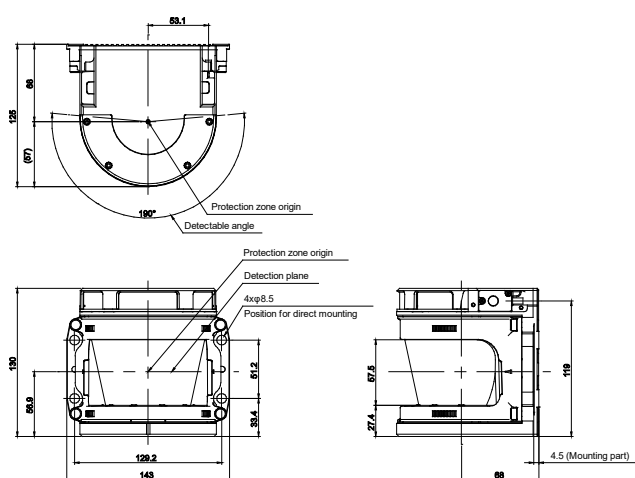

With Protection cover model: SZ-VB21

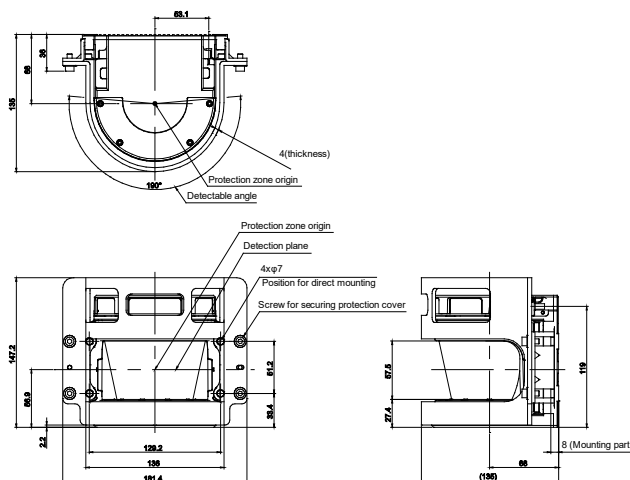


10

Specifications


Mounting bracket

For integrated installation and separate scanner head installation


■ Angle adjustable bracket (horizontal) model: SZ-VB01

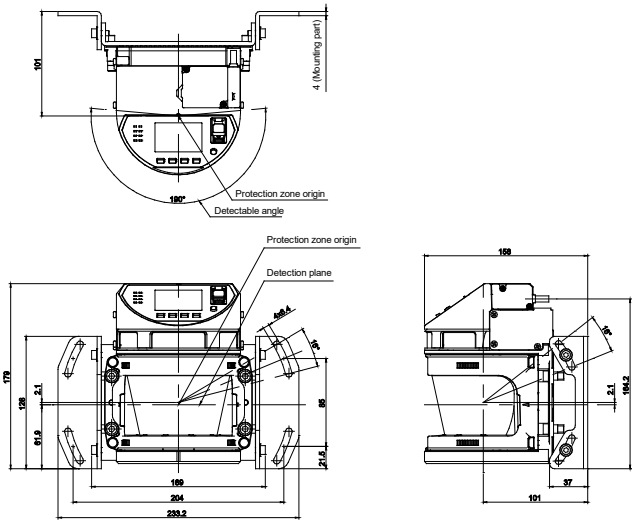

Head only

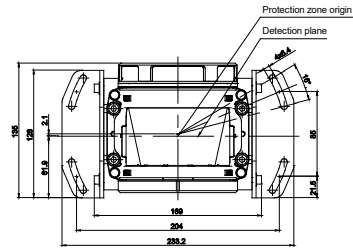


32N/32NC type

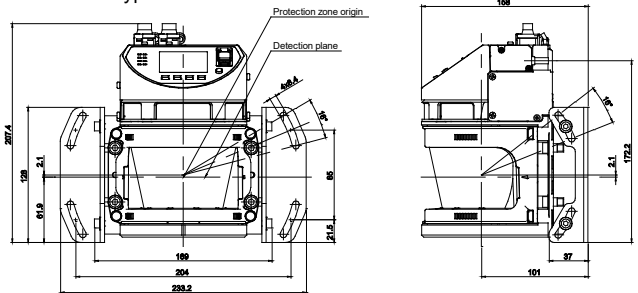


■ Angle adjustable bracket (horizontal) model: SZ-VB01 (with Protection cover model: SZ-VB21)


04/32 type

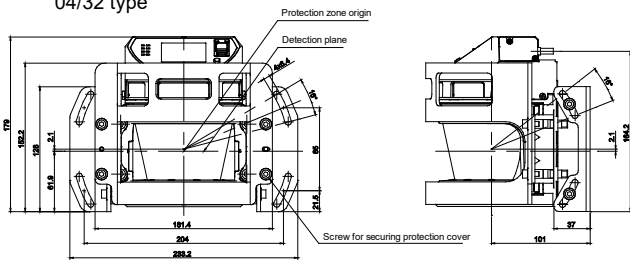


Head only

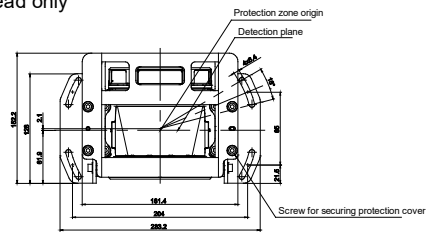


32N/32NC type

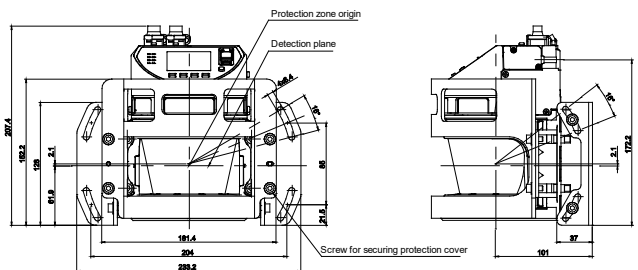


■ Angle adjustable bracket (vertical) model: SZ-VB02

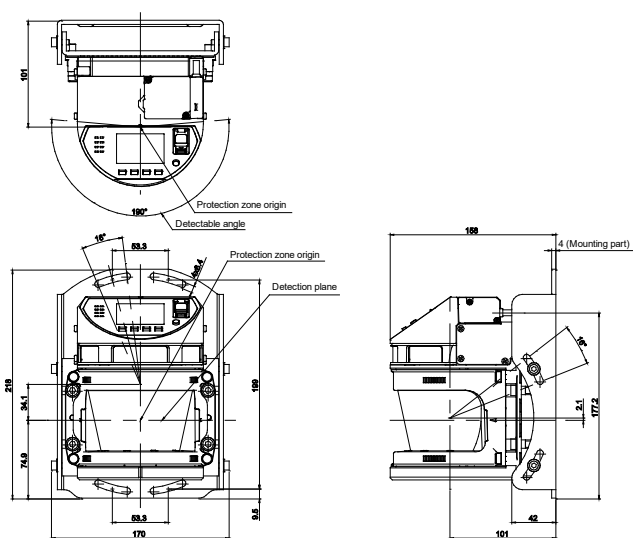

Head only

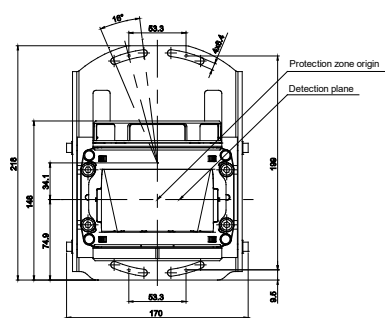


32N/32NC type

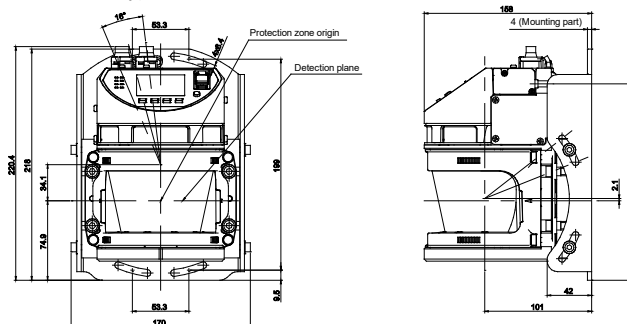


■ Angle adjustable bracket (vertical) model: SZ-VB02 (with Protection cover model: SZ-VB21)


04/32 type

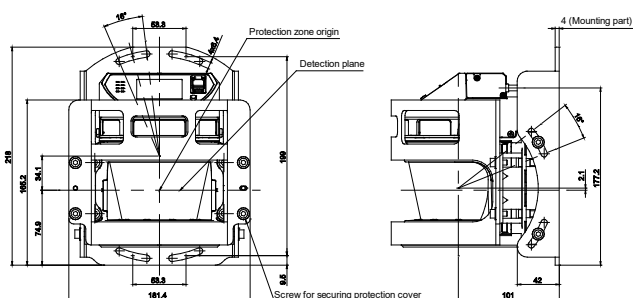



Head only

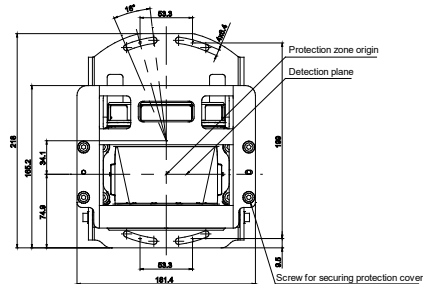


32N/32NC type

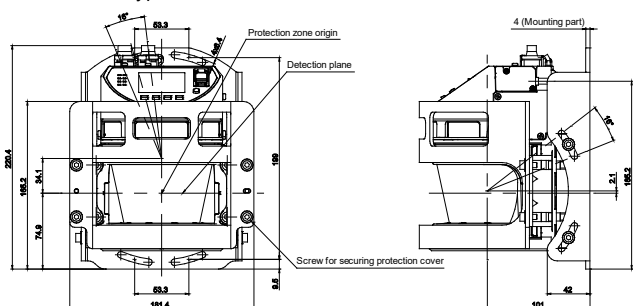



■ Floor bracket model: SZ-VB03

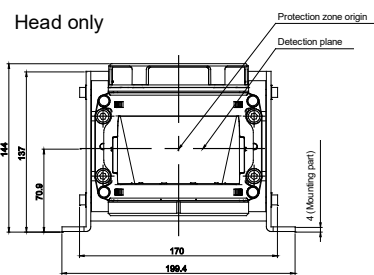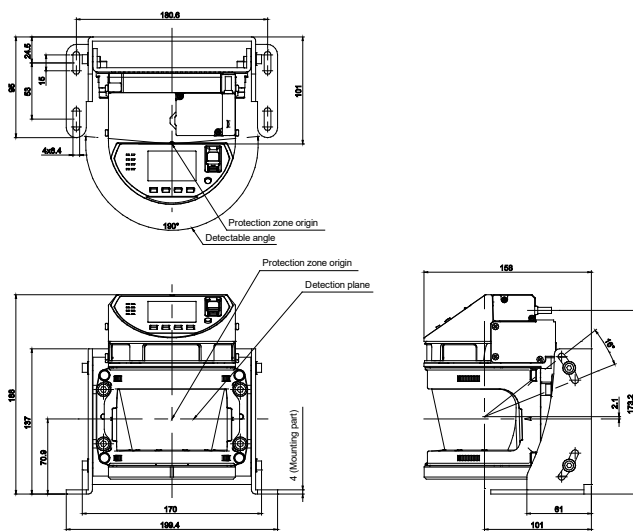


32N/32NC type

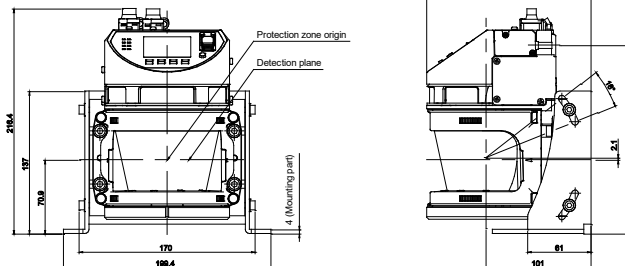

■ Floor bracket model: SZ-VB03 (with Protection cover model: SZ-VB21)
04/32 type

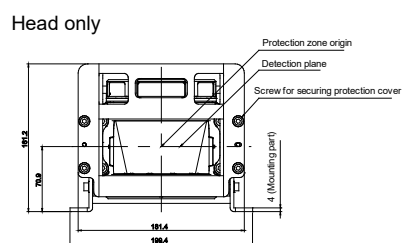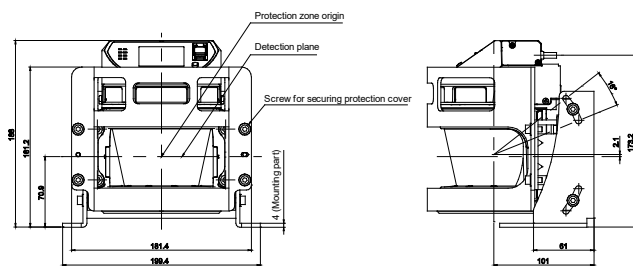


32N/32NC type

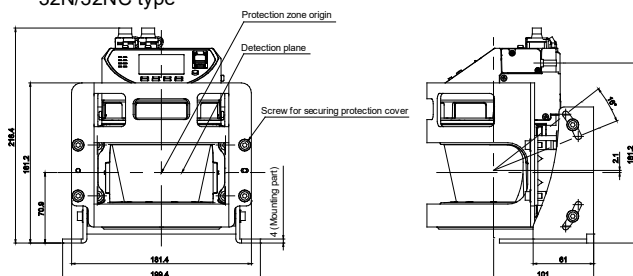


Separate installing of the Display unit

■ Display unit standard bracket model: SZ-VB11


Horizontal installation

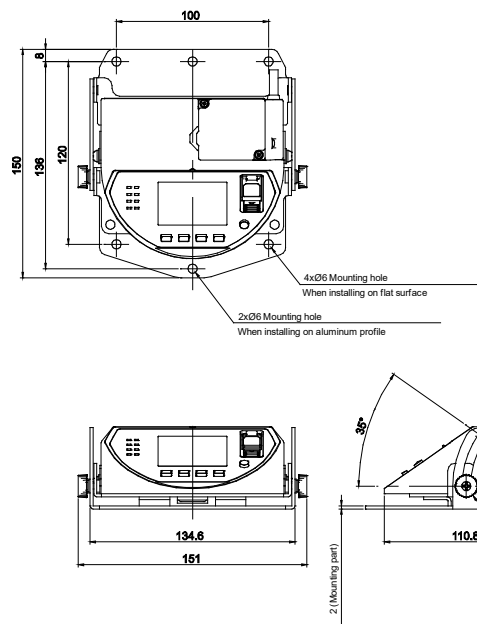


Vertical installation

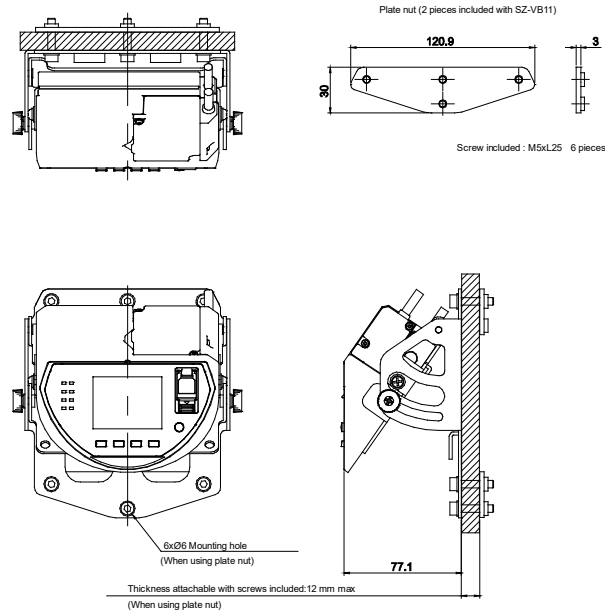


32N/32NC type

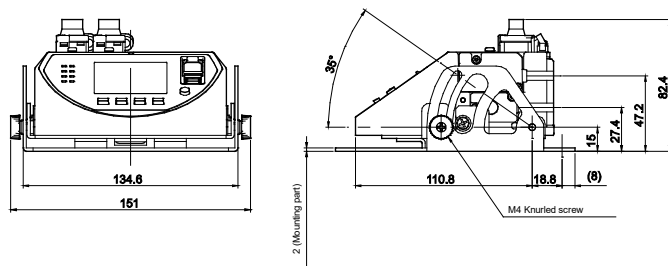


32N/32NC type

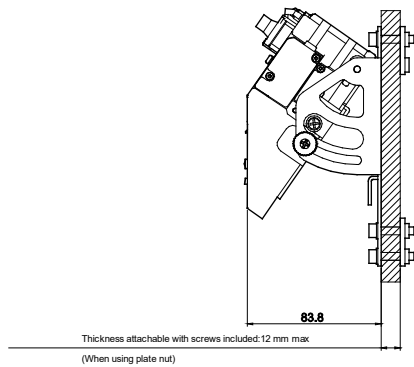

■ Display unit DIN rail mounting bracket (flat) model : SZ-VB12

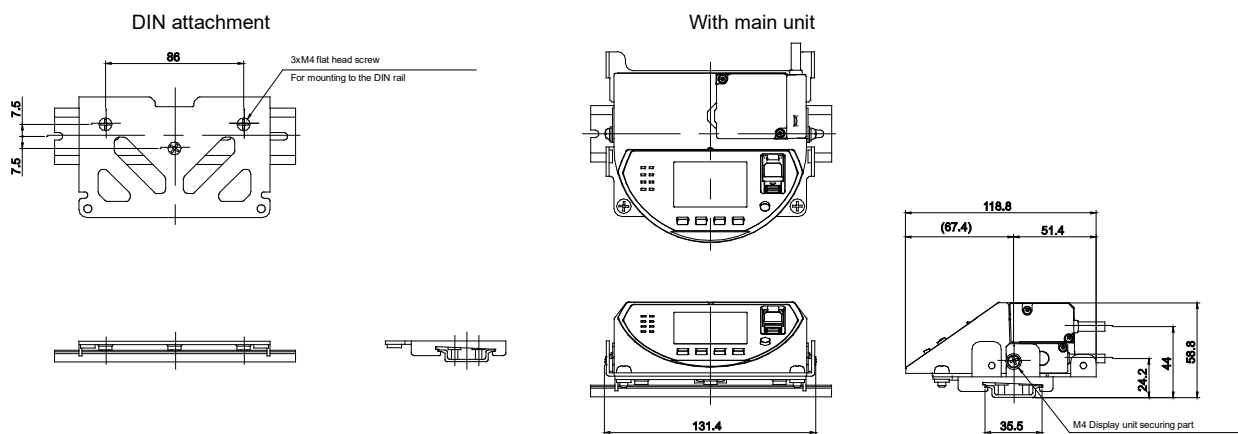


32N/32NC type

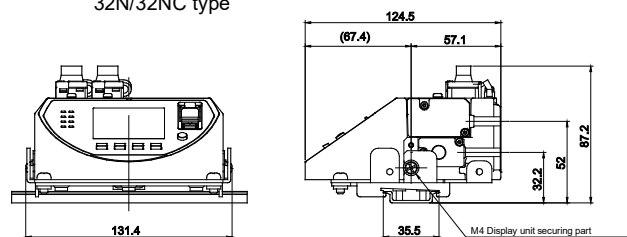


■ Display unit DIN rail mounting bracket (slim) model : SZ-VB13

DIN attachment

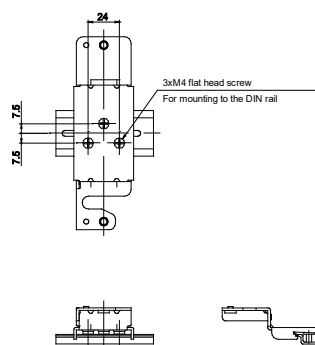

With main unit

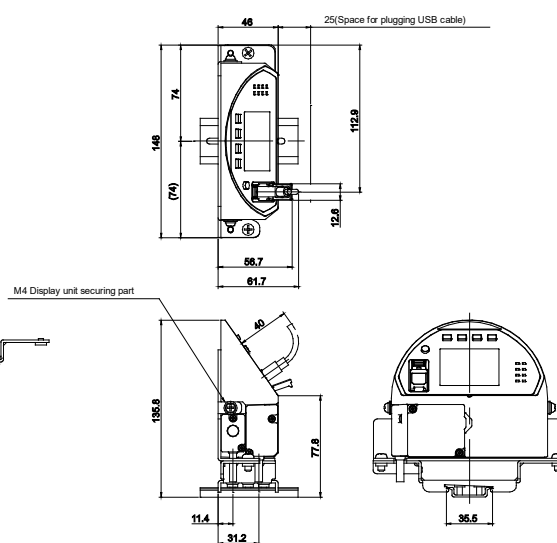

* The SZ-VB13 cannot be used with communication type display unit (SZ-VU32N).

11. Troubleshooting

Check the state of the SZ-V through messages shown on the Display unit display. Attempt to resolve the problem related to the message shown on the display if the SZ-V does not operate as intended.

11-1 Error State

The SZ-V runs a self-diagnosis after starting and checks for any errors. In addition to self-diagnosis, the SZ-V also periodically runs a self-diagnosis test during normal operation.

If an error is found through this self-diagnosis test, the SZ-V turns the OSSD OFF, and displays and outputs an error. Until the procedure is executed to recover from the error state, the OSSD is held in the OFF state.

Display and output of the error information

| Item | Description |
|--|---|
| Display | Indicates the factor causing the failure. "Display during an error state" (page 142) |
| Output | If the functions below are assigned to an AUX output and an error occurs, the output enters an OFF state. <ul style="list-style-type: none"> Error output Error or alert output Encoder error output(Only during an encoder error) <p>The number of pulses in accordance with the error type can be output by using the state information output. "State information output" (page 60)</p> |
| Configuration software SZ-V Configurator | Check error information in the monitor section. "Monitoring Operations" (page 94) |


Recovering from an error state

The method to recover from an error differs according to the error details. For details, see "Information on the Display" (page 140).


- The SZ-V automatically returns to normal operation if the cause of the error is removed.
- The SZ-V returns to normal operation if the cause of the error is removed and the SZ-V is reset.
- When using PROFIsafe with the SZ-V32N, control the Return to Normal Operation bit instead of the reset input.
- The SZ-V returns to normal operation if the cause of the error is removed, and power is turned off and back on again.

<Timing chart for reset operation> In the case where the SZ-V returns to normal operation with the reset operation.

● When start mode setting is automatic.

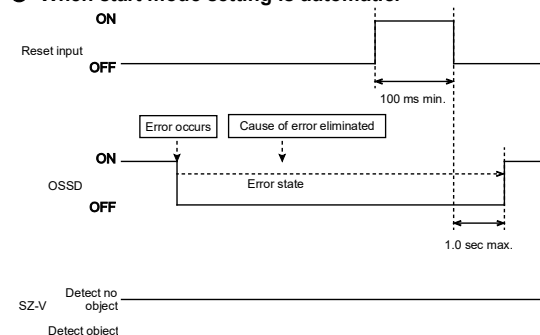

● When start mode setting is manual.

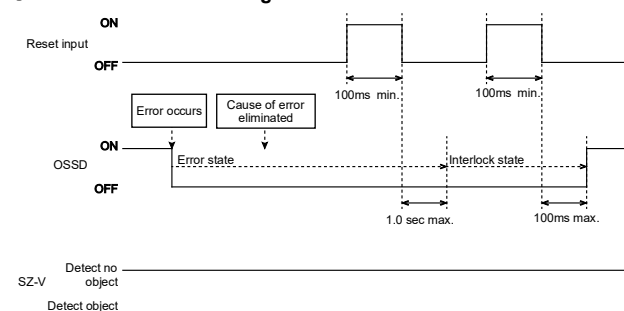

Reference If OSSD 3/4 are being used with the SZ-V04 type, the following procedure is applied. Two reset operations (reset input (1/2) (yellow) and reset input (3/4) (yellow/black)) are required to return the SZ-V to normal operation with the reset operation. You cannot recover from an error using the laser off input.

11-2 Alert State

The SZ-V goes to the alert state if it detects either a failure having impact on the operation or an external interference. In this situation, alert information is indicated on the information display and is output. (OSSD continues normal operation)

Indication and output of the alert information

| Item | Description |
|--|--|
| Display | Indicates the factor causing the alert. "Display during alert state" (page 141) |
| Output | If the functions below are assigned to an AUX output and an alert occurs, the output enters the OFF state. <ul style="list-style-type: none"> Alert output Error or alert output <p>The number of pulses in accordance with the alert type can be output by using the state information output. "State information output" (page 60)</p> |
| Configuration software SZ-V Configurator | Check alert information in the monitor section. "Monitoring Operations" (page 94) |

Recovering from the alert state

The SZ-V automatically returns to normal operation if the cause of the alert is removed.

11-3 Information on the Display

The following table shows the messages on the Display unit's display, the state of the SZ-V, and an explanation. It also shows the number of pulses for the state information output. If an error occurs on the SZ-V, see the table below.

Display during normal operation

| Display state | Background Color | Type | The number of pulses for state information output | Details | Countermeasures |
|---|------------------|---------|---|--|--|
| Normal Operation | Green | Normal | 1 | The SZ-V is under normal operation. The OSSD is ON. | None. |
| | | Normal | 6 to 8 20 to 26 | The SZ-V is under normal operation. The OSSD is ON. The bank switching function is used and Bank 1 to 31 is selected. | |
| | Red | Normal | 3 | The SZ-V is under normal operation. Scanner head 1 protection zone is in detection state | None. If the OSSD goes to the OFF-state when nothing is present in the protection zone, see "Troubleshooting the OSSD Operation" (page 144). |
| | | Normal | 4 | The SZ-V is under normal operation. Scanner head 2 protection zone is in detection state | |
| | | Normal | 5 | The SZ-V is under normal operation. Scanner head 3 protection zone is in detection state | |
| Normal Operation ON Delay | Red | Special | 2 | The on-delay function is operating, OSSD is OFF. | "ON-delay" (page 47) |
| Normal Operation Laser Shutdown | Red | Special | 3 | The laser shutdown bank is selected. | Switch to a bank other than the laser shutdown bank. "Operation Check Function" (page 57) |
| | | | | Laser off input is ON. | Turn off the laser off input. "Operation Check Function" (page 57) |
| Interlock | Red | Special | 3 | The interlock function is operating, OSSD is OFF. The SZ-V has detected a person or an object in the protection zone. | Terminate the interlock function by returning the SZ-V to a state in which it does not detect an object in the protection zone, and then perform reset operation using the reset input. "Terminating the interlock state" (page 47) |
| Interlock Reset Ready | Red | Special | 2 | The interlock function is operating, OSSD is OFF. Perform the reset operation to restart the SZ-V because the conditions for disabling the interlock are met. | Terminate the interlock function by performing the reset operation using the reset input. "Terminating the interlock state" (page 47) |
| Interlock Reset Ready 1/2 | Red | Special | 2 | The interlock function is operating, OSSD 1/2 is OFF. Engage reset input 1/2 to restart the SZ-V because the conditions for terminating the interlock are met. | |
| Interlock Reset Ready 3/4 | Red | Special | 2 | The interlock function is operating, OSSD 3/4 is OFF. Engage reset input 3/4 to restart the SZ-V because the conditions for terminating the interlock are met. | |
| Normal Operation Ref. Point Undetected | Red | Special | 3 to 5 | One of the scanner heads does not detect a reference point(s), OSSD is OFF. | Ensure that the scanner head detects the reference points. "Reference Points Monitoring Function" (page 57) |
| Muting | Green | Special | 6 | Muting state. The safety function has been temporarily disabled and OSSD is ON. | "Muting function" (page 55) |
| Override | Green | Special | 7 | Override state. The safety function has been temporarily disabled and OSSD is ON. | "Override function" (page 56) |
| Waiting for Bank Input | Red | Special | 9 | Waiting for bank input state. A bank has not been selected, OSSD is OFF. | Check that the bank input is correct. "Bank Switching Function" (page 49) |
| Normal Operation History Saving | Green or red | Special | - | The detection history is being saved. The next detection history will not be saved until saving of the detection history is complete. | The SZ-V returns to the Normal Operation screen once the detection history has been saved. Videos take about 30 seconds to save. |
| Normal Operation History Saving Suspended | Green or red | Special | - | In preparation of saving the detection history. The next detection history will not be saved until preparation is done. | The SZ-V returns to the Normal Operation screen once the preparation is done. |
| PC Connection | Black | Normal | - | The SZ-V is under normal operation. Communicating with SZ Configurator. | If the connection with SZ Configurator is terminated, the SZ-V returns to the Normal Operation screen. |
| | | Special | - | Operations, such as transferring settings from the SZ Configurator are being performed. OSSD is fixed to OFF. | Once the operations from the SZ Configurator are complete and the connection is terminated, the SZ-V returns to the Normal Operation screen. |

- Reference**
- If the type is "Special", the details are shown on the display. If the SZ-V display is "Monitor view" or "Camera view", the special state is displayed in a frame. "How to Read the Display" (page 114)
 - If the computer and the SZ-V are connected by Ethernet and disconnected without logging out, "PC Connection" is shown on the display for about 90 seconds.

Display during alert state

This table shows the message displayed when an alert occurs.

| Display state | Background Color | Type | The number of pulses for state information output | Code | Details | Countermeasures |
|-----------------------------|------------------|--------|---|------|---|---|
| AUX Over Current | Green or red | Normal | 14 | 0003 | Alert: AUX Overcurrent The SZ-V detects an overcurrent on the AUX output. The AUX output enters the OFF-state after the SZ-V detects this alert. (The check pulse is intermittently output.) The OSSD continues normal operation. | Check the wiring between the AUX outputs and the loads, and whether the loads are broken or not. Also check the current on AUX outputs. "Specifications" (page 127) |
| Conflict IP Address | | Normal | 14 | 0300 | Alert: IP address duplication The SZ-V IP address is duplicated by another device. | Reconfigure the IP address. "Selecting an Ethernet connection device" (page 68) |
| Window Pollution (Head1) | | Normal | 11 | 0400 | Window alert The window of scanner head 1 may be polluted or damaged. | The OSSD may go to the OFF-state if the situation is left as it is. Clean the window in accordance with "Cleaning the Window" (page 148). |
| Window Pollution (Head 2) | | Normal | 11 | 0800 | Window alert The window of scanner head 2 may be polluted or damaged. | |
| Window Pollution (Head 3) | | Normal | 11 | 0C00 | Window alert The window of scanner head 3 may be polluted or damaged. | |
| Light Interference Head1: | | Normal | 12 | 0401 | Light interference alert Scanner head 1 is experiencing light interference, such as from an incandescent lamp, fluorescent lamp, stroboscopic light, or photoelectric sensor. There may also be mutual interference between SZ-Vs. | While the SZ-V is operating normally, the OSSD may go to the OFF-state unintentionally. Take countermeasures in accordance with "Light interference" (page 18) and "Mutual interference" (page 18). |
| Light Interference (Head 2) | | Normal | 12 | 0801 | Light interference alert Scanner head 2 experiencing light interference, such as from an incandescent lamp, fluorescent lamp, stroboscopic light, or photoelectric sensor. There may also be mutual interference between SZ-Vs. | |
| Light Interference (Head 3) | | Normal | 12 | 0C01 | Light interference alert Scanner head 3 experiencing light interference, such as from an incandescent lamp, fluorescent lamp, stroboscopic light, or photoelectric sensor. There may also be mutual interference between SZ-Vs. | |
| High Reflection (Head 1) | Red | Normal | 13 | 0402 | Alert: Highly-reflective background There is a highly-reflective background behind the specified protection zone of scanner head 1, which may impact the detection capability. | Highly reflective backgrounds must not be positioned within 1.5 m from the boundary of the protection zone. (the background itself must be removed or the reflectance must be reduced). Unless the above-mentioned countermeasures are taken, 200 mm must be added as supplementary necessary distance to the protection zone during the calculation of the safety distance. "Highly reflective backgrounds" (page 19) |
| High Reflection (Head 2) | | Normal | 13 | 0802 | Alert: Highly-reflective background There is a highly-reflective background behind the specified protection zone of scanner head 2, which may impact the detection capability. | |
| High Reflection (Head 3) | | Normal | 13 | 0C02 | Alert: Highly-reflective background There is a highly-reflective background behind the specified protection zone of scanner head 3, which may impact the detection capability. | |
| Muting lamp open | Green or red | Normal | 14 | 0001 | Muting Lamp Alert (Disconnection) There is a problem where the muting lamp is connected to the muting lamp output. (The muting lamp is disconnected or it is broken.) | Please check the following: • If the muting lamp output is correctly connected to the muting lamp • If the muting lamp is broken • If the rating/specification of the muting lamp is within the range of the muting lamp output "Muting lamp output" (page 56) |
| Muting lamp Over current | | Normal | 14 | 0002 | Muting Lamp Alert (Overcurrent) The muting lamp connected to the muting lamp output has an overcurrent exceeding the rated current. | Please check the following: • If the muting lamp output is correctly connected to the muting lamp • If the muting lamp is broken • If the rating/specification of the muting lamp is within the range of the muting lamp output? "Muting lamp output" (page 56) |
| Camera (Head 1) | | Normal | 14 | 0600 | Camera error An error has occurred with the camera area of scanner head 1. | Turn the power of the SZ-V off and then on again. If turning the power back on does not resolve the error, replace the scanner head. |
| Camera (Head 2) | | Normal | 14 | 0A00 | Camera error An error has occurred with the camera area of scanner head 2. | |
| Camera (Head 3) | | Normal | 14 | 0E00 | Camera error An error has occurred with the camera area of scanner head 3. | |
| History Store | | Normal | 14 | 0200 | Detection History Error The detection history cannot be retrieved correctly. | Transfer the settings again. If that does not resolve the error, replace the display unit. |
| History Store (Head1) | | Normal | 14 | 0601 | Detection history error The detection history for scanner head 1 cannot be retrieved correctly. | Transfer the settings again. If that does not resolve the error, replace the scanner head. |
| History Store (Head 2) | | Normal | 14 | 0A01 | Detection history error The detection history for scanner head 2 cannot be retrieved correctly. | |
| History Store (Head 3) | | Normal | 14 | 0E01 | Detection history error The detection history for scanner head 3 cannot be retrieved correctly. | |

| | | | | | | |
|-------------------------------------|--------------|--------|----|------|--|--|
| EEPROM Access Error | | Normal | 14 | 0201 | EEPROM access error Cannot read EEPROM data correctly. | Transfer the settings again. If that does not resolve the error, replace the display unit. |
| CIP Safety Param. (SNN, IP Address) | Green or red | Normal | 14 | 0004 | Safety Network Number (SNN) or IP Address mismatched. | Check the originator (controller) settings. Transfer the CIP Safety™ related settings again. When the code is "0005", "Reset Ownership" is needed. If that does not resolve the error, replace the display unit. |
| CIP Safety Ownership | | | | 0005 | Output ownership is established with another controller. | |
| CIP Safety Param. (SCCRC, SCTS) | | | | 0006 | Configuration signature ID (SCCRC) or Configuration Signature Date/Time (SCTS) mismatched. | |
| CIP Safety Communication | | | | 0007 | CIP Safety™ communication error (Timeout). | |
| PROFIsafe Parameter (F_Source_Add) | Green or red | Normal | 14 | 000A | PROFIsafe parameter error. F_Source_Add is incorrect. | Transfer the PROFIsafe related settings again. If that does not resolve the error, replace the display unit. |
| PROFIsafe Parameter (F_Dest_Add) | | | | 000B | PROFIsafe parameter error. F_Dest_Add is incorrect. | |
| PROFIsafe Failsafe Parameter | | | | 000C | PROFIsafe parameter error. PROFIsafe parameter error was detected. | |
| PROFIsafe Transmission | | | | 000D | PROFIsafe communication error. PROFIsafe Communication failed. | Check the network cable connection and the value of F_WD_Time. |

Display during an error state

The method to recover from an error differs depending on the error type.

- Error 1: The SZ-V automatically returns to normal operation if the cause of the error is removed.
- Error 2: The SZ-V returns to normal operation if the cause of the error is removed and the SZ-V is reset.
- Error 3: The SZ-V returns to normal operation if the cause of the error is removed, and power is turned off and back on again.

| Display state | Background Color | Type | The number of pulses for state information output | Code | Details | Countermeasures |
|--------------------------------------|------------------|---------|---|------|--|--|
| Window Error (Head1) | Red | Error 1 | 15 | 0410 | Window error The window of scanner head 1 may be polluted or scratched. | Clean the window in accordance with "Cleaning the Window" (page 148). If the error continues after cleaning, replace the window in accordance with "Replacing the Window" (page 148). |
| | | Error 3 | | 0421 | Window error The window of scanner head 1 may be broken. | |
| Window Error (Head 2) | | Error 1 | 15 | 0810 | Window error The window of scanner head 2 may be polluted or scratched. | |
| | | Error 3 | | 0821 | Window error The window of scanner head 2 may be broken. | |
| Window Error (Head 3) | | Error 1 | 15 | 0C10 | Window error The window of scanner head 3 may be polluted or scratched. | |
| | | Error 3 | | 0C21 | Window error The window of scanner head 3 may be broken. | |
| MI Error (Head 1) | Red | Error 1 | 16 | 0411 | MI error (man-made interference error) (1) A structure with extremely low reflectance is located close to the SZ-V. (2) The SZ-V does not detect any diffuse reflection from the object to be detected or the structure outside the protection zone. The SZ-V generates an error if it does not detect anything over 60 degrees. | (1) Remove the structure with low reflectance close to the SZ-V. (2) Position a structure outside the protection zone so that the SZ-V detects diffuse reflection from the structure. |
| MI Error (Head 2) | | Error 1 | 16 | 0811 | | |
| MI Error (Head 3) | | Error 1 | 16 | 0C11 | | |
| OSSD 1 Error | Red | Error 2 | 18 | 0010 | OSSD error (1) The OSSD is short-circuited. Alternatively, the wiring is wrong. (2) The OSSD experienced a surge in voltage due to an inductive load. (3) The OSSD is being affected by an EMC environment. (4) The OSSD is broken. | (1) Check the wiring for the OSSD. "Wiring" (page 30) (2) Use a load with a surge absorber function, or apply surge protection to the load. (3) Check the surrounding wiring and EMC environment. (4) Replace the display unit. |
| OSSD 2 Error | | Error 2 | 18 | 0011 | | |
| OSSD 3 Error | | Error 2 | 18 | 0012 | | |
| OSSD 4 Error | | Error 2 | 18 | 0013 | | |
| OSSD 1 Overcurrent Error | Red | Error 2 | 18 | 0014 | OSSD 1 Overcurrent Error Overcurrent occurs on OSSD 1. | Check the wiring between OSSD 1 and the load, and whether the load is broken or not. "Wiring" (page 30) |
| OSSD 2 Overcurrent Error | Red | Error 2 | 18 | 0015 | OSSD 2 Overcurrent Error Overcurrent occurs on OSSD 2. | Check the wiring between OSSD 2 and the load, and whether the load is broken or not. "Wiring" (page 30) |
| OSSD 3 Overcurrent Error | Red | Error 2 | 18 | 0016 | OSSD 3 Overcurrent Error Overcurrent occurs on OSSD 3. | Check the wiring between OSSD 3 and the load, and whether the load is broken or not. "Wiring" (page 30) |
| OSSD 4 Overcurrent Error | Red | Error 2 | 18 | 0017 | OSSD 4 Overcurrent Error Overcurrent occurs on OSSD 4. | Check the wiring between OSSD 4 and the load, and whether the load is broken or not. "Wiring" (page 30) |
| Output Over Current Error (in Total) | Red | Error 2 | 19 | 002A | Output Over Current Error (in total) Total amount of current on each output exceeds the specification. | Check the wiring between each output and the load, and whether the load is broken or not. "Wiring" (page 30) Check if the total amount of current is within the specification. "Specifications" (page 127) |

| | | | | | | |
|--------------------------------------|-----|---------|----|--------------|---|---|
| Muting Lamp Open Error | Red | Error 2 | 10 | 0018 | Muting Lamp Error (Disconnection) There is a problem where the muting lamp is connected to the muting lamp output. (The muting lamp is disconnected or it is broken.) | Please check the following: • If the muting lamp output is correctly connected to the muting lamp • If the muting lamp is broken • If the rating/specification of the muting lamp is within the range of the muting lamp output "Muting lamp output" (page 56) |
| Muting Lamp Over Current Error | Red | Error 2 | 10 | 0019 | Muting Lamp Error (Overcurrent) The muting lamp connected to the muting lamp output has an overcurrent exceeding the rated current. | Please check the following: • If the muting lamp output is correctly connected to the muting lamp • If the muting lamp is broken • If the rating/specification of the muting lamp is within the range of the muting lamp output? "Muting lamp output" (page 56) |
| EDM (OSSD 1/2) Error | Red | Error 2 | 17 | 001A | EDM error (1) EDM input is not connected to the external device correctly. | (1) Check the EDM input wiring. "EDM Function" (Page 48), "Wiring" (page 30) |
| EDM (OSSD 3/4) Error | Red | Error 2 | 17 | 001B | (2) The external device connected to the OSSD is broken. | (2) Check the external device and replace if it is broken. |
| BANK Input Error | Red | Error 2 | 10 | 001C | Bank Input Error (1) The signal combination of bank inputs does not meet the specification. (2) The bank switching was not performed during the specified bank transition time. | (1) Check the wiring of the bank inputs. (2) Confirm that bank switching is performed during the specified bank transition time. |
| BANK Sequence Error | Red | Error 2 | 10 | 001D | Bank Sequence Error The bank switching was not performed according to the specified bank sequence. | Check the bank sequence and the configuration of bank sequence monitoring. "Bank Sequence Monitoring Function" (page 53) |
| Encoder Velocity Error | Red | Error 2 | 10 | 001E | Encoder velocity error The encoder velocity exceeds the set velocity range. | Ensure that the encoder velocity does not exceed the velocity range. |
| Encoder Pulse Frequency Error (Ch.1) | Red | Error 2 | 10 | 001F | Encoder Pulse Frequency Error (Ch.1) The input of Encoder Input 1 exceeds the maximum pulse frequency (100 kHz). | Ensure that the output from the encoder does not exceed the maximum pulse frequency. |
| Encoder Pulse Frequency Error (Ch.2) | Red | Error 2 | 10 | 0020 | Encoder Pulse Frequency Error (Ch.2) The input of Encoder Input 2 exceeds the maximum pulse frequency (100 kHz). | |
| Encoder Ch.1/Ch.2 Error | Red | Error 2 | 10 | 0021 | Encoder Mismatch Error (1) The difference in velocity between the two encoders exceeds the specified tolerance. (2) Two encoders are rotating in opposite direction. (3) The wiring for the encoder input is not correct. | (1) Ensure that the difference in velocity between the two encoders does not exceed the tolerance range. (2) Make two encoders rotate in the same direction. (3) Check the encoder input wiring. "Wiring" (page 30) |
| Encoder Connection Error(Ch.1) | Red | Error 2 | 10 | 0022 | Encoder Input Error (Ch.1) Wiring of encoder input 1 is incorrect. | Check the encoder input wiring. "Wiring" (page 30) |
| Encoder Connection Error(Ch.2) | Red | Error 2 | 10 | 0023 | Encoder Input Error (Ch.2) Wiring of encoder input 2 is incorrect. | |
| Head Communication Error | Red | Error 2 | 19 | 0024 0210 | Communication Error (1) The connection cable is not correctly connected or the wires are damaged. (2) The connected cable is being affected by an EMC environment. (3) The power voltage is temporarily or continuously falling. | (1) Check the cable connection. (2) Check the wiring and the surrounding EMC environment. (3) Replace the power source, increase the power capacity, or prepare a SZ-V-dedicated power source. |
| Incorrect Wiring Error (input2) | Red | Error 2 | 19 | 0028 | Unused Wiring Error (Input 2) Input 2 is set as unused but is not in an open circuit. | If Input 2 is set to unused, make an open circuit on Input 2 with insulation. |
| Incorrect Wiring Error (input6) | Red | Error 2 | 19 | 0029 | Unused Wiring Error (Input 6) Input 6 is set as unused but is not in an open circuit. | If Input 6 is set to unused, make an open circuit on Input 6 with insulation. |
| System Memory Error (Type) | Red | Error 3 | 19 | 0030 | System Memory Error (Type) The display unit type does not match the settings in the system memory. | Check the display unit type. |
| System Memory Error (Head) | Red | Error 3 | 19 | 0031 | System Memory Error (Scanner head) The number of scanner heads does not match the settings in the system memory. | Check the number of scanner heads. |
| System Memory Error (Data) | Red | Error 3 | 19 | 0032 | System Memory Error (Data) (1) The system memory data is not correct or is corrupt. (2) The system memory data cannot be retrieved. | (1) Transfer the data to the system memory again. (2) Check the wiring and the surrounding EMC environment. |
| System Config. Error (Display unit) | Red | Error 3 | 19 | 0033 | System Configuration Error (Display unit) The Display unit is paired to another system memory. | Transfer new settings from the SZ Configurator again, or delete the system configuration information. "Clear system configuration" (page 108) |
| System Config. Error (Head1) | Red | Error 3 | 19 | 0424 | System Configuration Error (Head 1) Scanner head 1 is paired to another system memory. | |
| System Config. Error (Head2) | Red | Error 3 | 19 | 0824 | System Configuration Error (Head 2) Scanner head 2 is paired to another system memory. | |
| System Config. Error (Head3) | Red | Error 3 | 19 | 0C24 | System Configuration Error (Head 3) Scanner head 3 is paired to another system memory. | |

| | | | | | | |
|----------------------------------|-----|---------|----|------------------|---|--|
| Window Calibration Error (Head1) | Red | Error 3 | 19 | 043E | Window Calibration Error (1) Window calibration did not execute correctly. (2) The SZ-V is broken. | (1) Execute window calibration again. "Window calibration" (page 107) (2) Replace the SZ-V. |
| Window Calibration Error (Head2) | | Error 3 | 19 | 083E | | |
| Window Calibration Error (Head3) | | Error 3 | 19 | 0C3E | | |
| System Error | Red | Error 3 | 19 | Other than above | System Error (1) The SZ-V is being affected by an EMC environment. (2) The SZ-V has experienced strong vibration or shock. (3) The power was disconnected during configuration. (4) The SZ-V is broken. | (1) Check the wiring and the surrounding EMC environment. (2) Install the SZ-V so as not to have the vibration and/or shock exceeding the specification. (3) Perform the configuration again. (4) Replace the SZ-V. |

Other states

| Display state | Background Color | Type* | The number of pulses for state information output | Details | Countermeasures |
|---------------------------|------------------|----------|---|---|--|
| (Nothing is displayed) | - | Normal | - | The power is OFF or the voltage is insufficient. | • Ensure that the voltage is within the rated range. Check the wiring. “Wiring” (page 30) |
| | | Broken | | The SZ-V is in “Reducing Power Consumption” (page 58) | Turn power saving mode off. “Display settings” (page 82) |
| | | | | The SZ-V may be broken. | Replace the Display unit. |
| SZ-V Series Start Up | - | Starting | - | This is the start screen displayed after the power is turned on. | In approximately 8 seconds, the screen will transition to normal operation. |
| Waiting for Configuration | Red | Special | - | (1) The SZ-V is not configured. (2) The settings are not approved yet. | (1) Transfer the settings. (2) Approve the settings. “Setting Procedure” (page 73) |

*In regards to the display of the "Special" type, if the SZ-V display is "Monitor view" or "Camera view", the details of the special state is displayed in a frame.

"How to Read the Display" (page 114)

11-4 Troubleshooting the OSSD Operation

| Situation | Details | Countermeasures |
|--|--|--|
| The OSSD goes to the OFF-state when nothing is present in the protection zone. | Light interference may be occurring. | Take countermeasures according to the description in "Light interference" (page 18). Check the status of light interference through the SZ-V Configurator. "View" (page 104) |
| | Mutual interference due to another SZ-V may be occurring. | Take countermeasures according to the description in "Mutual interference" (page 18). |
| | The SZ-V may detect the floor or the surrounding (background) because the SZ-V is installed with some inclination. | Adjust the SZ-V installation angle and position it so that the SZ-V does not detect the floor or the surroundings (background). |
| | The background is close to the boundary of the specified protection zone. | The SZ-V detects the surroundings (background). Move it away from the specified protection zone. "Protection zone" (page 17) If the surroundings are highly reflective backgrounds, take into account the additional safety distance. "Highly reflective backgrounds" (page 19) |
| | The position of the SZ-V or the surroundings (background) has been changed. | Restore the position of the SZ-V or the surroundings (background). Perform the configuration on the protection zone again. |
| | The structure for the reference points is not present or is not located within the specified tolerance. | Check the position of the structure on the reference points and the tolerance. Change the configuration on the reference points, if necessary. "Reference Points Monitoring Function" (page 57) |
| | Laser shutdown function is activated. | Either turn OFF the laser OFF input, or switch to a different bank from laser shutdown bank. "Operation Check Function" (page 57) |
| | The SZ-V has pollution on the window. | Clean the window according to "Cleaning the Window" (page 148). |
| | The SZ-V detects particles in the air, such as dust, spatter or moisture. | Take countermeasures so that the particles in the air do not go into the protection zone. |

11-5 Troubleshooting Related to Connection with the SZ-V Configurator


| Situation | Details | Countermeasure |
|---|--|--|
| Cannot communicate with the SZ-V. (Cannot log-in.) | The power is not supplied to the SZ. | Supply power to the SZ. |
| | For a USB connection | |
| | The USB cable is not connected to the SZ-V, or is disconnected. | Check the USB cable and USB port on the computer. |
| | The USB driver is not installed on the computer. | Double-click the "DPInst" file to execute it. Installation of the USB driver starts. The "DPInst" file is in the folder where the SZ-V Configurator is installed. (C:\Program Files\KEYENCE\SZ-V Configurator\Driver\) |
| | In cases where NPN is selected in PNP/NPN Select, the SZ-V with positive grounding is connected to the PC with negative grounding through the USB cable. | Before connecting the SZ-V and computer with a USB cable, either the SZ-V or the computer should not be grounded. The brown wire need to be grounded in order to start normal operation. |
| | For Ethernet connection (for the SZ-V32N type only) | |
| | The Ethernet cable is not connected to the SZ-V, or is disconnected. | Check the Ethernet cable and the Ethernet port on the computer. |
| | The SZ-V network is not correctly configured. | Check the SZ-V network settings. "Ethernet Function" (Page 122) |
| Cannot transfer the configuration. | Which SZ-V to communicate with is not selected. | Select the SZ-V to communicate with through the SZ-V Configurator. "Selecting an Ethernet connection device" (page 68) |
| | The model specified in the SZ-V Configurator mismatches the actual SZ-V model. | Check the SZ-V model in "Properties" on the Settings tab. If the SZ-V model does not match, create new settings. "New" (page 103) |
| | Configured number of scanner heads is different from the actually connected number of scanner heads. | Check the number of connected scanner heads. |
| | All configurations are not completed. | Check that all settings have been configured |
| | The specified protection zone or warning zone is configured beyond the specification. | Check the configuration of the protection zone, warning zone, and minimum detectable object size. |
| | You do not have the authorization level to transfer settings. | If transferring settings that have not been approved, log in as the responsible personnel. If transferring settings that have been approved, log in as the responsible personnel or maintenance personnel. "Authorization Level and Settings" (page 71) |
| Cannot perform the monitoring on the SZ-V. | The power is not supplied to the SZ-V. | Supply power to the SZ-V. |
| | The settings in the software do not match the settings in the SZ-V. | Match the settings between the SZ-V Configurator and the SZ-V before starting monitoring. Run the settings on the SZ-V Configurator and to monitor the SZ-V operation, transfer the settings to the SZ-V. On the other hand, retrieve the configuration in the SZ-V to monitor the SZ-V operation according to the current configuration in the SZ-V. In this case, all settings in the SZ-V Configurator are deleted. Save the file as required. |
| | The configuration is not completed. | Start monitoring after transferring the configuration to the SZ-V. |

11-6 Troubleshooting Related to Ethernet Communication

For troubleshooting when using UDP, PROFINET, PROFIsafe, EtherNet/IP™ or CIP Safety™ communication, refer to the "SZ-V32N/SZ-V32NC Communications Manual".

12. Inspection and Maintenance

12-1 Precaution During Inspection

| | |
|---|---|
|  | Do not use the machine on which the SZ-V is installed if the SZ-V does not operate according to any of the inspection items as listed below. |
|---|---|

Performance of maintenance and inspections are critical factors that you must take into account in your risk assessment. When you perform the risk assessment on your machine application, you must take performance of maintenance and inspections into account. In addition, it is a responsibility for the responsible personnel to train the machine operators regarding inspection and maintenance of the machine and the SZ-V.

When you mount the SZ-V onto a device, perform the following inspection.

Note that the following inspection items comprise only a bare minimum inspection. KEYENCE Corporation strongly recommends including the necessary checking items into this checklist based on the judgment of the responsible personnel since additional criteria may be necessary depending on both the machine to which the SZ-V is installed and the laws, rules, regulations and standards in the country or region in which the SZ-V is used/installed.

You must keep the inspection result along with the machine log.

12-2 Initial Inspection

When the installation of the SZ-V is completed, the responsible personnel must verify the operation of the SZ-V in accordance with the checklist shown below.

(1) Pre-check for installation conditions

- The SZ-V is installed without loose fixture screws, in accordance with the specification of tightening torque in this manual.
- The machine under SZ-V control can stop running when the OSSD is in the OFF-state. (When using PROFIsafe or CIP Safety™, the machine can stop running when the "Protection Zone State" data is "0".)
- The SZ-V is installed so that the machine operator cannot go into or approach the hazardous area or hazards without passing through the protection zone of the SZ-V.
- The SZ-V is installed so that the machine operator cannot go into or approach the hazardous area or hazards without passing through any of the protection zones of the SZ-V belonging to the bank switching function.
- The interlock reset mechanism is installed so that it cannot be operated if there are any personnel within the hazardous area.
- The device to activate the override is installed so that it cannot be operated if there are any personnel within the hazardous area.
- Safety distance is ensured, which has been calculated according to the laws, regulations, and standards of the country and region in which the SZ-V is installed. "Safety Distances" (page 20)
- The SZ-V is installed at a location free from light interference, for example an incandescent lamp and a halogen lamp. "Tips on installation" (page 18)
- When two or more SZ-V are installed nearby, the countermeasures against mutual interference are taken based on the description of "Tips on installation" (page 18).
- The muting devices fulfill the conditions specified in this manual and the requirements of the laws, rules, regulations and standards in the country or region in which the SZ-V and those devices are used. "Muting function" (page 55)
- The devices used to activate the override fulfill the conditions specified in this manual and the requirements of the laws, rules, regulations and standards in the country or region in which the SZ-V and those devices are used. "Override function" (page 56)
- The reference points monitoring function is enabled for access protection. Additionally, two or more reference points are set on one structure so as to ensure the detection of its position change. "Reference Points Monitoring Function" (page 57)

(2) Pre-check for wiring

- The SZ-V power supply is 24 V DC, fulfilling the conditions for the power supply as specified in this manual. "Power Supply" (page 30)
- For the wiring between the SZ-V and a safety-related part of a machine control system, both OSSD 1 and OSSD 2 is wired to a safety-related part of a machine control system. Similarly, both OSSD 3 and OSSD 4 is also wired to a safety-related part of a machine control system if you assign a function for OSSD 3/4.
- The polarity of the power supply is not reversed.
- If you selected PNP for selection of PNP or NPN, the OSSD is +24 V and not short-circuited.
- If you selected PNP for selection of PNP or NPN, the load is connected between the OSSD and 0 V.

- If you selected NPN for selection of PNP or NPN, the OSSD is 0V and not short-circuited.
- If you selected NPN for selection of PNP or NPN, the load is connected between the OSSD and +24V.
- All of the AUX outputs are not used as a safety output for safety-related part of a control system.
- There is no damage to the cable insulation. Additionally, the protection against the disconnection or short-circuit of cable, which might be caused by crushing or being caught in a machine, is taken into account.
- Any non-safety related functions described in this manual should not be used as a safety related machine control.

(3) Pre-check test while the machine is stopped

You should do the following pre-check test with the test piece in order to make sure the operation of the SZ-V while the machine is stopped. In this case, you should supply the power only to the SZ-V.

The test piece should match the minimum detectable object size you chose.

When using PROFIsafe or CIP Safety™, inspection should be performed by confirming the value of "Protection Zone State", not the OSSD indicator.

"The OSSD indicator lights in red" means that "Protection Zone State" is "0".

"The OSSD indicator lights in green" means that "Protection Zone State" is "1".

- The OSSD indicator lights in red when the test piece is present in the specified protection zone. This test must be performed for the whole specified protection zone. If the bank switching function or bank function is applied to the SZ-V, this test must be performed for the whole and every specified protection zone. If the muting function is applied to a part of the protection zone, this test must be performed during muted condition for the whole specified protection zone, except for muting zone.
- The OSSD indicator lights in red when the SZ-V detects the test piece at the intended detection plane (height) while the test piece vertical to the detection plane moves in the protection zone. This test must be performed for the whole specified protection zone.
- The "EDM error" occurs if the EDM input is in an open state while the test piece is present in the protection zone. This is only applicable if the EDM function is applied.
- The OSSD indicator lights in green when the SZ-V starts normal operation after power on (when "SZ-V Start Up" is changed to "Normal Operation" on the display) and detects no object in the protection zone with "Automatic/Automatic" for the configuration of start/restart mode (When using PROFIsafe or CIP Safety™, the "Protection Zone State" data is "1".).
- The OSSD indicator continues to light in red and the interlock indicator lights in yellow, when the SZ-V starts normal operation after power on (when "SZ-V Start Up" is changed to "Normal Operation" on the display) with either "Manual/Manual" or "Manual/Automatic" for the configuration of start/restart mode. Continuously, the OSSD indicator lights in green and the interlock indicator lights off in the event of reset operation, if the SZ-V detects no object in the protection zone at that time.
- The OSSD indicator lights in red and the interlock indicator lights in yellow when the SZ-V detects the test piece in the protection zone with "Manual/Manual" for the configuration of start/restart mode. Continuously, the OSSD indicator continues to light in red and the interlock indicator flashes in yellow when the test piece is removed from the protection zone.
- The OSSD indicator lights in green after the specified delay time has been passed if the ON-delay function is applied to the SZ-V.
- The SZ-V does not go to the muted condition even if the muting inputs are activated in accordance with the specified sequence and time difference, when the SZ-V detects an object in the protection zone other than muting zone. This is only applicable if the muting function is applied.
- The SZ-V does not go to the muted condition if the muting inputs are activated with different sequence from the specified one. The SZ-V does not also go to the muted condition if the muting inputs are activated exceeding the specified time difference. These are only applicable if the muting function is applied.
- The muted condition is terminated if the specified muting period of time has been passed. This is only applicable if the muting function is applied.
- The override condition is terminated if the specified override period of time has been passed. This is only applicable if the override function is applied.
- The protection zone can be switched according to the signal combination of bank inputs in case of bank switching function.
- "Bank error" occurs if the protection zone is switched according to the unspecified sequence. This is only applicable if the bank sequence monitoring function is applied.
- If there is an unprotected space between the protection zone and the protective structure, test piece is always detected by the SZ-V when it goes through that space. This is only applicable if the SZ-V is used

for the access protection (the application where the angle of the approach exceeds $\pm 30^\circ$ to the detection plane).

- The OSSD indicator lights in red when the protective structure moves exceeding the tolerance of reference point. This is only applicable if the SZ-V is used for the access protection (the application where the angle of the approach exceeds $\pm 30^\circ$ to the detection plane).

(4) Pre-check test while the machine operates

The purpose of this pre-check test is to make sure that the machine (hazards) stops its operation. This test must be performed after you ensure that there is nobody in the hazardous zone.

- Machine (hazard) stops its operation if the test piece is present in the specified protection zone. If the bank switching function or bank function is applied to the SZ-V, this test must be performed for the specified protection zone for each bank.
- The machine (hazard) still stops its operation as long as the test piece is present in the specified protection zone. If the bank switching function is applied to the SZ-V, this test must be performed for the specified protection zone for each bank.
- The machine (hazard) stops its operation when the power for the SZ-V is disconnected.
- The machine (hazard) stops its operation when the interlock indicator lights in yellow.
- The response time for overall safety-related control system (from the intrusion of test piece in the protection zone to the machine stop) is less than overall response time (T) used for the calculation of safety distance.

12-3 Daily Inspection

KEYENCE Corporation recommends that you perform the daily inspection based on the following items. The frequency of maintenance and inspections are critical factors that you must take into account in your risk assessment.

(1) Pre-check for installation conditions

- The SZ-V is installed so that the machine operator cannot go into or approach the hazardous area or hazards without passing through the protection zone of the SZ-V.
- The SZ-V is installed so that the machine operator cannot go into or approach the hazardous area or hazards without passing through any of the protection zone of the SZ-V belonging to the bank switching function.
- The SZ-V is installed at a location free from light interference, for example an incandescent lamp and a halogen lamp.
- There is no damage to the cable insulation. Additionally, the protection against the disconnection or short-circuit of cable, which might be caused by crushing or being caught in a machine, is taken into account.

(2) Pre-check test while the machine is stopped

You should do the following pre-check test with the test piece in order to make sure the operation of the SZ-V while the machine is stopped. In this case, you should supply the power only to the SZ-V. The test piece should match the minimum detectable object size you chose.

When using PROFIsafe or CIP Safety™, inspection should be performed by confirming the value of "Protection Zone State", not the OSSD indicator.

"The OSSD indicator lights in red" means that "Protection Zone State" is "0".

"The OSSD indicator lights in green" means that "Protection Zone State" is "1".

- The OSSD indicator lights in red when the test piece is present in the specified protection zone. This test must be performed for the whole specified protection zone. If the bank switching function or bank function is applied to the SZ-V, this test must be performed for the whole and every specified protection zone. If the muting function is applied to a part of the protection zone, this test must be performed during muted condition for the whole specified protection zone, except for muting zone.
- The OSSD indicator lights in red when the SZ-V detects the test piece at the intended detection plane (height) while the test piece vertical to the detection plane moves in the protection zone. This test must be performed for the whole specified protection zone.
- The OSSD indicator lights in green when the SZ-V starts normal operation after power on (when "SZ-V Start Up" is changed to "Normal Operation" on the display) and detects no object in the protection zone with "Automatic/Automatic" for the configuration of start/restart mode.
- The OSSD indicator continues to light in red and the interlock indicator lights in yellow, when the SZ-V starts normal operation after power on (when "SZ-V Start Up" is changed to "Normal Operation" on the display) with either "Manual/Manual" or "Manual/Automatic" for the configuration of start/restart mode. Continuously, the OSSD indicator lights in green and the interlock indicator lights off in the

event of reset operation, if the SZ-V detects no object in the protection zone at that time.

- The OSSD indicator lights in red and the interlock indicator lights in yellow when the SZ-V detects the test piece in the protection zone with "Manual/Manual" for the configuration of start/restart mode. Continuously, the OSSD indicator continues to light in red and the interlock indicator flashes in yellow when the test piece is removed from the protection zone.
- The OSSD indicator lights in green after the specified delay time has been passed if the ON-delay function is applied to the SZ-V.
- The SZ-V does not go to the muted condition even if the muting inputs are activated in accordance with the specified sequence and time difference, when the SZ-V detects an object in the protection zone other than muting zone. This is only applicable if the muting function is applied.
- The SZ-V does not go to the muted condition if the muting inputs are activated with different sequence from the specified one. The SZ-V does not also go to the muted condition if the muting inputs are activated exceeding the specified time difference. These are only applicable if the muting function is applied.
- The protection zone can be switched according to the signal combination of bank inputs in case of bank switching function.
- If there is an unprotected space between the protection zone and the protective structure, test piece is always detected by the SZ-V when it goes through that space. This is only applicable if the SZ-V is used for the access protection (the application where the angle of the approach exceeds $\pm 30^\circ$ to the detection plane).
- The OSSD indicator lights in red when the protective structure moves exceeding the tolerance of reference point. This is only applicable if the SZ-V is used for the access protection (the application where the angle of the approach exceeds $\pm 30^\circ$ to the detection plane).

(3) Pre-check test while the machine operates

The purpose of this pre-check test is to make sure that the machine (hazards) stops its operation. This test must be performed after you ensure that there is nobody in the hazardous zone.

- Machine (hazard) stops its operation if the test piece is present in the specified protection zone. If the bank switching function or bank function is applied to the SZ-V, this test must be performed for the specified protection zone for each bank.
- The machine (hazard) still stops its operation as long as the test piece is present in the specified protection zone. If the bank switching function is applied to the SZ-V, this test must be performed for the specified protection zone for each bank.
- The machine (hazard) stops its operation when the power for the SZ-V is disconnected.
- The machine (hazard) stops its operation when the interlock indicator lights in yellow.
- The response time for overall safety-related control system (from the intrusion of test piece in the protection zone to the machine stop) is less than overall response time (T) used for the calculation of safety distance.

12-4 Regular (Periodic) Inspection

The responsible personnel must perform a regular inspection at least once a year.

Additionally, you should perform the regular inspection if you make any change to the configuration on the SZ-V and on the machine on which the SZ-V is installed.


Regular (periodical) inspection items include the following, in addition to "Daily Inspection" (page 147).

(1) Additional inspection items

- The SZ-V is installed without losing the screws for fixture, in accordance with the specification of tightening torque in this manual.
- The screw on the connector cable is fastened tightly to the SZ-V.
- The SZ-V does not have any change on its position. (Safety distance is ensured. The detection plane has also not changed.)
- All wires are correctly connected to external device, and the connection is securely performed.
- There is sufficient life left in terms of how many times the safety relay has been opened and closed.
- There is no damage to the SZ-V that may impair the performance of its protective IP65 structure.
- The surface of the window is not dirty or damaged.
- "EDM error" occurs if the EDM input is in an open state while the test piece is present in the protection zone. This is only applicable if the EDM function is applied.
- The muted condition is terminated if the specified muting period of time has been passed. This is only applicable if the muting function is applied.
- The override condition is terminated if the specified override period of time has been passed. This is only applicable if the override function is applied.
- "Bank sequence error" occurs if the protection zone is switched according to the unspecified sequence. This is only applicable if the bank sequence monitoring function is applied.

12-5 Cleaning the Window

The SZ-V window is a critical part of the detection system. Clean the window whenever there is dust or pollution on it. Wipe off the pollution in the area indicated by the diagonal lines with a soft cloth moistened with a mild detergent that will not corrode polycarbonate.

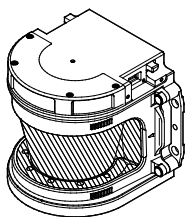

| | |
|----------------------|--|
| <p>NOTICE</p> | <ul style="list-style-type: none"> • OSSD might go to the OFF-state if the window has a scratch, because the SZ-V falsely detects that scratch as the object approaching into the protection zone. Be sure to not scratch the window during cleaning. • Be careful of static electricity while cleaning due to the collection of dust. You should use a cloth that does not easily generate static electricity when rubbed on polycarbonate. |
|----------------------|--|

| | |
|-------------------------|---|
| <p>Reference</p> | <p>Detection capability might decrease due to the attenuation of light if the window has pollution. The OSSD goes to the OFF-state before the pollution on the window leads to loss of detection capability because the SZ-V has a function to monitor the pollution on the window. Furthermore, the OSSD might go to the OFF-state if the window has pollution because the SZ-V detects that pollution as an object approaching into the protection zone. Be sure to keep the window clean to avoid unnecessary OFF-state of OSSD.</p> |
|-------------------------|---|


12-6 Replacing the Window

The SZ-V window is a critical part of the detection system. If the window becomes extremely dirty or is scratched, replace it.


Replacement procedure

1. Prepare SZ-V and replacement window (SZ-VHW).
2. Turn OFF the SZ-V and all devices that are connected to the SZ-V.
3. Remove the stickers (x4) before removing the screws that secure the window.


Discard the removed stickers.

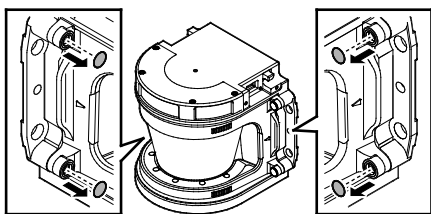

4. Remove the four screws which secure the window to the main unit.

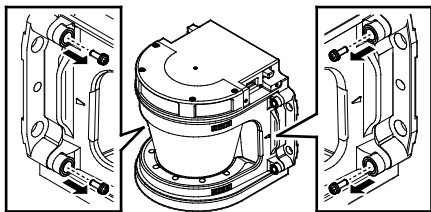


5. Hold onto both sides of the window as shown below, and gently pull it forward. Do not pull it out completely, it should stop shortly after separating from the back of the unit.

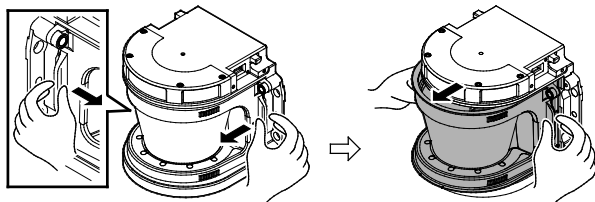


6. Hold onto both sides of the window as shown below. Gently pull the right and the left sides of the window away from the center of the unit as shown below. While doing this, carefully pull the window forward completely.


| | |
|----------------------|--|
| <p>NOTICE</p> | <p>If the sides are not pulled out enough, the window may touch the internal structure and damage it. Please make sure to pull the sides adequately while removing the window.</p> |
|----------------------|--|

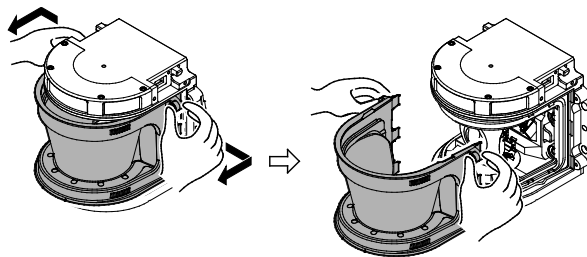


7. Remove the gasket. It is easier if the main unit is positioned as shown in the figure below.

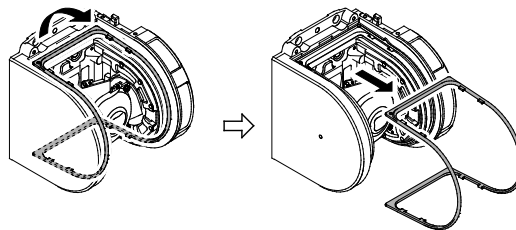


8. Insert the new gasket. It is easier if the main unit is positioned as shown in the figure below.

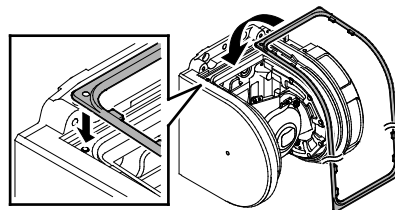

9. Check the direction of the internal structure. If the lens is facing forward, rotate the internal structure backward. Be sure that the lens is not touched while rotating the internal structure.

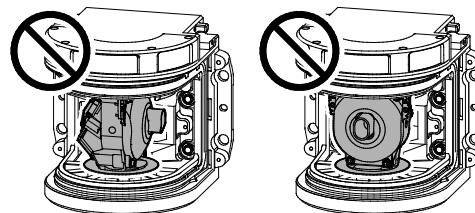


How to rotate the internal structure.

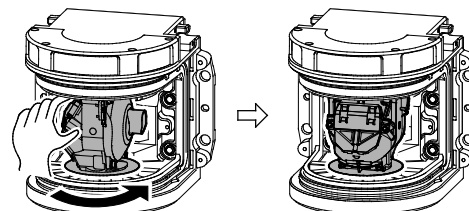

| | |
|----------------------|---------------------------------------|
| <p>NOTICE</p> | <p>Do not touch the lens portion.</p> |
|----------------------|---------------------------------------|

10. Insert the new window.

Insert the window until it touches the very back of the unit.

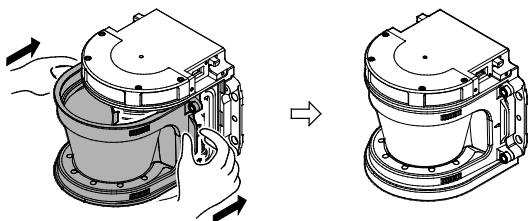

11. Attach the four screws to secure the window.

Recommended tightening torque : 0.6N·m.

12. Turn ON the SZ-V power and execute the window calibration.

For details on the window calibration procedure, see the "Window calibration" (page 107).

13. Reinstall the SZ-V in its designated area. After reinstalling it, perform an initial inspection.

| | |
|----------------------|---|
| <p>DANGER</p> | <ul style="list-style-type: none"> • No person other than the responsible personnel or maintenance personnel should be allowed to replace the SZ-V window. • Always turn off the power to the SZ-V when replacing the window. • After replacing the window, always perform window calibration. If you do not perform the window calibration, the SZ-V will not work properly. • Perform window calibration in an environment with ambient temperature of 5 to 35 °C and with no dust or dirt on the window. |
| <p>NOTICE</p> | <p>Do not touch the lens part inside the window. If you touch the lens part inside of the housing, you may break the SZ-V.</p> |

Important

- Replace the window in an environment with no dust or dirt, and replace it as quickly as possible.
- Make sure that the replacement window is not dirty or scratched, and has never been used. Also be sure not to dirty or scratch the new window when you install it.
- When replacing the window, do not leave the SZ-V with the window removed.
- Make sure that dust or dirt does not enter the inside of the window.
- If you do not follow the procedure, you may lose the IP65 rating.


12-7 Replacing the Display unit

By using the system memory, the same settings can be maintained, even if replacing the Display unit. It is not necessary to transfer the settings from the SZ-V Configurator.

Replacement procedure


1. Prepare system memory (SZ-VSM) for the SZ-V.
2. Turn off the SZ-V and all devices that are connected to the SZ-V.
3. Remove the system memory that is currently connected to the Display unit.

M2.6 cross slot screws

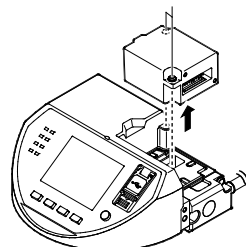

4. Insert system memory into the new Display unit.

M2.6 cross slot screws
Tightening torque 0.36 N·m

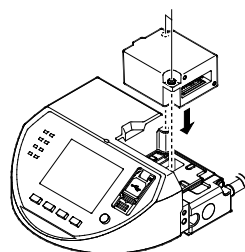

Always turn off the power to the SZ-V when replacing the Display unit.

Appendices

A-1. Functions That Cannot Be Set Together

SZ-V04 type

When using the Interlock function (page 47)

- **“Bank Switching Function” (page 49)**
 - When used in combination with Multi-OSSD Function, the number of banks that can be used is limited to two or less.
 - In that case, even if the “Bank Switching Method” is changed to binary input, the maximum number of banks cannot be set to three or more.
- **“Independent bank switching” (page 54)**
 - Cannot be used.
- **“Operation Check Function” (page 57)**
 - Laser off input cannot be used.

When using the Bank Switching Function (page 49)

- **“Muting function” (page 55)**
 - Cannot be used.
- **If using three or more banks**
- **“Interlock function” (page 49)**
 - Cannot be used, when used in combination with Multi-OSSD Function.
- **“Operation Check Function” (page 57)**
 - Laser off input cannot be used.
- **When using the bank sequence monitoring function**
- **“Independent bank switching” (page 54)**
 - Cannot be used.

When using the Multi-OSSD Function (page 54)

- **“Muting function” (page 55)**
 - Cannot be used.

When using Independent bank switching (page 54)

- **“Interlock function” (page 49)**
 - Cannot be used.
- **“Bank Switching Function” (page 49)**
 - The number of banks that can be used is limited to two or less.
 - The bank switching method changes to the independent method. (page 54)
 - Cannot use the “Bank Sequence Monitoring Function” (page 53)
- **“Operation Check Function” (page 57)**
 - Cannot be used.

When using the Muting function (page 55)

- **“Bank Switching Function” (page 49)**
 - Cannot be used.
- **“Multi-OSSD Function” (page 54)**
 - Cannot be used.
- **“Independent bank switching” (page 54)**
 - Cannot be used.

When using Operation Check Function (page 57)

- **“Independent bank switching” (page 54)**
 - Cannot be used.
- **If using the laser off input**
- **“Interlock function” (page 49)**
 - Cannot be used.
- **“Bank Switching Function” (page 49)**
 - The number of banks that can be used is limited to two or less.
 - Even if the “Bank Switching Method” is changed to binary input, the maximum number of banks cannot be set to three or more.

SZ-V32 type

When using the AUX Outputs (page 46)

- **When using three or more AUX outputs**
- **“Bank Switching Function” (page 49)**
 - The number of banks that can be used is limited to 16 or less.
 - Cannot set “Bank switching methods” (page 49) to switching through encoder input.

When using the Interlock function (page 47)

- **“Operation Check Function” (page 57)**
 - Laser off input cannot be used.

When using the Bank Switching Function (page 49)

- **If using 11 or more banks**
- **“Bank switching methods” (page 49)**
 - Cannot set the bank switching method to single input.
- **If using 17 or more banks**
- **“AUX Output” (page 46)**
 - The number of AUX outputs that can be used is limited to two or less.
- **When “Bank switching methods” (page 49) is set to switching through encoder input**
- **“AUX Output” (page 46)**
 - The number of AUX outputs that can be used is limited to two or less.

When using the Operation Check Function (page 57)

- **If using the laser off input**
- **“Interlock function” (page 49)**
 - Cannot be used.

SZ-V32N type (When PROFI-safe is not used)

- **Multi-OSSD function (page 54)**
 - Cannot be used.
- **Bank function (page 53)**
 - Cannot be used.

When using AUX Outputs (page 46)

- **When using three or more AUX outputs**
- **“Bank Switching Function” (page 49)**
 - The number of banks that can be used is limited to 16 or less.
 - Cannot set “Bank switching methods” (page 49) to switching through encoder input.

When using the Interlock function (page 47)

- **“Operation Check Function” (page 57)**
 - Laser off input cannot be used.

When using the Bank Switching Function (page 49)

- **If using 11 or more banks**
- **“Bank switching methods” (page 49)**
 - Cannot set the bank switching method to single input.
- **If using 17 or more banks**
- **“AUX Output” (page 46)**
 - The number of AUX outputs that can be used is limited to two or less.
- **When “Bank switching methods” (page 49) is set to switching through encoder input**
- **“AUX Output” (page 46)**
 - The number of AUX outputs that can be used is limited to two or less.

When using the Muting function (page 55)

- **“Bank Switching Function” (page 49)**
 - Cannot be used.

When using the Operation Check Function (page 57)

- **If using laser off input**
- **“Interlock function” (page 49)**
 - Cannot be used.

SZ-V32N type (When PROFI-safe is used)

- **All of the input and output wires cannot be used.**
- **“EDM Function” (page 48)**
 - Cannot be used.
- **“Bank Switching Function” (page 49)**
 - Cannot be used.
- **“Muting function” (page 55)**
 - Cannot be used.

SZ-V32NC type

- **All of the input and output wires cannot be used.**
- **“EDM Function” (page 48)**
 - Cannot be used.
- **“Bank Switching Function” (page 49)**
 - Cannot be used.
- **“Muting function” (page 55)**
 - Cannot be used.

A-2. Open License

SYS/BIOS License

Copyright (c) 2012-2015, Texas Instruments Incorporated
All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- * Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
 - * Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
 - * Neither the name of Texas Instruments Incorporated nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.
- THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

NDK License

Copyright (c) 2012-2015, Texas Instruments Incorporated
All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- * Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
 - * Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
 - * Neither the name of Texas Instruments Incorporated nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.
- THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

A-3. Trademarks

- Windows 2000/XP/7/8/8.1/10 are the registered trademarks of Microsoft Corporation, U.S.A.
 - Adobe, the Adobe logo, and Reader are the trademarks or registered trademarks of Adobe System Incorporated in the United States and other countries.
 - EtherNet/IP™ is a trademark of ODVA, inc.
 - Other company or product names mentioned in this manual are trademarks or registered trademarks of their respective companies.
- The following marks are Not used in this manual: TM, ®

Warranties and Disclaimers

- (1) KEYENCE warrants the Products to be free of defects in materials and workmanship for a period of one (1) year from the date of shipment. If any models or samples were shown to Buyer, such models or samples were used merely to illustrate the general type and quality of the Products and not to represent that the Products would necessarily conform to said models or samples. Any Products found to be defective must be shipped to KEYENCE with all shipping costs paid by Buyer or offered to KEYENCE for inspection and examination. Upon examination by KEYENCE, KEYENCE, at its sole option, will refund the purchase price of, or repair or replace at no charge any Products found to be defective. This warranty does not apply to any defects resulting from any action of Buyer, including but not limited to improper installation, improper interfacing, improper repair, unauthorized modification, misapplication and mishandling, such as exposure to excessive current, heat, coldness, moisture, vibration or outdoors air. Components which wear are not warranted.
- (2) KEYENCE is pleased to offer suggestions on the use of its various Products. They are only suggestions, and it is Buyer's responsibility to ascertain the fitness of the Products for Buyer's intended use. KEYENCE will not be responsible for any damages that may result from the use of the Products.
- (3) The Products and any samples ("Products/Samples") supplied to Buyer are not to be used internally in humans, for human transportation, as safety devices or fail-safe systems, unless their written specifications state otherwise. Should any Products/Samples be used in such a manner or misused in any way, KEYENCE assumes no responsibility, and additionally Buyer will indemnify KEYENCE and hold KEYENCE harmless from any liability or damage whatsoever arising out of any misuse of the Products/Samples.
- (4) OTHER THAN AS STATED HEREIN, THE PRODUCTS/SAMPLES ARE PROVIDED WITH NO OTHER WARRANTIES WHATSOEVER. ALL EXPRESS, IMPLIED, AND STATUTORY WARRANTIES, INCLUDING, WITHOUT LIMITATION, THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, AND NON-INFRINGEMENT OF PROPRIETARY RIGHTS, ARE EXPRESSLY DISCLAIMED. IN NO EVENT SHALL KEYENCE AND ITS AFFILIATED ENTITIES BE LIABLE TO ANY PERSON OR ENTITY FOR ANY DIRECT, INDIRECT, INCIDENTAL, PUNITIVE, SPECIAL OR CONSEQUENTIAL DAMAGES (INCLUDING, WITHOUT LIMITATION, ANY DAMAGES RESULTING FROM LOSS OF USE, BUSINESS INTERRUPTION, LOSS OF INFORMATION, LOSS OR INACCURACY OF DATA, LOSS OF PROFITS, LOSS OF SAVINGS, THE COST OF PROCUREMENT OF SUBSTITUTED GOODS, SERVICES OR TECHNOLOGIES, OR FOR ANY MATTER ARISING OUT OF OR IN CONNECTION WITH THE USE OR INABILITY TO USE THE PRODUCTS, EVEN IF KEYENCE OR ONE OF ITS AFFILIATED ENTITIES WAS ADVISED OF A POSSIBLE THIRD PARTY'S CLAIM FOR DAMAGES OR ANY OTHER CLAIM AGAINST BUYER. In some jurisdictions, some of the foregoing warranty disclaimers or damage limitations may not apply.

BUYER'S TRANSFER OBLIGATIONS:

If the Products/Samples purchased by Buyer are to be resold or delivered to a third party, Buyer must provide such third party with a copy of this document, all specifications, manuals, catalogs, leaflets and written information provided to Buyer pertaining to the Products/Samples.

E 1101-3

Revision history

| Revision history | Edition number | Revision details |
|------------------|------------------|--|
| May 2016 | Official release | |
| July 2016 | 1st (a) edition | Language added, contents revised |
| August 2016 | 1st (b) edition | Language added. |
| May 2017 | 2nd edition | Supported network added, misdescription revised. |
| November 2017 | 3rd edition | Correction |
| January 2021 | 4th edition | Functions and model added, contents revised. |

Specifications are subject to change without notice.

KEYENCE CORPORATION

1-3-14, Higashi-Nakajima, Higashi-Yodogawa-ku, Osaka, 533-8555, Japan PHONE: +81-6-6379-2211

www.keyence.com/glb

AUSTRIA

Phone: +43 (0)2236 378266 0

BELGIUM

Phone: +32 (0)15 281 222

BRAZIL

Phone: +55-11-3045-4011

CANADA

Phone: +1-905-366-7655

CHINA

Phone: +86-21-3357-1001

CZECH REPUBLIC

Phone: +420 220 184 700

FRANCE

Phone: +33 1 56 37 78 00

GERMANY

Phone: +49-6102-3689-0

HONG KONG

Phone: +852-3104-1010

HUNGARY

Phone: +36 1 802 7360

INDIA

Phone: +91-44-4963-0900

INDONESIA

Phone: +62-21-2966-0120

ITALY

Phone: +39-02-6688220

KOREA

Phone: +82-31-789-4300

MALAYSIA

Phone: +60-3-7883-2211

MEXICO

Phone: +52-55-8850-0100

NETHERLANDS

Phone: +31 (0)40 206 6100

PHILIPPINES

Phone: +63-(0)2-8981-5000

POLAND

Phone: +48 71 368 61 60

ROMANIA

Phone: +40 (0)269 232 808

SINGAPORE

Phone: +65-6392-1011

SLOVAKIA

Phone: +421 (0)2 5939 6461

SLOVENIA

Phone: +386 (0)1 4701 666

SWITZERLAND

Phone: +41 (0)43 455 77 30

TAIWAN

Phone: +886-2-2721-8080

THAILAND

Phone: +66-2-369-2777

UK & IRELAND

Phone: +44 (0)1908-696-900

USA

Phone: +1-201-930-0100

VIETNAM

Phone: +84-24-3772-5555

